PCM-9381

Pentium[®] M 3.5" SBC with PC/104+/VGA/LCD/LVDS Ethernet/USB2.0 and SSD

User's Manual

Copyright

This document is copyrighted, © 2003. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, nor for any infringements upon the rights of third parties that may result from such use.

Acknowledgements

Award is a trademark of Award Software International, Inc.

VIA is a trademark of VIA Technologies, Inc.

IBM, PC/AT, PS/2 and VGA are trademarks of International Business Machines Corporation.

Intel, Pentium, Celeron, and MMX are registered trademarks of Intel Corporation.

Microsoft Windows[®] is a registered trademark of Microsoft Corp.

RTL is a trademark of Realtek Semi-Conductor Co., Ltd.

ESS is a trademark of ESS Technology, Inc.

UMC is a trademark of United Microelectronics Corporation.

SMI is a trademark of Silicon Motion, Inc.

Creative is a trademark of Creative Technology LTD.

All other product names or trademarks are properties of their respective owners.

For more information on this and other Advantech products, please visit our websites at: http://www.advantech.com

http://www.advantech.com/epc

For technical support and service, please visit our support website at: http://support.advantech.com

This manual is for the PCM-9381.

Part No. 2006938110 Printed in Taiwan 1st Edition March, 2005

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

p/n:9689000002

p/n: 1703100152

p/n: 1701440351

- 1 PCM-9381 SBC
- 1 Startup manual
- 1 Utility CD
 1 mini jumper pack
 1 Audio cable
 1 IDE 44 pin cable
- 1 USB 2 port Cable p/n: 1703100121
 1 Parallel port cable p/n: 1700260250
- 1 Keyboard/Mouse cable p/n: 1700060202
- 1 embedded COM port cable p/n: 1701140201
- 1 ATX power cable 20P-12P cable p/n: 1700000265

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

Model No. List Description

PCM-9381F-00A1	Socket 478 for Pentium M / Celeron M CPU /
Ethernet/VGA/LVDS/Au	dio
PCM-9381F-M0A1	Celeron M 600 (512K) /LAN/VGA/LVDS/
	Audio

PCM-9381F-S1A1 Pentium M 1.1G/LAN/VGA/LVDS/Audio

Additional Information and Assistance

1. Visit the Advantech web site at **www.advantech.com** where you can find the latest information about the product.

2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance.

Please have the following information ready before you call:

- •Product name and serial number
- •Description of your peripheral attachments
- •Description of your software (operating system, version, application software, etc.)
- •A complete description of the problem
- •The exact wording of any error messages

FCC

This device complies with the requirements in part 15 of the FCC rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual. may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense. The user is advised that any equipment changes or modifications not expressly approved by the party responsible for compliance would void the compliance to FCC regulations and therefore. the user's authority to operate the equipment.



There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions

PCM-9381 User's Manual

Contents

Chapter	1	Introduction	2
-	1.1	Introduction	2
	1.2	Features	2
	1.3	Specifications	3
		1.3.1 Standard 3.5" Biscuit SBC Functions	3
		1.3.2 VGA/LVDS Interface	4
		1.3.3 Ethernet Interface	4
		1.3.4 Audio Function	4
		1.3.5 Mechanical and Environmental	4
	1.4	Board layout: dimensions	6
		Figure 1.1:Board layout: Dimensions(Component Side	e)6
		Figure 1.2:Board layout: Dimensions(Solder Side)	7
Chapter	2	Installation	10
•	2.1	Jumpers	10
		2.1.1 Jumper Location	.10
		Table 2.1:Jumpers	. 10
		2.1.2 Jumper Settings	.11
		Table 2.2: Audio Power Selector(J1)	.11
		Table 2.3:COM2 Setting	11
		Table 2.4:LCD Power Setting (J6)	11
		Table 2.5:AT/ATX Power Setting (J8)	11
		Table 2.6:PCI VIO (JP1)	.12
		Table 2.7:CMOS clear (S2)	12
	2.2	Connectors	13
		Table 2.8:Connectors	13
	2.3	Locating Connectors	14
		Figure 2.1: Jumpers and Connectors (component side).	14
		Figure 2.2:Connectors (solder side)	15
	2.4	Setting Jumpers	16
	2.5	Installing SO-DIMM	17
	2.6	IDE, CDROM hard drive connector (CN6)	17
		2.6.1Connecting the hard drive18	
	2.7	Solid State Disk	18
		2.7.1CompactFlash (CN21)18	
	2.8	Parallel port connector (CN13)	18
	2.9	Keyboard and PS/2 mouse connector (CN14)	19
	2.10	Power & HDD LED Connector (CN10)	19
		2.10.1 Power & HDD LED Connector(CN10)	. 19
		2.10.2 Power Reset button (S2)	19
	2.11	Power connectors (CN3)	19

		2.11.1 Main power connector, +5 V, +12 V (CN3)	19
		2.11.2 Fan power supply connector (CN15)	19
	2.12	Audio interfaces (CN2)	20
		2.12.1 Audio connector (CN2)	
	2.13	COM port connector (CN8,CN19)	20
		2.13.1 COM2 RS-232/422/485 setting (J2)	
		Table 2.9: J2: COM2 Setting	
	2.14	VGA/LCD/LVDS interface connections	20
		2.14.1 CRT display connector (CN18)	
		2.14.2 LVDS LCD panel connector (CN1)	
	2.15	Ethernet configuration	
		2.15.1 100Base-T/1000Base-T connector (CN12)	
		2.15.2 Network boot(Depends on Ethernet Controller)	21
	2.16	Watchdog timer configuration	
	2.17	USB connectors (CN5,CN9)	
	2.18	GPIO (General Purpose Input Output) (CN7)	22
Chanter	3	Chinset Software Installation Utility	24
Chapter	31	Before you begin	24
	3.1	Introduction	
	2.2	Installing the CSI Utility	
~	5.5		
Chapter	4	Award BIOS Setup	30
	4.1	Introduction	30
		4.1.1 CMOS RAM Auto-backup and Restore	
	4.2	Entering Setup	
		Figure 4.1:Award BIOS Setup initial screen	
	4.3	Standard CMOS Setup	
		Figure 4.2:Standard CMOS features screen	
	4.4	Advanced BIOS Features	
		Figure 4.3: Advanced BIOS features screen	
		4.4.1 Virus Warning	33
		4.4.2 L1 & L2 Cache	
		4.4.3 Quick Power On Self Test	
		4.4.4 First/Second/Third/Other Boot Device	
		4.4.5 Swap Floppy Drive	
		4.4.6 Boot UP Floppy Seek	
		4.4.7 Boot Up NumLock Status	
		4.4.8 Gate A20 Option	
		4.4.9 Typematic Rate Setting	
		4.4.10 TypeIllatic Kate (Cliats/Sec)	
		4.4.12 Security Option	
		4 4 13 APIC Mode	
		4.4.14 MPS Version Control For OS	

	4.5	Integra	ated Peripherals	35
		4.5.1	IDE Master/Slave PIO/UDMA Mode,	
		4.5.2	On-Chip Secondary PCI IDE	
			Figure 4.4:Integrated peripherals	
		4.5.3	USB Controller	
		4.5.4	USB Keyboard/Mouse Support	
		4.5.5	AC97 Audio	
		4.5.6	Init Display First	
		4.5.7	Onboard LAN Control	
		4.5.8	IDE HDD Block Mode	
		4.5.9	Onboard FDC Controller	
		4.5.10	Onboard Serial Port	
		4.5.11	UART Mode Select	
		4.5.12	RxD, TxD Active	
		4.5.13	IR Transmission Delay	
		4.5.14	UR2 Duplex Mode	
		4.5.15	Onboard Parallel Port	
		4.5.16	Parallel Port Mode	
		4.5.17	EPP Mode Select	
		4.5.18	ECP Mode Use DMA	
	4.6	Power	Management Setup	38
			Figure 4.5:Power management setup screen	
		4.6.1	Power-Supply Type	
		4.6.2	ACPI function	
		4.6.3	Power Management	
		4.6.4	Video Off In Suspend	39
		4.6.5	Modem Use IRQ	39
		4.6.6	HDD Power Down	39
		4.6.7	Soft-Off by PWR-BTTN	39
		4.6.8	CPU THRM-Throttling	39
		4.6.9	PowerOn By LAN	39
		4.6.10	PowerOn By Modem	39
		4.6.11	PowerOn By Alarm	39
		4.6.12	Primary IDE 0 (1) and Secondary IDE 0 (1)	
		4.6.13	FDD, COM, LPT PORT	
		4.6.14	PCI PIRQ [A-D]#	
	4.7	PnP/P	CI Configurations	40
		4.7.1	PnP OS Installed	
			Figure 4.6:PnP/PCI configurations screen	
		4.7.2	Reset Configuration Data	41
		4.7.3	Resources controlled by:	
		4.7.4	PCI/VGA Palette Snoop	
	4.8	Passw	ord Setting	41
	4.9	Save &	& Exit Setup	42
4	4.10	Exit W	Vithout Saving	42
			5	

Chapter	5	PCI SVGA/LCD Setup	.44
1	5.1	Introduction	. 44
		5.1.1 CMOS setting for panel type	44
		5.1.2 Display type	44
		5.1.3 Dual Independent Display	44
	5.2	Connections to Two Standard LCDs	. 46
		5.2.1 LG LM 150x06 (1024x768 LVDS LCD)	46
		Table 5.1:Connections to LCD/Flat Panel (CN1)	46
		5.2.2 AU M170EG01 (1280x1024 TFT LCD @ 48bit)	47
	5.0	Table 5.2:Connections to AU M170EG01 (CN1)	47
	5.3	Installation of the SVGA Driver	. 48
	5 1	5.3.1 Installation of Windows 98/2000	48
	5.4	Further Information	. 51
Chapter	6	Audio Setup	.54
	6.1	Introduction	. 54
	6.2	Driver installation	. 54
		6.2.1 Before you begin	54
		6.2.2 Windows 98 drivers	55
Chapter	7	Ethernet Interface	.58
•	7.1	Introduction	. 58
	7.2	Installation of Ethernet driver	. 58
		7.2.1 Installation for Windows 98	58
		7.2.2 Installation for Windows 2000	62
	7.3	Further information	. 67
Annendiy	ĸА	Programming GPIO & Waterdog Timer	.70
ppenui	A 1	Supported GPIO Register	70
	11.1	A 1 1 GPIO Registers	. 70
		A.1.2 GPIO Example program-1	71
	A.2	Watchdog programming	. 73
Appendix	ĸВ	Pin Assignments	.76
PP	B 1	CPU Fan Power Connector (CN15)	76
	D.1	Table B 1/IR connector (CN15)	. 76
	B 2	Audio Connector (CN2)	
		Table B.2:Audio connector (CN2)	76
	B.3	Main Power Connector (CN3)	
		Table B.3:Main Power Connector (CN3)	77
	B.4	Keyboard and PS/2 Mouse Connector (CN14)	. 77
		Table B.4:Keyboard and mouse connector (CN14)	77
	B.5	IDE Hard Drive Connector (CN6)	. 78
		Table B.5: IDE HDD connector (CN6)	78
	B.6	Parallel Port Connector (CN13)	79
		Table B.6:Parallel Port Connector (CN13)	79

PCM-9381 User's Manual

	Power & HDD LED Connector (CN10)	80
	Table B.7:Power & HDD LED Connector (CN10)	80
B.8	USB Connector (CN5)	80
	Table B.8:USB Connector (CN5)	80
B.9	LCD Inverter Backlight Connector (CN17)	81
	Table B.9:LCD Inverter Backlight Conn (CN17)	81
B.10	LVDS Connector (CN1)	82
	Table B.10:LVDS Connector (CN1)	82
B.11	COM2 RS232/422/485 series port (CN8)	83
	Table B.11:COM2 RS-232/422/485 series port	83
B.12	CompactFlash Card Connector (CN21)	83
	Table B.12:CompactFlash Card Connector (CN21)	83
B.13	IR connetor (CN11)	84
	Table B.13:IR Connector (CN11)	84
B.14	MIO interface (CN4)	85
	Table B.14:MIO connectors	85
Appendix C	System Assignments	90
C.1	System I/O Ports	90
0.1		
0.1	Table C.1:System I/O ports	90
C.2	Table C.1:System I/O ports 1st MB memory map	90 91
C.2	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map	90 91 91
C.2 C.3	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments	90 91 91 91
C.2 C.3	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments	90 91 91 91 91
C.2 C.3 C.4	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments	90 91 91 91 91 91 91 92
C.2 C.3 C.4	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments	90 91 91 91 91 91 91 92 92
C.2 C.3 C.4 Appendix D	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments	90 91 91 91 91 92 92 92
C.2 C.3 C.4 Appendix D D.1	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction	90 91 91 91 91 92 92 94 94
C.2 C.3 C.4 Appendix D D.1 Appendix E	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting	90 91 91 91 91 92 92 92 94 94 94
C.2 C.3 C.4 Appendix D D.1 Appendix E	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting	
C.2 C.3 C.4 Appendix D D.1 Appendix E E.1	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting Introduction Table E.1:Power Connector	
C.2 C.3 C.4 Appendix D D.1 Appendix E E.1 Appendix F	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting Introduction Table E.1:Power Connector	
C.2 C.3 C.4 Appendix D D.1 Appendix E E.1 Appendix F	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting Introduction Table E.1:Power Connector Mechanical Drawings	
C.2 C.3 C.4 Appendix D D.1 Appendix E E.1 Appendix F F.1	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting Introduction Table E.1:Power Connector Mechanical Drawings Figure F 1:PCM-9381 Mech Drawing(Component)	
C.2 C.3 C.4 Appendix D D.1 Appendix E E.1 Appendix F F.1	Table C.1:System I/O ports 1st MB memory map Table C.2:1st MB memory map DMA channel assignments Table C.3:DMA channel assignments Interrupt assignments Table C.4:Interrupt assignments Intel Speedstep Technology Intel® Pentium® M SpeedStep instruction AT/ATX Power setting Introduction Table E.1:Power Connector Mechanical Drawings	

PCM-9381 User's Manual

CHAPTER

General Information

This chapter gives background information on the PCM-9381.

Sections include:

- Introduction
- Features
- Specifications
- · Board layout and dimensions

Chapter 1 Introduction

1.1 Introduction

The PCM-9381 is a 3.5" SBC (Single Board Computing) with a high performance and lower power based on Pentium M/ Celeron M processors. The PCM-9381, in conjunction with Intel 855GME chipset, supports processors clocked at up to 1.8GHz, three USB 2.0 compatible ports, a PCI Fast or Gigabit Ethernet interface, 2 Channel LVDS interface, and one PC/104 Plus expansion connector, and accommodate up to 1GB of ECC DDR RAM memory.

SpeedStep (GV3) technology is another one of the important features for PCM-9381 which can save energy and ensure longer battery life, since it allows the operating system to reduce the processor clock speed when there is not much work to be done.

The PCM-9381's board can be easier stacking on series PC/104 Plus modules for different application market requirement.

1.2 Features

- Embedded Intel Pentium M/Celeron M Processor
- Supports ECC DDR memory
- Supports 1000BSASE-T Ethernet
- Supports 2 channel 48 bits LVDS LCD display
- Supports 3 x USB 2.0 port
- Supports PC/104 Plus expansion
- Support Intel SpeedStepping (GV3) Technology

1.3.1 Standard 3.5" Biscuit SBC Functions

 CPU: Embedded Intel Pentium M (Banias/Dothan) /LV/ULV Celeron M Processor supported at Front Side Bus(FSB) 400MHz on board Celeron M 600 (512K) PCM-9381F-M0A1 on board Pentium M 1.1G PCM-9381F-S1A1 socket 478(*), Ethernet PCM-9381F-00A1

Optional: Penitum M 745 1.8GHz Pentium M 1.6GHz Pentium M 738 1.4GHz Celeron M 320 1.3GHz

*: socket 478 for Intel uFCPGA2

- System Memory: 1x SODIMM socket, support ECC Double Data Rate (DDR) 128 MB to 1GB, accept 128/256/512/1000 MB DDR200/ 266/333 DRAM
- 2nd Cache Memory: Depend on CPU type from 512 KB to 2 MB
- System Chipset: Intel 855GME GMCH/ICH4 chipset
- BIOS: AWARD 4Mbit Flash BIOS
- Watchdog timer: 255 levels timer interval
- Expansion Interface: PC/104 Plus
- Battery: Lithium 3V/196 mAH
- Power management: Supports power saving modes including Normal/Standby/Suspend modes. APM 1.2, ACPI compliant
- Support Enhanced Intel Speed Step (GV3) Technology
- Enhanced IDE interface: One channels supports up to four EIDE devices. BIOS auto-detect, PIO Mode 3 or Mode 4, supports UDMA 33 mode
- Serial ports: Two serial RS-232 ports, COM1: RS-232, COM2: RS-232/422/485
- Parallel port: One parallel port, supports SPP/EPP/ECP mode
- **Keyboard/mouse connector:** Supports one standard PC/AT keyboard and a PS/2 mouse
- Audio: Support AC97 Audio stereo sound
- USB: Three USB 2.0 compliant universal serial bus ports
- Solid State Disk (SSD) Supports one 50-pin socket for CFC type I

•

1.3.2 VGA/LVDS Interface

- Chipset: Intel 855GME Graphic Memory Control Hub (GMCH)
- Memory Size: Optimized Shared Memory Architecture, support 64MB frame buffer using system memory
- Resolution: CRT display Mode: pixel resolution up to 1600 x 1200 @85-Hz and 2048 x 536 @75Hz
- LVDS Interface: up to UXGA panel resolution with frequency range from 25-MHz to 112-MHz
- Dual Independent Display: supports CRT+LVDS, CRT+DVI, LVDS+DVI
- LVDS: support 2 channel 36-bits (48-bits optional) LVDS LCD Panel (*)

(*) Optional 48-bit LVDS - Depends on Intel chipset schedule Details or updated information, please check Intel website: www.intel.com

1.3.3 Ethernet Interface

• Chipset supports: 10/100Mbps - Intel 82551ER

10/100Mbps- Intel 82551QM (Optional)

- 10/100/1000Mbps Intel 82541GI (Optional)
- Interface: RJ45 connector
- Standard IEEE 802.3 z/ab (1000BASE-T) or IEEE 802.3u (100 BASE-T) protocol compatible
- Built-in boot ROM(Intel 82551QM).

1.3.4 Audio Function

- Chipset: IntelR 82801DB I/O Controller Hub 4 (ICH4) & ALC202 codec chipset
- Audio controller: Support AC97 3D Audio stereo sound
- Audio interface: Microphone in, line in, line out

1.3.5 Mechanical and Environmental

- Dimensions: 145 x 102 mm (5.9"x 4.2") Mechanical Drawing (dxf file) is available.
- Power Supply Type: AT/ATX
- Power Requirement: +5V ±5%, +12V ±5%(Optional), +5V standy for ATX mode

• Power Consumption:

Typical :+ 5V@ 2.91A, +12V@ 0.09A (Pentium M 1.6G, 256MB DDR333 with MPEG1) Max : + 5V@ 4.54A, +12V@ 0.13A (Pentium M 1.6G, 256MB DDR333 with HCT9.5)

- **Operating temperature:** $0 \sim 60^{\circ}$ C ($32 \sim 140^{\circ}$ F)
- Operating Humidity: 0% ~ 90% relative humidity, non-condensing
- Weight: 0.85 kg (reference weight of total package)



Figure 1.1: Board layout: Dimensions(Component Side)



Figure 1.2: Board layout: Dimensions(Solder Side)

PCM-9381 User's Manual



Installation

This chapter explains the setup procedures of the PCM-9381 hardware, including instructions on setting jumpers and connecting peripherals, switches and indicators. Be sure to read all safety precautions before you begin the installation procedure.

Chapter 2 Installation

2.1 Jumpers

The PCM-9381 has a number of jumpers that allow you to configure your system to suit your application. The table below lists the functions of the various jumpers.

2.1.1 Jumper Location



Table 2.1:	: Jumpers
Label	Function
J1	Audio Power Source
J2	COM2 Auto Flow Setting
J6	LCD POWER
J8	AT/ATX Selector
JP1	PCI VIO
S1	Clear CMOS
S2	Reset Button

2.1.2 Jumper Settings

<i>Table 2.2:</i>	Audio Power Selector(J1)
Description	PIN HEADER 3*1P 180D (M) SQUARE 2.0mm
Setting	Function
1-2	Audio Power form 12V-input & 5V-output LDO.
2-3	Audio Power from 5V.

2.1.2.1 Audio Power Source Select (J1)

2.1.2.2 COM2 Auto Flow Setting (J2)

Table 2.3:	COM2 Setting
Description	PIN HEADER 3*2P 180D SMDMALE SQUARE PIN 2.0mm
Setting	Function
1-2	RS232
3-4	RS485
5-6	RS422

2.1.2.3 LCD Power Setting (J6)

<i>Table 2.4:</i>	LCD Power Setting (J6)
Description	PIN HEADER 3*1P 180D (M)SQUARE 2.0mm
Setting	Function
1-2	+5V
2-3	+3.3V

2.1.2.4 AT/ATX Power Setting

Table 2.5:	AT/ATX Power Setting (J8)
Description	PIN HEADER 2*1P 180D (M)SQUARE 2.0mm
Setting	Function
SHORT	AT POWER
OPEN	ATX POWER

2.1.2.5 PCI VIO (JP1)

<i>Table 2.6:</i>	PCI VIO (JP1)
Description	PIN HEADER 2*1P 180D (M) SQUARE 2.0mm
Setting	Function
1-2	5V
2-3	3.3V

2.1.2.6 Clear CMOS(S1)



A

To avoid damaging the computer, always turn off the power supply before setting "Clear CMOS." Before turning on the power supply, set the jumper back to "3.0 V Battery On."

This jumper is used to erase CMOS data and reset system BIOS information.

The procedure for clearing CMOS is:

- 1. Turn off the system.
- 2. Short pin 2 and pin 3.
- 3. Return jumper to pins 1 and 2.
- 4. Turn on the system. The BIOS is now reset to its default setting

Table 2.7: CMOS clear

Condition	Result
unpressed*	Normal
pushed	Clear CMOS
* default setting	

2.2 Connectors

On-board connectors link the PCM-9381 to external devices such as hard disk drives, a keyboard, or floppy drives. The table below lists the function of each of the board's connectors.

Table 2.8: Connectors		
Label	Function	
CN1	LVDS Connector	
CN2	Audio Connector	
CN3	ATX Power Connector	
CN5	Internal USB connector (Channel 0,1)	
CN6	Primary IDE connector	
CN7	GPIO connector	
CN8	COM2 connector	
CN9	External USB connector (Channel2) Connector	
CN10	HD LED & Power LED connector	
CN11	SIR Connector	
CN12	LAN Connector	
CN13	Print Port connector	
CN14	Keyboard /Mouse Connector	
CN15	Fan Power connector	
CN16	Power Switch connector	
CN17	Inverter Power connector	
CN18	CRT Connector	
CN19	COM1 connector	
CN21	CF Connector	
CN22	PC/104 PLUS connector	
CN23	DVI connector	



Figure 2.1: Jumpers and Connectors Drawing (component side)



Figure 2.2: Connectors (solder side)

2.4 Setting Jumpers

You may configure your card to match the needs of your application by setting jumpers. A jumper is a metal bridge used to close an electric circuit. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To "close" a jumper, you connect the pins with the clip. To "open" a jumper, you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2, or 2 and 3.



The jumper settings are schematically depicted in this manual as follows:.



A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

Generally, you simply need a standard cable to make most connections.



The procedures for installing SODIMMs are described below. Please follow these steps carefully. You can install SDRAM memory modules using 200-pin SODIMMs (Small Outline Dual In-line Memory Modules).

1. Ensure that all power supplies to the system are switched off.

2. Tilt the SODIMM card approximately 25° above the board, and move it in the direction of the housing card slot. Make sure that the key in the module and the key in the housing are aligned.

3. Push the module into the socket until the module bottoms. There should be a slight insertion force to engage the module into the contacts.

2.6 IDE, CDROM hard drive connector (CN6)

The board provides 1 IDE channels which you can attach up to two Enhanced Integrated Device Electronics hard disk drives or CDROM to the board's internal controller. Its IDE controller uses a PCI interface. This advanced IDE controller supports faster data transfer, PIO mode 3, mode 4 and up to UDMA/33.

2.6.1 Connecting the hard drive

Connecting drives is done in a daisy-chain fashion. This package includes One 44PIN IDE cable that can connect to 1.8" and 2.5" drives.

- 1. Connect one end of the cable to Hard Drive connector. Make sure that the red (or blue) wire corresponds to pin 1 on the connector, which is labeled on the board (on the right side).
- Plug the other end of the cable into the Enhanced IDE hard drive, with pin 1 on the cable corresponding to pin 1 on the hard drive. (See your hard drive's documentation for the location of the connector.)

If desired, connect a second drive as described above.

Unlike floppy drives, IDE hard drives can connect to either end of the cable. If you install two drives, you will need to set one as the master and one as the slave by using jumpers on the drives. If you install only one drive, set it as the master.

2.7 Solid State Disk

The board provides a CompactFlash[™] card type I/II socket .

2.7.1 CompactFlash (CN21)

The CompactFlash card shares a secondary IDE channel which can be enabled/disabled via the BIOS settings.

2.8 Parallel port connector (CN13)

Normally, the parallel port is used to connect the card to a printer. The board includes a multi-mode (ECP/EPP/SPP) parallel port accessed via CN13 and a 26-pin flat-cable connector. You will need an adapter cable if you use a traditional DB-25 connector. The adapter cable has a 26-pin connector on one end, and a DB-25 connector on the other.

The parallel port is designated as LPT1, and can be disabled or changed to LPT2 or LPT3 in the system BIOS setup.

The parallel port interrupt channel is designated to be IRQ7.

You can select ECP/EPP DMA channel via BIOS setup.

2.9 Keyboard and PS/2 mouse connector (CN14)

The board provides a keyboard connector that supports both a keyboard and a PS/2 style mouse. In most cases, especially in embedded applications, a keyboard is not used. If the keyboard is not present, the standard PC/AT BIOS will report an error or fail during power-on self-test (POST) after a reset. The PCM-9381's BIOS standard setup menu allows you to select "All, But Keyboard" under the "Halt On" selection. This allows no-keyboard operation in embedded system applications, without the system halting under POST.

2.10 Power & HDD LED Connector (CN10)

Next, you may want to install external switches to monitor and control the board. These features are optional: install them only if you need them. The Power & HDD LED connector is 6-pin Wafer box connector. It provides connections for a power and hard disk access indicator.

2.10.1 Power & HDD LED Connector(CN10)

The HDD LED indicator for hard disk access is an active low signal (24 mA sink rate). Power supply activity LED indicator.

2.10.2 Power Reset button (S2)

Momentarily pressing the reset button will activate a reset. The switch should be rated for 10 mA, 5 V.

2.11 Power connectors (CN3)

2.11.1 Main power connector, +5 V, +12 V (CN3)

Supplies main power to the PCM-9381 (+5 V), and to devices that require +12 V.

2.11.2 Fan power supply connector (CN15)

Provides +5V power supply to CPU cooling fan.

2.12.1 Audio connector (CN2)

The board provides all major audio signals on a 10-pin cable connector, These audio signals include Microphone in (mono), Line in (stereo) and Line out (stereo).

2.13 COM port connector (CN8,CN19)

The PCM-9381 provides two serial ports (COM1: RS-232; COM2: RS-232/422/485) in one DB-9 connector (COM1) and one 14-pin dual-inline, male header. It provides connections for serial devices (a mouse, etc.) or a communication network. You can find the pin assignments for the COM port connector in Appendix C.

2.13.1 COM2 RS-232/422/485 setting (J2)

COM2 can be configured to operate in RS-232, RS-422, or RS-485 mode. This is done via J2

Table 2.9: J2: COM2 Setting		
Setting	Function	
1-2	RS-232	
3-4	RS-485	
5-6	RS-422	

2.14 VGA/LCD/LVDS interface connections

The board's PCI SVGA interface can drive conventional CRT displays and is capable of driving a wide range of flat panel displays, including passive LCD and active LCD displays. The board has three connectors to support these displays: one for standard CRT VGA monitors, one for flat panel displays, and one for LVDS type LCD panels.

2.14.1 CRT display connector (CN18)

The CRT display connector is a 15-pin D-SUB connector used for conventional CRT displays.

2.14.2 LVDS LCD panel connector (CN1)

The board supports 2 channel 36-bit (48-bit optional) LVDS LCD panel displays. Users can connect to either an 36-bit or 48-bit LVDS LCD on it.

2.15 Ethernet configuration

The board is equipped with a high performance 32-bit PCI-bus Ethernet interface which is fully compliant with IEEE 802.3U 10/100Mbps and IEEE 802.3 z/ab 1000BASE-T standards. It is supported by all major network operating systems.

2.15.1 100Base-T/1000Base-T connector (CN12)

100Base-T connections are made via the on-board RJ-45 connector

2.15.2 Network boot(Depends on Ethernet Controller)

The Network Boot feature can be utilized by incorporating the Boot ROM image files for the appropriate network operating system. The Boot ROM BIOS files are included in the system BIOS, which is on the utility CD disc.

2.16 Watchdog timer configuration

An on-board watchdog timer reduces the chance of disruptions which EMP (electro-magnetic pulse) interference can cause. This is an invaluable protective device for standalone or unmanned applications. Setup involves one jumper and running the control software (refer to Appendix A).

2.17 USB connectors (CN5,CN9)

The board provides up to three USB (Universal Serial Bus) ports. This gives complete Plug and Play, and hot attach/detach for up to 127 external devices. The USB interfaces comply with USB specification Rev. 2.0 which supports 480Mbps transfer rate, and are fuse protected.

The USB interface is accessed through one 5 x 2-pin flat-cable connectors, CN5 (USB0, 1). You will need an adapter cable if you use a standard USB connector. The adapter cable has a 5 x 2-pin connector on one end and a USB connector on the other.

Also, There's one USB2.0 jack on CN9 for convenient connecting USB device.

The USB interfaces can be disable in the system BIOS setup.

2.18 GPIO (General Purpose Input Output) (CN7)

The board supports 10-bit GPIO through GPIO connector. The 10 digital in- and out-puts can be programmed to read or control devices, with input or out- put defined. The default setting is 5 bits input and 5 bits output.



Chipset Software Installation Utility

Chapter 3 Chipset Software Installation Utility

3.1 Before you begin

To facilitate the installation of the enhanced display device drivers and utility software, you should read the instructions in this chapter carefully before you attempt installation. The device drivers for the board are located on the software installation CD. The auto-run function of the driver CD will guide and link you to the utilities and device drivers under a Windows system. The Intel® Chipset Software Installation Utility is not required on any systems running Windows NT 4.0. Updates are provided via Service Packs from Microsoft*.

Note: The files on the software installation CD are compressed. Do not attempt to install the drivers by copying the files manually. You must use the supplied SETUP program to install the drivers.

Before you begin, it is important to note that most display drivers need to have the relevant software application already installed in the system prior to installing the enhanced display drivers. In addition, many of the installation procedures assume that you are familiar with both the relevant software applications and operating system commands. Review the relevant operating system commands and the pertinent sections of your application software's user's manual before performing the installation.

3.2 Introduction

The Intel® Chipset Software Installation (CSI) utility installs to the target system the Windows INF files that outline to the operating system how the chipset components will be configured. This is needed for the proper functioning of the following features:

- Core PCI and ISA PnP services.
- USB 1.1 support (USB 2.0 driver needs to be installed separately)
- Identification of Intel® chipset components in the Device Manager.
- · Integrates superior video features. These include filtered sealing of
720 pixel DVD content, and MPEG-2 motion compensation for software DVD

Note: This utility is used for the following versions of Windows system, and it has to be installed before installing all the other drivers:

Windows 98SE Windows 2000 Windows XP

3.3 Installing the CSI Utility

 Insert the driver CD into your system's CD-ROM drive. In a few seconds, the cd main menu appears. Move to "\\PCM-9381\1_FIRST_INST". And click "INFINST_ENU" icon..

🔁 1_First_Inst				- U ×
File Edit View Favorites T	ools Help			
📙 😓 Back 🔹 🔿 👻 🖹 🧟 Searc	th 🕒 Folders	🔇 History 🛛 🖺 🕻	5 X ဢ 🔳 -	
Address 🗀 1_First_Inst			•	∂G0
1_First_Inst	inrinst_autoi	inninst_enu		
infinst_enu Application Modified: 9/5/2003 5:59 AM Size: 1.39 MB Attributes: Read-only				
Type: Application Size: 1.39 MB		1.39 MB	🖳 My Computer	11.

2. Click "Next" when you see the following message.



3. Click "Yes" when you see the following message.



4. Click "Next" when you see the following message.



5. When the following message appears, click "Finish" to complete the installation and restart Windows.



PCM-9381 User's Manual



Award BIOS Setup

Chapter 4 Award BIOS Setup

4.1 Introduction

Award's BIOS ROM has a built-in setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed memory (CMOS RAM) so that it retains the setup information when the power is turned off.

4.1.1 CMOS RAM Auto-backup and Restore

The CMOS RAM is powered by an onboard button cell battery. When you finish BIOS setup, the data in CMOS RAM will be automatically backed up to Flash ROM. If operation in harsh industrial environment cause a soft error, BIOS will recheck the data in CMOS RAM and automatically restore the original data in Flash ROM to CMOS RAM for booting.

Note: If you intend to change the CMOS setting without restoring the previous backup, you have to click on "DEL" within two seconds of the "CMOS checksum error..." display screen message appearing. Then enter the "Setup" screen to modify the data. If the "CMOS checksum error..."message appears again and again, please check to see if you need to replace the battery in your system.

4.2 Entering Setup

Turn on the computer and check for the "patch code". If there is a number assigned to the patch code, it means that the BIOS supports your CPU.

If there is no number assigned to the patch code, please contact Advantech's applications engineer to obtain an up-to-date patch code file. This will ensure that your CPU's system status is valid. After ensuring that you have a number assigned to the patch code, press to allow you to enter the setup



Figure 4.1: Award BIOS Setup initial screen

4.3 Standard CMOS Setup

Choose the "Standard CMOS Features" option from the "Initial Setup Screen" menu, and the screen below will be displayed. This menu allows users to configure system components such as date, time, hard disk drive, floppy drive, display, and memory.



Figure 4.2: Standard CMOS features screen

4.4 Advanced BIOS Features

The "Advanced BIOS Features" screen appears when choosing the "Advanced BIOS Features" item from the "Initial Setup Screen" menu. It allows the user to configure the PCM-9381 according to his particular requirements. Below are some major items that are provided in the Advanced BIOS Features screen. A quick booting function is provided for your convenience. Simply enable the Quick Booting item to save yourself valuable time

🔀 MS-DOS Prompt - BIOSVIEW	/	
Auto 💽 🛄 🖻 💼	🔁 🖻 🖪 🔺	
Phoenix - A	Ward WorkstationBIOS CMOS Set Standard CMOS Features	tup Utility
Date (mm:dd:yy) Time (bb:mm:ss)	Tue, Aug 5 2003	Item Help
The University Master	12 . 11 . 50	Menu Level 🕨
 IDE Primary Master IDE Primary Slave IDE Secondary Master IDE Secondary Slave 	[None] [None]	Change the day, month, year and century
Drive A Drive B	[1.44M, 3.5 in.] [None]	
Video Halt On	[EGA/VGA] [All , But Keyboard]	
Base Memory Extended Memory Total Memory	640K 65472K 1024K	
<pre> tion to the text text text text text text text</pre>	+/-/PU/PD:Value F10:Save H /alues F7: Optim	SC:Exit F1:General Help ized Defaults

Figure 4.3: Advanced BIOS features screen

4.4.1 Virus Warning

If enabled, a warning message and alarm beep activates if someone attempts to write here. The commands are "Enabled" or "Disabled."

4.4.2 L1 & L2 Cache

Enabling this feature speeds up memory access. The commands are "Enabled" or "Disabled."

4.4.3 Quick Power On Self Test

This option speeds up the Power-On Self Test (POST) conducted as soon as the computer is turned on. When enabled, BIOS shortens or skips some of the items during the test. When disabled, the computer conducts normal POST procedures.

4.4.4 First/Second/Third/Other Boot Device

The BIOS tries to load the OS with the devices in the sequence selected.

Choices are: Floppy, LS/ZIP, HDD, SCSI, CDROM, LAN, Disabled.

4.4.5 Swap Floppy Drive

Logical name assignments of floppy drives can be swapped if there is more than one floppy drive. The commands are "Enabled" or "Disabled."

4.4.6 Boot UP Floppy Seek

Selection of the command "Disabled" will speed the boot up. Selection of "Enabled" searches disk drives during boot up.

4.4.7 Boot Up NumLock Status

This feature selects the "power on" state for NumLock. The commands are "Enabled" or "Disabled."

4.4.8 Gate A20 Option

Normal: A pin in keyboard controller controls GateA20

Fast (Default): Chipest controls GateA20.

4.4.9 Typematic Rate Setting

The typematic rate is the rate key strokes repeat as determined by the keyboard controller. The commands are "Enabled" or "Disabled." Enabling allows the typematic rate and delay to be selected.

4.4.10 Typematic Rate (Chars/Sec)

BIOS accepts the following input values (characters/second) for typematic rate: 6, 8, 10, 12, 15, 20, 24, 30.

4.4.11 Typematic Delay (msec)

Typematic delay is the time interval between the appearance of two consecutive characters, when holding down a key. The input values for this category are: 250, 500, 750, 1000 (msec).

4.4.12 Security Option

This setting determines whether the system will boot up if the

password is denied. Access to Setup is always limited.

System The system will not boot, and access to Setup will be denied if the correct password is not entered at the prompt.

Setup The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select "PASSWORD SET-TING" in the main menu. At this point, you will be asked to enter a password. Simply press <Enter> to disable security. When security is disabled, the system will boot, and you can enter Setup freely.

4.4.13 APIC Mode

This setting allows selecting an OS with greater than 64MB of RAM. Commands are "Non-OS2" or "OS2."

4.4.14 MPS Version Control For OS

This reports if an FDD is available for Windows 95. The commands are "Yes" or "No."

4.5 Integrated Peripherals

4.5.1 IDE Master/Slave PIO/UDMA Mode,

IDE Primary (Secondary) Master/Slave PIO/UDMA Mode (Auto) Each channel (Primary and Secondary) has both a master and a slave, making four IDE devices possible. Because each IDE device may have a different Mode timing (0, 1, 2, 3, 4), it is necessary for these to be independent. The default setting "Auto" will allow autodetection to ensure optimal performance.

4.5.2 On-Chip Secondary PCI IDE

If you enable IDE HDD Block Mode, the enhanced IDE driver will be enabled. Leave IDE HDD Block Mode on the default setting.

Source of the second se	
Auto 💽 🛄 🛍 🛃 🚰 🗛	
Phoenix - Award WorkstationBIOS CMOS Se Integrated Peripherals	tup Utility
On-Chip Primary PCI IDE [Enabled]	Item Help
IDE Primary Master F10 [Auto] IDE Primary Master HDM [Auto] IDE Primary Slave HDMA [Auto] On-Chip Secondary PCI IDE [Enabled] IDE Secondary Master PIO [Auto] IDE Secondary Master HDMA [Auto] IDE Secondary Slave HDMA [Auto] IDE Secondary Slave HDMA [Auto] USB Secondary Slave UDMA [Auto] USB Controller [Enabled] USB 2.0 Controller [Enabled] USB Keyboard Support [Disabled] USB Keyboard Support [Disabled] IDT Display First [Onboard/AGP] Onboard LAN control [Enabled] HDE HDD Block Mode [Enabled] IDE HDD Block Mode [Enabled] IDE HDD Block Mode [Enabled]	Menu Level 🕨
<pre> tive: file: file:</pre>	ESC:Exit F1:General Help ized Defaults

Figure 4.4: Integrated peripherals

4.5.3 USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals. The choices: Enabled, Disabled.

4.5.4 USB Keyboard/Mouse Support

Select Enabled if user plan to use an USB keyboard. The choice: Enabled, Disable.

4.5.5 AC97 Audio

Select Disable if you do not want to use AC-97 audio. Option is Auto, Disable.

4.5.6 Init Display First

This item allows you to choose which one to activate first, PCI Slot or onchip VGA. The choices: PCI Slot, Onboard.

4.5.7 Onboard LAN Control

Option is Enable and Disable. Select Disable if user does not want to use onboard LAN controller1

4.5.8 IDE HDD Block Mode

You can enable the Primary IDE channel and/or the Secondary IDE channel. Any channel not enabled is disabled. This field is for systems with only SCSI drives.

4.5.9 Onboard FDC Controller

When enabled, this field allows you to connect your floppy disk drives to the onboard floppy disk drive connector instead of a separate controller card. If you want to use a different controller card to connect the floppy disk drives, set this field to Disabled.

4.5.10 Onboard Serial Port

For settings reference the Appendix for the serial resource allocation,

and Disabled for the on-board serial connector

4.5.11 UART Mode Select

This item allows you to select UART mode. The choices: IrDA, ASKIR, Normal.

4.5.12 RxD, TxD Active

This item allows you to determine the active of RxD, TxD. The Choices: "Hi, Hi," "Lo, Lo," "Lo, Hi," "Hi, Lo."

4.5.13 IR Transmission Delay

This item allows you to enable/disable IR transmission delay. The choices: Enabled, Disabled.

4.5.14 UR2 Duplex Mode

This item allows you to select the IR half/full duplex function. The choices: Half, Full.

4.5.15 Onboard Parallel Port

This field sets the address of the on-board parallel port connector. You can select either 3BCH/IRQ7, 378H/IRQ7, 278H/IRQ5 or Disabled. If you install an I/O card with a parallel port, make sure there is no conflict in the address assignments. The CPU card can support up to three parallel ports, as long as there are no conflicts for each port.

4.5.16 Parallel Port Mode

This field allows you to set the operation mode of the parallel port. The setting "Normal" allows normal speed operation, but in one direction only. "EPP" allows bidirectional parallel port operation at maximum speed. "ECP" allows the parallel port to operate in bi-directional mode and at a speed faster than the maximum data transfer rate. "ECP + EPP" allows normal speed operation in a two-way mode.

4.5.17 EPP Mode Select

This field allows you to select EPP port type 1.7 or 1.9. The choices:

EPP1.7, 1.9.

4.5.18 ECP Mode Use DMA

This selection is available only if you select "ECP" or "ECP + EPP" in the Parallel Port Mode field. In ECP Mode Use DMA, you can select DMA channel 1, DMA channel 3, or Disable. Leave this field on the default setting.

4.6 Power Management Setup

The power management setup controls the CPU card's "green" features to save power. The following screen shows the manufacturer's defaults::



Figure 4.5: Power management setup screen

4.6.1 Power-Supply Type

Choose AT or ATX power supply

4.6.2 ACPI function

The choice: Enabled, Disabled.

4.6.3 Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

- 1. HDD Power Down
- 2. Suspend Mode

There are four selections for Power Management, three of which have fixed mode settings

Min. Power Saving	Minimum power management., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management., Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Defined (Default)	Allows you to set each mode individually. When not dis- abled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

4.6.4 Video Off In Suspend

When system is in suspend, video will turn off.

4.6.5 Modem Use IRQ

This determines the IRQ in which the MODEM can use. The choices: 3, 4, 5, 7, 9, 10, 11, NA.

4.6.6 HDD Power Down

You can choose to turn the HDD off after one of the time intervals listed, or when the system is in "suspend" mode. If the HDD is in a power saving mode, any access to it will wake it up.

4.6.7 Soft-Off by PWR-BTTN

If you choose "Instant-Off", then pushing the ATX soft power switch button once will switch the system to "system off" power mode. You can choose "Delay 4 sec." If you do, then pushing the button for more than 4 seconds will turn off the system, whereas pushing the button momentarily (for less than 4 seconds) will switch the system to "suspend" mode.

4.6.8 CPU THRM-Throttling

This field allows you to select the CPU THRM-Throttling rate. The choices: 12.5%, 25.0%, 37.5%, 50.0%, 62.5%, 75.0%, 87.5%.

4.6.9 PowerOn By LAN

This item allows you to wake up the system via LAN from the remotehost. The choices: Enabled, Disabled.

4.6.10 PowerOn By Modem

When Enabled, an input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state. The choices: Enabled, Disabled.

4.6.11 PowerOn By Alarm

When Enabled, your can set the date and time at which the RTC (realtime clock) alarm awakens the system from Suspend mode. The choices: Enabled, Disabled.

4.6.12 Primary IDE 0 (1) and Secondary IDE 0 (1)

When Enabled, the system will resume from suspend mode if Primary IDE 0 (1) or Secondary IDE 0 (1) is active. The choice: Enabled, Disabled.

4.6.13 FDD, COM, LPT PORT

When Enabled, the system will resume from suspend mode if FDD, COM port, or LPT port is active. The choice: Enabled, Disabled.

4.6.14 PCI PIRQ [A-D]#

When Enabled, the system will resume from suspend mode if interrupt occurs. The choice: Enabled, Disabled.

4.7 PnP/PCI Configurations

4.7.1 PnP OS Installed

Select Yes if you are using a plug and play capable operating system. Select No if you need the BIOS to configure non-boot device



Figure 4.6: PnP/PCI configurations screen

4.7.2 Reset Configuration Data

Default is Disable. Select Enable to reset Extended System Configuration Data (ESCD) if you have installed a new add-on and system econfiguration has caused such a conflict that OS cannot boot.

4.7.3 Resources controlled by:

The commands here are "Auto" or "Manual." Choosing "manual" requires you to choose resources from each following sub-menu. "Auto" automatically configures all of the boot and Plug and Play devices but you must be using Windows 95 or above.

4.7.4 PCI/VGA Palette Snoop

This is left at "Disabled."

4.8 Password Setting

To change the password:

1. Choose the "Set Password" option from the "Initial Setup Screen" menu and press <Enter>.

The screen will display the following message:

Please Enter Your Password

Press <Enter>.

2. If the CMOS is good or if this option has been used to change the default password, the user is asked for the password stored in the CMOS. The screen will display the following message:

Please Confirm Your Password

Enter the current password and press <Enter>.

3. After pressing <Enter> (ROM password) or the current password (user-defined), you can change the password stored in the CMOS. The password must be no longer than eight (8) characters.

Remember, to enable the password setting feature, you must first select either "Setup" or "System" from the "Advanced BIOS Features" menu.

4.9 Save & Exit Setup

If you select this and press <Enter>, the values entered in the setup utilities will be recorded in the CMOS memory of the chipset. The microprocessor will check this every time you turn your system on and compare this to what it finds as it checks the system. This record is required for the system to operate.

4.10 Exit Without Saving

Selecting this option and pressing <Enter> lets you exit the setup program without recording any new values or changing old ones.



PCI SVGA/LCD Setup

This chapter details the software configuration information. It shows you how to configure the card to match your application requirements. The AWARD System BIOS is covered in Chapter 4.

Sections include:

- Installation of SVGA drivers
 - -for Windows 98
 - -for Windows NT/2000/XP
- Connections for standard LCDs
- Further information

Chapter 5 PCI SVGA/LCD Setup

5.1 Introduction

The board has an onboard Intel 855GME chipset for its AGP/SVGA controller. It supports LVDS LCD displays and conventional analog CRT monitors with 64MB frame buffer shared with system memory. The VGA controller can drive CRT displays with resolutions up to 1600 x 1200@85-Hz and 2048 x 536 @75Hz and support 2 channel LVDS display mode up to UXGA panel resolution with

frequency range from 25-MHz to 112-MHz

5.1.1 CMOS setting for panel type

The PCM-9381 system BIOS and custom drivers are located in a 512 Kbyte, Flash ROM device, designated U29. A single Flash chip holds the system BIOS, VGA BIOS and network Boot ROM image. The display can be configured via CMOS settings. This method minimized the number of chips and different type of LCD panels, please choose "panel type" from the "intergrated peripherals" menu in CMOS setting.

5.1.2 Display type

The PCM-9381F can be set in one of three configurations: on a CRT, on a flat panel display, or on both dual independent display. The system is initially set to dual display mode. If you want to enable the CRT display only or the flat panel display only, please contact Intel Corporation or our sales representative for detailed information.

5.1.3 Dual Independent Display

The PCM-9381F uses a Intel 855GME controller that is

capable of providing multiple views and simultaneous display with mixed video and graphics on a flat panel and CRT.

To set up dual display under Windows 98, Windows NT/2000/XP follow these steps:

1. Select "Windows98", "Control panel", "Setting", "Advanced", "Graphics Properties" "Device".

Intel(R) 82852/82855 GM/GME Graphics Controller Properties			
Devices Color	Schemes Hot Keys R	otation OpenGL Inform	nation
Monitor	Devices Primary Device Secondary Device	Monitor	•
Notebook	Device Options		
Intel(R) Dual Display Clone	Same display config	uration driven on both disj	plays
Extended Desktop		Device Settings	
	OK	Cancel	Apply

2. Select "1" for current display, or "2" for second display.

Intel(R) 82852/82855 GM/GME Graphics Controller Properties			
Devices Color	Schemes Hot Keys Rotat ⊢Extended Desktop Settings	ion OpenGL Information	
Monitor			
	1	2	
Notebook	Primary Device	Monitor	.
G.	Secondary Device	Notebook	.
Intel(R) Dual Display Clone			
Extended Desktop			
		Device Setting	S
	OK	Cancel	Apply

- 3. Enable "Extend my Windows desktop onto this monitor".
- 4. Click "OK".

5.2 Connections to Two Standard LCDs

The following tables illustrate typical LCD connection pinouts for the PCM-9381.

5.2.1 LG LM 150x06 (1024x768 LVDS LCD)

Table 5.1: Connections to LCD/Flat Panel (CN1)			
LCD Connector		Flat Panel Connector	
Unipac-UB104S01		DF-13	40P
Pin	Function	Pin	Function
1	VCC	1	+5V
2	VCC	2	+5V
3	GND	3	GND
4	GND	4	GND
5	RxIN0-	7	LVDS_YAM0R
6	RxIN0+	9	LVDS_YAP0R
7	GND	11	GND
8	RxIN1-	13	LVDS_YAM1R
9	RxIN1+	15	LVDS_YAP1R
10	GND	17	GND
11	RxIN2-	19	LVDS_YAM2R
12	RxIN2+	21	LVDS_YAP2R
13	GND	23	GND
14	CKIN-	25	LVDS_CLKAMR
15	CKIN+	27	LVDS_CLKAPR
16	GND	29	GND
17	NC		NC
18	NC		NC
19	GND	33	GND
20	GND	34	GND

* LCD connector type: HRS DF 19K-20P-1H or compatible

5.2.2 AU M170EG01 (1280x1024 TFT LCD @ 48bit)

Table 5.2: Connections to AU M170EG01 (CN1)				
AU M17	0EG01	PCM-938	PCM-9381 CN1	
Pin	Function	Pin	Function	
1	RxOIN0-	7	LVDS_YAM0	
2	RxOIN0+	9	LVDS_YAP0	
3	RxOIN1-	13	LVDS_YAM1	
4	RxOIN1+	17	GND	
5	RxOIN2-	19	LVDS_YAM2	
6	RxOIN2+	21	LVDS_YAP2	
7	VSS	11	GND	
8	RxOCLKIN-	25	LVDS_CLKAM	
9	RxOCLKIN+	27	LVDS_CLKAP	
10	RxOIN3-	35	LVDS_YAM3	
11	RxOIN3+	37	LVDS_YAP3	
12	RxEIN0-	8	LVDS_YBM0	
13	RxEIN0+	10	LVDS_YBP0	
14	VSS	17	GND	
15	RxEIN1-	14	LVDS_YBM1	
16	RxEIN1+	16	LVDS_YBP1	
17	VSS	23	GND	
18	RxEIN2-	20	LVDS_YBM2	
19	RxEIN2+	22	LVDS_YBP2	
20	RxECLKIN-	26	LVDS_CLKBM	
21	RxECLKIN+	28	LVDS_CLKBP	
22	RxEIN3-	36	LVDS_YBM3	
23	RxEIN3+	38	LVDS_YBP3	
24	VSS	29	GND	
25	VSS	30	GND	
26	NC		NC	
27	VSS	33	GND	
28	VCC	1	LCD VDD (+5V)	
29	VCC	2	LCD VDD (+5V)	
30	VCC			

5.3 Installation of the SVGA Driver

Complete the following steps to install the SVGA driver. Follow the procedures in the flow chart that apply to the operating system that you are using within your PCM-9381.

Notes: 1. The windows illustrations in this chapter are intended as examples only. Please follow the listed steps, and pay attention to the instructions which appear on your screen.

2. For convenience, the CD-ROM drive is designated as "D" throughout this chapter.

5.3.1 Installation of Windows 98/2000

1. Find Win98/2000 VGA driver from CD at the directory of PCM-9381 CD, VGA\Win9x_ME\Graphics\Setup



2. Or, find Win2000 VGA driver from CD at the directory of PCM-9381 CD-ROM, VGA\win2k xp1332.

File Edit View Favorites Tools Help	
🗍 💠 Back 🔹 🔿 👻 💽 🔍 Search 🖓 Folders 🛛	History 🖺 🖞 🗙 🗤 🏢•
Address 2_VGA	
2_VGA	xp1332 win9x1361 winnt41361
win2k_xp1332 Application	
Modified: 9/4/2003 10:03 PM	
Size: 6.96 MB	
Attributes: Read-only	
•	
Type: Application Size: 6.96 MB	6.96 MB

3. Double click "setup" and "next" into setup wizard.





4.Restart computer when installation finished.



5.4 Further Information

For further information about the AGP/VGA installation in your PCM-9381, including driver updates, troubleshooting guides and FAQ lists, visit the following web resources:

Intel website: www.intel.com

Advantech websites: www.advantech.com

www.advantech.com.tw

PCM-9381 User's Manual

CHAPTER 6

Audio Setup

The PCM-9381 is equipped with an audio interface that records and plays back CD-quality audio. This chapter provides instructions for installing the software drivers included on the audio driver diskettes.

Chapter 6 Audio Setup

6.1 Introduction

The PCM-9381's on-board audio interface provides high-quality stereo sound and FM music synthesis (ESFM) by using the Intel ICH4 audio controller. The audio interface can record, compress, and play back voice, sound, and music with built-in mixer control.

6.2 Driver installation

6.2.1 Before you begin

Please read the instructions in this chapter carefully before you attempt installation. The audio drivers for the PCM-9381 board are located on the audio driver CD. Run the supplied SETUP program to install the drivers; don't copy the files manually.

Note: The files on the software installation diskette are compressed. Do not attempt to install the drivers by copying the files manually. You must use the supplied SETUP program to install the drivers.

6.2.2 Windows 98 drivers

1. Find Win98/2000 Audio driver folder from CD at the directory of PCM-9381 CD, click "setup" to start the installation process.





2. Click "yes" to reboot your computer.



CHAPTER

Ethernet Interface

This chapter provides information on Ethernet configuration.

Sections include:

- Introduction
- Installation of Ethernet drivers for Windows 98/2000/NT
- Further information

Chapter 7 Ethernet Interface

7.1 Introduction

The PCM-9381 is equipped with a high performance 32-bit Ethernet chipset which is fully compliant with IEEE 802.3 100 Mbps CSMA/CD standards. It is supported by major network operating systems. It is also both 1000Base-T and 100Base-T compatible. The network boot feature can be utilized by incorporating the boot ROM image files for the appropriate network operating system. The boot ROM BIOS files are combined with system BIOS, which can be enabled/disabled in the BIOS setup.

7.2 Installation of Ethernet driver

Before installing the Ethernet driver, note the procedures below. You must know which operating system you are using in your PCM-9381 Series, and then refer to the corresponding installation flow chart. Then just follow the steps described in the flow chart. You will quickly and successfully complete the installation, even if you are not familiar with instructions for MS-DOS or Windows.

Note: The windows illustrations in this chapter are examples only. Follow the steps and pay attention to the instructions which appear on your screen.

7.2.1 Installation for Windows 98

1. a. Select "Start", "Settings". "Control Panel".

b. Double click "Network".



2. a. Click "Add New Hardware" and prepare to install network functions.



3. a. Select the "Adapter" item to add the Ethernet card.



4. a. Click "Have Disk" to install the driver.

Select D	evice	×
E	Click the Network ad If you don't know whi disk for this device, c	apters that matches your hardware, and then click OK. ich model you have, click DK. If you have an installation lick Have Disk.
<u>M</u> anufac	turers:	Mo <u>d</u> els:
(detecte	d net drivers) 📃	Existing Ndis2 Driver
(Infrared	COM port or dongl	Existing ODI Driver
3Com		
Accton		
Adaptec		
		Have Disk
		0K Cancel

a. Insert the CD into the D: drive
 b. Fill in "E:\3_LAN\82551ER\W9X&W2K"
 c. Click "OK"


- 6. a. Choose the "Choose the "Intel(R) GD82559ER PCI Adapter" item.
 - b. Click "Next".

Select De	evice X		
ШШ)	Click the Network adapters that matches your hardware, and then click OK. If you don't know which model you have, click OK. This list shows only what was found on the installation disk.		
Modejs:			
Intel 825	5x-based PCI Ethernet Adapter (10/100)		
Intel(R) 0	iD82559ER PCI Adapter		
Intel(R) F	R0/100+ PCI Adapter		
	Have Disk		
	OK Cancel		

7. a. Make sure the configurations of relative items are set correctly.b. Click "Finish" to reboot.

Add New Hardware Wiz	ard
	Windows has finished installing the software necessary to support your new hardware.
	< Back Finish Cancel

7.2.2 Installation for Windows 2000

1.

a. Select "Start", "Settings". "Control Panel".



2. Click "Add new hardware wizard" and prepare to install network function



Add/Remove Hardware Wizard			
Choose a Hardware Task Which hardware task do you want to perform?			
Select the hardware task you want to perform, and then click Next.			
 Add/Troubleshoot a device Choose this option if you are adding a new device to your computer or are having problems getting a device working. 			
Uninstall/Unplug a device Choose this option to uninstall a device or to prepare the computer to unplug a device.			
< <u>B</u> ack <u>N</u> ext> Cancel			

3. Choose Hardware Device "Ethernet Controller"

Add/Remove Hardware Wizard
Choose a Hardware Device Which hardware device do you want to troubleshoot?
The following hardware is already installed on your computer. If you are having problems with one of these devices, select the device, and then click Next. If you are attempting to add a device and it is not shown below, select Add a new device, and then click Next.
Devices
Add a new device
🖅 Ethernet Controller
🔜 ACPI Fixed Feature Button
🔜 Intel(r) 82802 Firmware Hub Device
E Programmable interrupt controller
🛄 System timer
Direct memory access controller
< Back Next > Cancel

Upgrade Device Driver Wizard			
Install Hardware Device Drivers A device driver is a software program that enables a hardware device to work with an operating system.			
This wizard upgrades drivers for the following hardware device:			
performance of this device. What do you want the wizard to do?			
C Search for a suitable driver for my device (recommended)			
 Usplay a list of the known drivers for this device so that I can choose a specific driver 			
< Back Next > Cancel			

pgrade Device Driver Wizard			
Hardware Type What type of hardware do you want to install?			
Select a hardware type, and then click Next.			
Hardware types:			
 Intel(R) Unified Graphics Drivers Memory technology driver Modems Multi-port serial adapters Network adapters NT Apm/Legacy Support Other devices PCMCIA adapters POMCIA adapters Pots (COM & LPT) 	▲ 		
< Back Next >	Cancel		

- 4. Insert the CD into D: drive
 - a. Fill in the Find the LAN chipset folder at the directory of PCM-9381 win2000 folder from CD ROM drive
 - b. Click "OK".



5. Choose the "Intel(R) GD82559ER PCI Adapter" item

Click "Next"

Upgrade Device Driver Wizard			
Select Network Adapter Which network adapter do you want to install?			
Click the Network Adapter that matches your hardware, then click OK. If you have an installation disk for this component, click Have Disk.			
Network Adapter: Intel 8255x-based PCI Ethernet Adapter (10/100) Intel(R) GD82555ER PCI Adapter Intel(R) PRD/100+ PCI Adapter			
Have Disk			
< Back Next > Cancel			

Upgrade Device Driver Wizard			
Start Device Driver Installation Example The device driver will be installed with the default settings. Example			
The wizard is ready to install the driver for the following hardware device: Intel(R) GD82559ER PCI Adapter Windows will use default settings to install the software for this hardware device. To install the software for your new hardware, click Next.			
< Back Next > Cancel			

6 a. Make sure the configurations of relative items are set correctly

b. Click "OK"



7.3 Further information

Intel website: www.intel.com Advantech websites:www.advantech.com www.advantech.com.tw

PCM-9381 User's Manual



Appendix

Programming the GPIO and Watchdog Timer

The PCM-9381 is equipped with a watchdog timer that resets the CPU or generates an interrupt if processing comes to a standstill for any reason. This feature ensures system reliability in industrial standalone or unmanned environments.

Appendix A Programming GPIO & Waterdog Timer

A.1 Supported GPIO Register

Bellow are detailed description of the GPIO addresses and programming sample.

A.1.1 GPIO Registers

CRF0 (GP10-GP17 I/O selection register. Default 0xFF)

When set to a '1', respective GPIO port is programmed as an input port. When set to a '0', respective GPIO port is programmed as an output port.

CRF1 (GP10-GP17 data register. Default 0x00)

If a port is programmed to be an output port, then its respective bit can be read/written.

If a port is programmed to be an input port, then its respective bit can only be read.

CRF2 (GP10-GP17 inversion register. Default 0x00)

When set to a '1', the incoming/outgoing port value is inverted.

When set to a '0', the incoming/outgoing port value is the same as in data register.

Extended Function Index Registers (EFIRs)

The EFIRs are write-only registers with port address 2Eh or 4Eh on PC/ AT systems.

Extended Function Data Registers(EFDRs)

the EFDRs are read/write registers with port address 2Fh or 4Fh on PC/ AT systems.

A.1.2 GPIO Example program-1

Enter the extended function mode, interruptible double-write

MOV DX.2EH MOV AL.87H OUT DX.AL OUT DX,AL _____ Configurate logical device 7(GP10~GP17), configuration register CRF0,CRF1,CRF2 _____ MOV DX.2EH MOV AL,07H ; point to Logical Device Number Reg. OUT DX,AL MOV DX,2FH MOV AL,07H ; select logical device 7 OUT DX,AL; MOV DX,2EH MOV AL, F0 OUT DX,AL MOV DX.2FH MOV AL,00H ; 01:Input 00:output for GP10~GP17 OUT DX,AL MOV DX.2EH MOV AL, F2H; OUT DX,AL MOV DX,2FH MOV AL,00H ;Set GPIO is normal not inverter OUT DX,AL; MOV DX,2EH MOV AL, F1H

OUT DX,AL MOV DX,2FH MOV AL,??H; Put the output value into AL OUT DX,AL

Exit extended function mode |

MOV DX,2EH MOV AL,AAH OUT DX,AL

A.2 Watchdog programming

Bellow is a sample of programming code for controlling the Watchdog Timer function.

Enter the extended function mode interruptible double-write _____ MOV DX.2EH MOV AL,87H OUT DX,AL OUT DX.AL _____ Configurate logical device 8, configuration register CRF6 _____ MOV DX.2EH MOV AL,07H ; point to Logical Device Number Reg. OUT DX.AL MOV DX,2FH MOV AL,08H ; select logical device 8 OUT DX,AL; MOV DX,2EH MOV AL,30H ;Set watch dog activate or inactivate OUT DX,AL MOV DX,2FH MOV AL,01H ; 01:activate 00:inactivate OUT DX,AL; MOV DX,2EH MOV AL, F5H ; Setting counter unit is second OUT DX,AL MOV DX,2FH MOV AL,00H OUT DX,AL;

MOV DX,2EH MOV AL,F6H OUT DX,AL MOV DX,2FH MOV AL,05H ; Set 5 seconds OUT DX,AL

;-----

; Exit extended function mode |

;-----

MOV DX,2EH MOV AL,AAH OUT DX,AL



Pin Assignments

This appendix contains information of a detailed or specialized nature. It includes:

- CPU Fan Power Connector
- Ethernet 10/100Base-T Connector
- Audio Connectot
- Main Power Connector
- Keyboard and PS/2 Mouse Connector
- Floppy Drive Connector
- IDE (1st and 2nd) HDD Connector
- Parallel Port Connector
- Power & HDD LED,
- USB Connector
- · Backlight Connector
- CRT Display Connector
- Flat Panel Connector
- Ext. Flat Panel Connector
- LCD Signal Mapping
- Peripheral power connector
- LVDS Interface Connector
- COM1 RS232 series port
- COM2 RS-232/422/485 serial port
- CompactFlash Card Connector
- ATX Power Feature Connector

Appendix B Pin Assignments

B.1 CPU Fan Power Connector (CN15)



Table B.1: IR connector (CN15)			
Descri	Description Wafer Box 2.0mm 3P180D w/Lock		
Pin	Signal		
1	FAN_DET		
2	VCC		
3	GND		

B.2 Audio Connector (CN2)



Table B.2: Audio connector (CN2)			
Description BOX HEADER SMD 5*2 180D (M) 2.0mm			
Pin	Signal	Pin	Signal
1	LINE OUT R	2	LINE IN R
3	GND	4	GND
5	LINE OUT L	6	LINE IN L
7	GND	8	GND
9	MIC IN	10	Reserved for MIC2

11	3	1
000	00	
000	00	O
12	4	2

Table B.3: Main Power Connector (CN3)				
Description		Power CONN. 6*2 180D		
Pin	Signal		Pin	Signal
1	GND		2	GND
3	VCC		4	GND
5	VCC		6	VCCSB
7	GND		8	PWR_PSON#
9	VCC		10	GND
11	VCC		12	+12V

B.4 Keyboard and PS/2 Mouse Connector (CN14)

Table B.4: Key	Table B.4: Keyboard and mouse connector (CN14)			
Description	MINI DIN 6P Short body W/Shielding			
Pin	Signal			
1	KB DATA			
2	MS DATA			
3	GND			
4	VCC			
5	KB CLOCK			
6	MS CLOCK			

Tuble		nnecio		
Descri	ption BOX HEA PROOF	DER SN	1D 22*2P 180 D(M)	2.0mm IDIOT-
Pin	Signal	Pin	Signal	
1	IDE RESET	2	GND	
3	DATA 7	4	DATA 8	_
5	DATA 6	6	DATA 9	
7	DATA 5	8	DATA 10	
9	DATA 4	10	DATA 11	
11	DATA 3	12	DATA 12	
13	DATA 2	14	DATA 13	
15	DATA 1	16	DATA 14	
17	DATA 0	18	DATA 15	
19	GND	20	N/C	
21	DRQ	22	GND	
23	IO WRITE	24	GND	
25	IO READ	26	GND	
27	HD READY	28	N/C	
29	HDACK 0	30	GND	
31	IDE IRQ	32	IOCS16	
33	ADDR 1	34	N/C	
35	ADDR 0	36	ADDR 2	4003
37	HARD DISK	38	HARD DISK	2001
	SELECT 0		SELECT 1*	
39	IDE ACTIVE	40	GND	
41	Vcc	42	Vcc	
43	GND	44	NC	

Table B.5: IDE HDD connector (CN6)

2	4						24	26
\bigcirc	\bigcirc	0 0	$\bigcirc \bigcirc$	$\bigcirc \bigcirc$	\bigcirc	\mathbf{O}	\bigcirc	\bigcirc
	\bigcirc	0 0	$\bigcirc \bigcirc$	$\bigcirc \bigcirc$	\bigcirc	$) \bigcirc$	\bigcirc	\bigcirc
1	3						23	25

Table	Table B.6: Parallel Port Connector (CN13)					
Descri	ption	BOX HEADER SMD	13*2P	180D(M) 2.0mm		
Pin	Signal		Pin	Signal		
1	STRC)BE	2	AUTOFD		
3	D0		4	ERR		
5	D1		6	INIT		
7	D2		8	SLCTINI		
9	D3		10	GND		
11	D4		12	GND		
13	D5		14	GND		
15	D6		16	GND		
17	D7		18	GND		
19	ACK		20	GND		
21	BUSY	,	22	GND		
23	PE		24	GND		
25	SLCT		26	N/C		

6	5	4	3	2	1
0	0	0	0	0	

Table B.	Table B.7: Power & HDD LED Connector (CN10)				
Descripti	Description WAFER BOX 2.0mm 6P 180D MALE W/LOCK				
Pin	Signal				
1	+5V				
2	GND				
3	power LED+ (+5V)				
4	power LED- (GND)				
5	HDD LED +				
6	HDD LED -				

B.8 USB Connector (CN5)

2	4	9	8	10
O	0	0	0	0
	Ο	0	0	0
1	3	5	7	9

Table	Table B.8: USB Connector (CN5)					
Descri	Description PIN HEADER 5*2P 180D(M) 2.0mm SMD IDIOT-PROOF					
Pin	Signal	Pin	Signal			
1	VCC	2	VCC			
3	USB_P0-	4	USB_P1-			
5	USB_P0+	6	USB_P1+			
7	GND	8	GND			
9	GND	10	NC			



Table	Table B.9: LCD Inverter Backlight Conn (CN17)					
Descri	Description WAFER BOX 2.0mm 5P 180D MALE W/LOCK					
Pin	Signal					
1	+12 V					
2	GND					
3	BKLTEN					
4	VBR					
5	+5 V					

4038	4	2
000000000000000000000000000000000000000	\bigcirc	\bigcirc
000000000000000000000000000000000000000	\bigcirc	
39 37	3	1

Tabl	Table B.10: LVDS Connector (CN1)						
Desc	Description *CONN. DF13-40DP-1.25V						
Pin	Signal	Pin	Signal				
1	VDDSAFE5	2	VDDSAFE5				
3	GND	4	GND				
5	VDDSAFE3	6	VDDSAFE3				
7	LVDS_YAM0	8	LVDS_YBM0				
9	LVDS_YAP0	10	LVDS_YBP0				
11	GND	12	GND				
13	LVDS_YAM1	14	LVDS_YBM1				
15	LVDS_YAP1	16	LVDS_YBP1				
17	GND	18	GND				
19	LVDS_YAM2	20	LVDS_YBM2				
21	LVDS_YAP2	22	LVDS_YBP2				
23	GND	24	GND				
25	LVDS_CLKAM	26	LVDS_CLKBM				
27	LVDS_CLKAP	28	LVDS_CLKBP				
29	GND	30	GND				
31	LVDS_DCLK	32	LVDS_DDAT				
33	GND	34	GND				
35	LVDS_YAM3	36	LVDS_YBM3				
37	LVDS_YAP3	38	LVDS_YBP3				
39	NC	40	NC				

Note: The model number of the CN1 socket is DF13A-40DP-1.25V (Hirose Electric Co., Ltd.)

B.11 COM2 RS23	2/422/485 series	port	(CN8)
----------------	------------------	------	-------

Table B	Table B.11: COM2 RS-232/422/485 series port			
Descript	ion BOX H	EADER SMD 7*2	2P 180D MALE 2.	0mm
Pin	RS-232 port	RS-422 port	RS-485 port	
1	DCD	N/C	N/C	
2	DSR	N/C	N/C	
3	RXD	N/C	N/C	14 0 0 13
4	RTS	N/C	N/CN/C	12 0 0 11
5	TxD	N/C	N/C	
6	CTS	N/C	N/C	
7	DTR	N/C	N/C	4 0 0 3
8	RI	N/C	N/C	2 🔾 🗆 1
9	GND	N/C	N/C	
10	GND	N/C	N/C	
11	N/C	TxD-+	DATA+	
12	N/C	TxD-	DATA-	
13	N/C	RxD+	N/C	
14	N/C	RxD-	N/C	

B.12 CompactFlash Card Connector (CN21)

Table	Table B.12: CompactFlash Card Connector (CN21)			
Descri	ption HEADER fo	r CF typell 50P 90	D(M)SMD 3M W/O Ej	ector
Pin	Signal	Pin	Signal	
1	GND	2	D03	
3	D04	4	D05	
5	D06	6	D07	
7	*CS0	8	A10	
9	*ATA SEL	10	A09	
11	A08	12	A07	
13	+5 V	14	A06	
15	A05	16	A04	
17	A03	18	A02	
19	A01	20	A00	
21	D00	22	D01	
23	D02	24	-IOCS16	

Tubic L	Tuble D.12. Computer tush Cura Connector (C1(21)				
Descrip	Description HEADER for CF typell 50P 90D(M)SMD 3M W/O Ejector				
Pin	Signal	Pin	Signal		
25	*CD2	26	-CD1		
27	D11	28	D12		
29	D13	30	D14		
31	D15	32	-CS1		
33	*VS1	34	-IORD		
35	*IOWR	36	-WE		
37	INTRQ	38	+5 V		
39	*CSEL	40	-VS2		
41	*RESER	42	IORDY		
43	*INPACK	44	-REG		
45	*DASP	46	-PDIAG		
47	D08	48	D09		
49	D10	50	GND		

Table B.12: CompactFlash Card Connector (CN21)

* low active

B.13 IR connetor (CN11)

5	4	3	2	1
0	0	0	0	

Table	Table B.13: IR Connector (CN11)			
Descr	Description WAFER BOX 2.0mm 5P 180D MALE W/LOCK			
Pin	Signal			
1	VCC (5 V)			
2	IR_CIRRX			
3	IR receive			
4	GND			
5	IR transmit			

Table B.14: MIO connectors

Description B/B CONN. 80P SMD 0.8mm 180D QSE-080-01-F- D-A					
Pin	Net Name	Inter- Face	Pin	Net Name	Inter- Face
A1	USB_OC#4	USB	B1	I2CCLK	I2C
A2	USB_4N	USB	B2	I2CDAT	I2C
A3	USB_4P	USB	B3	Global Reset	
A4	GND	Power	B4	PWROK_5V	
A5	LPC_CLK48M	LPC	B5	GPIO	
A6	GPIO		B6	LPC_FRAME#	LPC
A7	GPIO		B7	LPC_AD0	LPC
A8	LPC_SUSCLK	LPC	B8	LPC_AD1	LPC
A9	LPC_DRQ#0	LPC	B9	LPC_AD2	LPC
A10	IOCHRDY	LPC	B10	LPC_AD3	LPC
A11	AD0	PCI	B11	DEVSEL#	PCI
A12	AD1	PCI	B12	TRDY#	PCI
A13	AD2	PCI	B13	IRDY#	PCI
A14	AD3	PCI	B14	LOCK#	PCI
A15	AD4	PCI	B15	FRAME#	PCI
A16	AD5	PCI	B16	CBE#2	PCI
A17	AD6	PCI	B17	AD16	PCI
A18	AD7	PCI	B18	AD17	PCI
A19	CBE#0	PCI	B19	AD18	PCI
A20	AD8	PCI	B20	AD19	PCI
A21	AD9	PCI	B21	AD20	PCI
A22	AD10	PCI	B22	AD21	PCI
A23	AD11	PCI	B23	AD22	PCI
A24	AD12	PCI	B24	AD23	PCI
A25	AD13	PCI	B25	CBE#3	PCI

Tabl	e B.14: MIO cor	inectors			
A26	AD14	PCI	B26	AD24	PCI
A27	AD15	PCI	B27	AD25	PCI
A28	CBE#1	PCI	B28	AD26	PCI
A29	PAR	PCI	B29	AD27	PCI
A30	SERR#	PCI	B30	AD28	PCI
A31	PERR#	PCI	B31	AD29	PCI
A32	STOP#	PCI	B32	AD30	PCI
A33	PME#	PCI	B33	AD31	PCI
A34	INTA#	PCI	B34	INTC#	PCI
A35	INTB#	PCI	B35	INTD#	PCI
A36	REQ0	PCI	B36	GNT0	PCI
A37	REQ1	PCI	B37	GNT1	PCI
A38	REQ2	PCI	B38	GNT2	PCI
A39	REQA	PCI	B39	PCIRST	PCI
A40	GNTA	PCI	B40	Ring	PCI
A41	CLK0	PCI	B41	Serial IRQ	PCI
A42	CLK1	PCI	B42	Reserved	
A43	CLK2	PCI	B43	Reserved	
A44	V_BAT	Power	B44	Reserved	
A45	Reserved		B45	Reserved	
A46	AC97_RST#	AC97	B46	AC97_SDIN0	AC97
A47	AC97_SYNC	AC97	B47	AC97_BITCLK	AC97
A48	AC97_SDIN1	AC97	B48	AC97_SDOUT	AC97
A49	DVO_Detect	DVO	B49	Reserved	
A50	DVOBD11	DVO	B50	MDVICLK	DVO
A51	DVOBD10	DVO	B51	MDVIDATA	DVO
A52	DVOBD9	DVO	B52	MI2CCLK	DVO
A53	DVOBD8	DVO	B53	MI2CDATA	DVO
A54	DVOBD7	DVO	B54	DVOCFLDSTL	DVO
A55	DVOBD6	DVO	B55	DVOCBLANK#	DVO
A56	GND	GND	B56	DVOCVSYNC	DVO
A57	DVOBCLK	DVO	B57	DVOCHSYNC	DVO

PCM-9381 User's Manual

Table	Table B.14: MIO connectors				
A58	DVOBCLK#	DVO	B58	DVOCD11	DVO
A59	GND	GND	B59	DVOCD10	DVO
A60	DVOBD5	DVO	B60	DVOCD9	DVO
A61	DVOBD4	DVO	B61	DVOCD8	DVO
A62	DVOBD3	DVO	B62	DVOCD7	DVO
A63	DVOBD2	DVO	B63	DVOCD6	DVO
A64	DVOBD1	DVO	B64	DVOCD5	DVO
A65	DVOBD0	DVO	B65	DVOCD4	DVO
A66	DVOBHSYNC	DVO	B66	DVOCD3	DVO
A67	DVOBVSYNC	DVO	B67	DVOCD2	DVO
A68	DVOBBLANK#	DVO	B68	DVOCD1	DVO
A69	DVOBFLDSTL	DVO	B69	DVOCD0	DVO
A70	DVO_VREF	DVO	B70	PCIRST	DVO
A71	DVOBC- CLKINT	DVO	B71	MDDCCLK	DVO
A72	DVOBCINTR#	DVO	B72	MDDCDATA	DVO
A73	ADDID1	DVO	B73	ADDID7	DVO
A74	GND	GND	B74	ADDID6	DVO
A75	DVOCCLK	DVO	B75	ADDID5	DVO
A76	DVOCCLK#	DVO	B76	ADDID4	DVO
A77	GND	GND	B77	ADDID3	DVO
A78	ADDID0	DVO	B78	ADDID2	DVO
A79	VCC	Power	B79	VCC12	Power
A80	VCC	Power	B80	VCCSB	Power

PCM-9381 User's Manual

Appendix C

System Assignments

This appendix contains information of a detailed nature. It includes:

- System I/O ports
- 1st MB memory map
- DMA channel assignments
- Interrupt assignments

Appendix C System Assignments

C.1 System I/O Ports

Table C.1: System I/O ports			
Addr. range (Hex)	Device		
000-01F	DMA controller		
020-021	Interrupt controller 1, master		
040-05F	8254 timer		
060-06F	8042 (keyboard controller)		
070-07F	Real-time clock, non-maskable interrupt (NMI) mask		
080-09F	DMA page register		
0A0-0BF	Interrupt controller 2		
0C0-0DF	DMA controller		
0F0	Clear math co-processor		
0F1	Reset math co-processor		
0F8-0FF	Math co-processor		
1F0-1F8	Fixed disk		
200-207	Reserved (Game I/O)		
278-27F	Reserved (Parallel port 2,LTP3)		
2E8-2EF	Reserved (Series port 4)		
2F8-2FF	Serial port 2		
300-31F	Prototype card		
360-36F	Reserved		
378-37F	Parallel printer port 1 (LPT 2)		
380-38F	SDLC, bisynchronous 2		
3A0-3AF	Bisynchronous 1		
3B0-3BF	Monochrome display and printer adapter (LPT1)		
3C0-3CF	Reserved		
3D0-3DF	Color/graphics monitor adapter		
3E8-3EF	Reserved (Series port 3)		
3F0-3F7	Diskette controller		
3F8-3FF	Serial port 1		
* PNP audio I/O m	ap range from 220 ~ 250H (16 bytes)		

MPU-401 select from 300 ~ 330H (2 bytes)

C.2 1st MB memory map

Table C.2: 1st MB memory map			
Addr. range (Hex)	Device		
F0000h - FFFFFh	System ROM		
*CC000h - EFFFFh	Unused (reserved for Ethernet ROM)		
C0000h - CBFFFh	Expansion ROM (for VGA BIOS)		
B8000h - BFFFFh	CGA/EGA/VGA text		
B0000h - B7FFFh	Unused		
A0000h - AFFFFh	EGA/VGA graphics		
00000h - 9FFFFh	Base memory		

* If Ethernet boot ROM is disabled (Ethernet ROM occupies about 16 KB)

* E0000 - EFFFF is reserved for BIOS POST

C.3 DMA channel assignments

Table C.3: DMA channel assignments			
Channel	Function		
0	Available		
1	Available (audio)		
2	Floppy disk (8-bit transfer)		
3	Available (parallel port)		
4	Cascade for DMA controller 1		
5	Available		
6	Available		
7	Available		
5 6 7	Available Available Available		

* Audio DMA select 1, 3, or 5

** Parallel port DMA select 1 (LPT2) or 3 (LPT1)

C.4 Interrupt assignments

Table C.4: 1	Table C.4: Interrupt assignments		
Interrupt#	Interrupt source		
IRQ 0	Interval timer		
IRQ 1	Keyboard		
IRQ 2	Interrupt from controller 2 (cascade)		
IRQ 3	COM2		
IRQ 4	COM1		
IRQ 5	Reserved (COM4)		
IRQ 6	FDD		
IRQ 7	LPT1		
IRQ 8	RTC		
IRQ 9	Reserved (audio)		
IRQ 10	Reserved (COM3)		
IRQ 11	Reserved for watchdog timer		
IRQ 12	PS/2 mouse		
IRQ 13	INT from co-processor		
IRQ 14	Primary IDE		
IRQ 15	Secondary IDE for CFC		

* Ethernet interface IRQ select: 9, 11, 15

* PNP audio IRQ select: 9, 11, 15

* PNP USB IRQ select: 9, 11, 15

* PNP ACPI IRQ select: 9, 11, 15



Intel Speedstep Technology

• Introduction and Installation

Appendix D Intel Speedstep Technology

D.1 Intel[®] Pentium[®] M SpeedStep instruction

Mobile Intel[®] Pentium[®] M processors with Enhanced Intel SpeedStep[®] technology let users customize high performance computing on their PC.The Enhanced Intel SpeedStep technology provides the Pentium M processor a flexible, multi-point operating mode, completely self managed, and with a very low CPU and memory unavailability time, which optimizes its power and performance according to demand.

Advantech's product with Intel[®] Pentium[®] M processors support speed stepping feature at Windows XP, To implement the speed stepping feature under Windows XP, please follow the listed steps(*):

*: For Windows XP, the Service Pack 2 has implement Speedstep technology, no need to install it again.

Step 1. Update "Processor" driver by using "cpu_driver_winxp.zip"



Step 2. Change "Power schemes" to "Portable/Laptop"

	vice Manager	Intel(R) Pentium(R) M process		Herbinder Helfflij Herbindflij Mipsocessor 1000Hitz HINDOWS35ystem322DRHXDFISSHelepon.op	
File Action Vere Help Her B Computer S S Heritor S Computer S Rentra S Computer S Entrace S Computer S		General Driver	Intel(R) Persium(R) M pro Driver Rec: WHVMDOWS\System3200F		
Control Pauli C. Weiner C. Weiner C. Weiner C. Control Famel C. Control Famel C. Control Famel C. Control Famel C. Starth E. Control Famel C. Windows Update Windows Update Windows Update Windows Update	Regender Regend	parties second Helenate UPS constructed Helenate second construction A A A A A A A A A A A A A	Active	The contract of the contract o	
tu start 6 6 6	S Intel [®] (Frequency D	Managar Br Control Daved	R	8 6 B 12 12 44	

DD	1.2.1	Intel(R) P	entium(R) M proces		
			Intel(R) Perdum(R) M pro	Driver files:	VERS Veteloon Int
Restore destruction Underland	Rende		Driver Provider. Micro		
Control Panel				. 🗆 🔀	🎥 Intel(R) Frequency Display 📃 🗖
le Edit View Pavorites Tools H	telp.			AT	Ple Options
3 tack + 🕥 - 🏂 🔎 Sear	rch 🜔 Folders 💷-				(00 1 /TT
Idress 🔂 Control Panel	6			ad 🔁 👻	61111 MH7
Control Pared (a) Sector to Category Week Sec Also (a) Windows Update (b) Help and Seport	New Solar (Spink) Properties Prove Solar (Spink) Prove Solar (Spink) Prove Solar (Spink) Solar (av Folder Options av Folder Options Methods Methods Methods Sounds and Sounds and S	
	System standby:	After 20 mins	ancel Acoly	e e e e e e e e e e e e e e e e e e e	
📲 start 🛛 🖸 🗿 🕱	Intel®) Frequency D	B Device Manager	P Control Panel	🦉 step2 - Park	14 CE 12 CE

Step 3. Discover the different CPU freq. by using FrequencyDisplay utility






The Result of Pentium M speed stepping:

1.1G---600MHz / 800MHz / 1.1GHz(Intel[®] Pentium[®] M)

1.6G---600MHz / 800MHz / 1.0GHz /1.2GHz / 1.4GHz / $1.6GHz(Intel^{\ensuremath{\mathbb{R}}}$ Pentium $\ensuremath{^\mathbb{R}}$ M)

PCM-9381 User's Manual



AT/ATX Power setting

Appendix E AT/ATX Power setting

E.1 Introduction

PCM-9381 supports 2 kinds of power mode to boot up system. One is ATX mode, the other is AT mode. ATX should connect standby power and power supply on# signal to turn on main power supply. AT power doesnít have those two pins and the pin 6 of PCM-9381 power connector (CN3) needs to be connected to 5 voltage for properly boot up.

The power connector table & Power supply diagram tables are as bellow:

Table E.1: Power Connector					
Power Connector (CN3)	Power Type : ATX	Power Type : AT			
Pin 1: GND	GND	GND			
Pin 2: GND	GND	GND			
Pin 3: VCC	+5V	+5V			
Pin 4: GND	GND	GND			
Pin 5: VCC	+5V	+5V			
Pin 6:VCCSB	Standby +5V	+5V			
Pin 7: GND	GND	GND			
Pin 8: PWR_PSON#	PWR_PSON#	NC			
Pin 9: VCC	+5V	+5V			
Pin 10: GND	GND	GND			
Pin 11: VCC	+5V	+5V			
Pin 12: +12V	+12V(Optional)	+12V(Optional)			

ATX power supply diagram

		Pin3	
		Pin5	
	+5V	Pin9	
		Pin11	
	Standby +5V	Pin6	
			PCM-9381
ATX Power Supply	PSON#	Pin8	PCM-9381 PCM-9386
			Power
	+12V (Optional)	Pin12	Connector
	(Optional)		
		Pin1	
		Pin2	
	GND	Pin4	
		Pin7	
		Pin10	

AT power supply diagram

		Pin3	
		Pin5	
	+5V	Pin9	-
		Pin11	•
		Pin6	-
		Pin8	PCM-9381 PCM-9381 PCM-9386
AT Power Supply			PCM-9387
	+12V		Power
	(Optional)	Pin12	Connector
		Pin1	
		Pin2	
	GND	Pin4	
		Pin7]
		Pin10	



Mechanical Drawings

Appendix F Mechanical Drawings

F.1 Mechanical Drawings



Figure F.1: PCM-9381 Mech Drawing(Component)



Figure F.2: PCM-9381 Mech Drawing (Solder Side)

PCM-9381 User's Manual