## ADAM-4914V 4-channel Voltage Input Surge **Protection Module Startup Manual**

## **Packing List**

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 x ADAM-4914V with DIN-rail mounting bracket
- 1 x ADAM-4914V Startup Manual
- · 1 x Panel Mounting Bracket

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

## Overview

ADAM-4914V is a 4-channel surge protector for voltage inputs. It offers surge protection between field signal sources (sensor, transmitter, etc.) and I/O modules, controllers, etc.

Please refer to the wiring diagram below to get started. For more details, please refer to the ADAM-4000 Manual.

## **Specifications**

- · Input Channels: 4 differential voltage input and thermocouple
- · Discharge Voltage: Between Lines: 18 V min Line to GND: 350 V max.
- · Max. Surge Voltage: Between Lines: 23 V min. Line to GND: +4.000 V max.
- · Leakage Current: Between Lines: ≤ 10 µA @ 7.5 VDC Line to GND: ≤ 5 uA @ +140 VDC
- Response Time: ≤ 0.1 usec.
- Discharge Current: 5,000 A (8/20 µsec.)
- Internal Series Resistance: Approx. 20  $\Omega$  including
- Maximum Line Voltage: 10 V
- · Certifications: CE · Warranty: 2 years

For more information on this and other Advantech products, please visit our website at:

http://www.advantech.com

http://www.advantech.com/eAutomation

For technical support and service, please visit our support website at:

http://service.advantech.com.tw/eservice/

This manual is for ADAM-4914V.

Part No. 2004914V00

1st Edition June 2004.

