



User's Notes for PCE-5124 User Manual Ed1

JOBS1 just has a 2-pin connector for setting enable/disable alarm while the on-board security event acts.

The following photo on PCE-5124 User Manual Ed1(page:16) is wrong.

Table 1.5: H/W monitor alarm (JOBS1)	
Function	Jumper Setting
AT Mode	1  1-2 closed
ATX Mode	1  2-3 closed

We will correct it in the user manual of next version.