

ARK-3381

Embedded Box Computer

User Manual

Copyright

The documentation and the software included with this product are copyrighted 2005 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Part No. 2006338110

1st Edition

Printed in Taiwan

April 2005

Product Warranty (1 year)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for one year from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandize authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

Step 1. Visit the Advantech web site at **www.advantech.com/support** where you can find the latest information about the product.

Step 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:

- Product name and serial number
- Description of your peripheral attachments
- Description of your software (operating system, version, application software, etc.)
- A complete description of the problem
- The exact wording of any error messages

ARK-3381 Series Model

There are three sub-models in ARK-3380 series listed below:

ARK-3381-1M0A1:

ULV Celeron® M 600 MHz Embedded Box Computer, with VGA, LVDS, Fast Ethernet, 2 x RS-232, 5 x RS-232/422/485

ARK-3381-1S1A1:

LV Pentium® M 1.1 GHz Embedded Box Computer, with VGA, LVDS, Fast Ethernet, 2 x RS-232, 5 x RS-232/422/485

ARK-3381-1S4A1:

LV Pentium® M 1.4GHz, Embedded Box Computer, with VGA, LVDS, Fast Ethernet, 2 x RS-232, 5 x RS-232/422/485

Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- Warranty certificate
- Software Supporting CD-ROM
- 6P-6P-6P 20cm KB and PS/2 Mouse Y cable (P/N: 1700060202)
- DIN-rail mounting accessory (P/N: 1997001110, 1997001120, 1997001130, 1997001140)

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User's Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -**

20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

16. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Wichtige Sicherheitshinweise

1. Bitte lesen sie Sich diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie Keine Flüssig-oder Aerosolreiniger. Am besten dient ein angefeuchtetes Tuch zur Reinigung.
4. Die NetzanschlusBsteckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Verletzungen hervorrufen.
7. Die Belüftungsöffnungen dienen zur Luftzirkulation die das Gerät vor überhitzung schützt. Sorgen Sie dafür, daB diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim. AnschluB an das Stromnetz die AnschluBwerte.
9. Verlegen Sie die NetzanschlusBleitung so, daB niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
10. Alle Hinweise und Warnungen die sich am Geräten befinden sind zu beachten.

11. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
12. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. elektrischen Schlag auslösen.
13. Öffnen Sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
14. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a - Netzkabel oder Netzstecker sind beschädigt.
 - b - Flüssigkeit ist in das Gerät eingedrungen.
 - c - Das Gerät war Feuchtigkeit ausgesetzt.
 - d - Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e - Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f - Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
15. **VORSICHT:** Explosionsgefahr bei unsachgemäßen Austausch der Batterie. Ersatz nur durch denselben oder einem vom Hersteller empfohlene-mähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.
16. **ACHTUNG:** Es besteht die Explosionsgefahr, falls die Batterie auf nicht fach-männische Weise gewechselt wird. Verfangen Sie die Batterie nur gleicher oder entsprechender Type, wie vom Hersteller empfohlen. Entsorgen Sie Batterien nach Anweisung des Herstellers.

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70dB(A) oder weniger.

Haftungsausschluss: Die Bedienungsanleitungen wurden entsprechend der IEC-704-1 erstellt. Advantech lehnt jegliche Verantwortung für die Richtigkeit der in diesem Zusammenhang getätigten Aussagen ab.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

1. To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
2. Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

CONTENTS

Chapter 1	Overview	2
1.1	Introduction	2
1.2	Features	2
1.2.1	Serial Port Intensive with Networking Capability	2
1.2.2	Highly Robust Casting Construction	2
1.2.3	Highly Compact Size	2
1.2.4	Optimized Integration	2
1.2.5	Wide Range of Power Source	2
1.2.6	High Computing Performance	3
1.3	Hardware Specification	3
1.3.1	Processor Core Logic System	3
1.3.2	Display	3
1.3.3	Environment Specifications	5
	Figure 1.1:Chassis Dimensions	6
Chapter 2	Hardware Functionality	8
2.1	Introduction of ARK-3381 External I/O Connectors	8
	Figure 2.1:Front face plate external I/O connectors	8
	Figure 2.2:Rear face plate I/O connectors	8
2.2	ARK-3381 front metal face plate external I/O connectors	9
2.2.1	Power ON/OFF Button	9
2.2.2	LED Indicators	9
2.2.3	LVDS Connector	9
	Figure 2.3:LVDS Connector	9
	Table 2.1:LVDS Connector Pin Assignment	9
2.2.4	LCD Backlight On/Off control Connector	10
	Figure 2.4:LCD Backlight connector	10
	Table 2.2:LCD Backlight Connector Pin Assignment .	10
2.3	ARK-3381 rear face plate external I/O connectors	11
2.3.1	Power Input Connector	11
	Figure 2.5:Power Input connector	11
	Table 2.3:Power connector pin assignments	11
2.3.2	COM1 Connector	11
	Figure 2.6:COM 1 Connector	11
2.3.3	COM2 ~ COM6 Connector	12
	Figure 2.7:COM port connector (COM2 ~ COM6)	12
	Table 2.5:COM2~COM6 Serial port pin assignments	12
2.3.4	COM7 Connector	13
	Figure 2.8:COM7 Connector	13
	Table 2.6:COM 7 Serial port pin assignments	13
2.3.5	Ethernet Connector (LAN)	13
	Figure 2.9:Ethernet Connector	13
	Table 2.7:RJ-45 Connector pin assignments	14
2.3.6	Reset Button	14

2.3.7	PS/2 Keyboard/Mouse Connector	14
	Figure 2.10:PS/2 Connector	14
2.3.8	VGA Connector	15
	Figure 2.11:VGA Connector	15
	Table 2.9:VGA connector pin assignment	15
2.3.9	USB Connector	15
	Figure 2.12:USB Connector	16
Chapter 3	Hardware Installation and Upgrade	18
3.1	Jumpers and Connectors.....	18
3.2	Setting jumpers.....	18
3.3	COM2 RS-232/422/485 Jumper setting.....	19
	Table 3.1:COM2 RS-232/422/485 Jumper Selection ..	19
3.4	COM3 RS-232/422/485 Jumper setting.....	19
	Table 3.2:COM3 RS232/422/485 Jumper Selection ...	20
	Figure 3.1:JP2/JP3/JP4 Jumper pin layout	20
3.5	COM4 RS-232/422/485 Jumper setting.....	20
	Table 3.3:COM4 RS232/422/485 Jumper Selection ...	20
	Figure 3.2:JP5/JP6/JP7 Jumper pin layout	21
3.6	COM5 RS-232/422/485 Jumper setting.....	21
	Table 3.4:COM5 RS232/422/485 Jumper Selection ...	21
	Figure 3.3:JP8/JP9/JP10 Jumper pin layout	22
3.7	COM6 RS-232/422/485 Jumper setting.....	22
	Table 3.5:COM6 RS232/422/485 Select Jumper	22
	Figure 3.4:JP13/JP14/JP15 Jumper pin layout	23
3.8	COM7 RS-232 Jumper Setting	23
	Table 3.6:COM7 (DTR#5/RTS#5) Jumper Selection ..	23
	Table 3.7:COM7 (DCD#5/DSR#5/CTS#5/RI#5) Jumper	
	Selection 23	
	Figure 3.5:JP16 Jumper pin layout	24
	Figure 3.6:JP17 Jumper pin layout	24
3.9	COM3~COM6 Ring / Voltage Selection	24
	Table 3.8:COM3 Ring/Voltage Selection	24
	Table 3.9:COM4 Ring/Voltage Selection	24
	Table 3.10:COM5 Ring/Voltage Selection	25
	Table 3.11:COM6 Ring/Voltage Selection	25
	Figure 3.7:JP11 Jumper pin layout	25
	Figure 3.8:JP12 Jumper pin layout	25
3.10	LCD Power Jumper Setting (J6).....	25
	Table 3.12:LCD Power Setting (J6)	26
3.11	Installing the DDR SDRAM Memory Module	26
3.12	Inserting a Compact Flash Card.....	26
	Figure 3.9:	27
	Figure 3.10:	27
	Figure 3.11:	28
	Figure 3.12:	28
3.13	Installing the 2.5" Hard Disk Drive (HDD)	29
3.14	Connecting Power	29
Chapter 4	Award BIOS Setup.....	32

4.1	Introduction	32
4.1.1	CMOS RAM Auto-backup and Restore	32
4.2	Entering Setup	32
	Figure 4.1:Award BIOS Setup initial screen	33
4.3	Standard CMOS Setup	33
	Figure 4.2:Standard CMOS features screen	33
4.4	Advanced BIOS Features	34
	Figure 4.3:Advanced BIOS features screen	34
4.4.1	CPU Feature	34
4.4.2	Virus Warning	34
4.4.3	CPU L1 & L2 Cache	34
4.4.4	Quick Power On Self Test	35
4.4.5	First/Second/Third/ Boot Other Device	35
4.4.6	Swap Floppy Drive	35
4.4.7	Boot UP Floppy Seek	35
4.4.8	Boot Up NumLock Status	35
4.4.9	Gate A20 Option	35
4.4.10	Typematic Rate Setting	35
4.4.11	Typematic Rate (Chars/Sec)	35
4.4.12	Typematic Delay (msec)	36
4.4.13	Security Option	36
4.4.14	APIC Mode	36
4.4.15	MPS Version Control For OS	36
4.4.16	OS Select for DRAM > 64MB	36
4.4.17	Report No FDD For WIN 95	36
4.4.18	Small Logo (EPA) Show	37
4.5	Advanced Chipset Features	37
	Figure 4.4:Advanced Chipset features screen	37
4.5.1	DRAM Timing Selectable	37
4.5.2	CAS Latency Time	37
4.5.3	Active to Precharge Delay	38
4.5.4	DRAM RAS# to CAS# Delay	38
4.5.5	DRAM RAS# Precharge	38
4.5.6	DRAM Data Integrity Mode	38
4.5.7	MGM Core Frequency	38
4.5.8	System BIOS Cacheable	38
4.5.9	Video BIOS Cacheable	38
4.5.10	Memory Hole At 15M-16M	39
4.5.11	Delayed Transaction	39
4.5.12	Delay Prior to Thermal	39
4.5.13	AGP Aperture Size (MB)	39
4.5.14	On-Chip VGA	39
4.5.15	On-Chip Frame Buffer Size	39
4.5.16	Boot Display	39
4.5.17	Panel Scaling	39
4.5.18	Panel Number	40

4.6	Integrated Peripherals.....	40
	Figure 4.5:Integrated Peripherals	40
4.6.1	IDE Cable Detect	40
4.6.2	IDE Master/Slave PIO/UDMA Mode,	41
4.6.3	On-Chip Secondary PCI IDE	41
4.6.4	USB Controller	41
4.6.5	USB Keyboard/Mouse Support	41
4.6.6	AC97 Audio	41
4.6.7	Init Display First	41
4.6.8	Onboard LAN Control	41
4.6.9	IDE HDD Block Mode	41
4.6.10	Onboard FDC Controller	42
4.6.11	Onboard Serial Port	42
4.6.12	UART Mode Select	42
4.6.13	Rx/D, Tx/D Active	42
4.6.14	IR Transmission Delay	42
4.6.15	UR2 Duplex Mode	42
4.6.16	Onboard Parallel Port	42
4.6.17	Parallel Port Mode	43
4.6.18	EPP Mode Select	43
4.6.19	ECP Mode Use DMA	43
4.7	Power Management Setup.....	43
	Figure 4.6:Power management setup screen	43
4.7.1	Power-Supply Type	44
4.7.2	ACPI function	44
4.7.3	Power Management	44
4.7.4	Video Off In Suspend	44
4.7.5	Modem Use IRQ	44
4.7.6	HDD Power Down	45
4.7.7	Soft-Off by PWR-BTTN	45
4.7.8	CPU THRM-Throttling	45
4.7.9	PowerOn By LAN	45
4.7.10	PowerOn By Modem	45
4.7.11	PowerOn By Alarm	45
4.7.12	Primary IDE 0 (1) and Secondary IDE 0 (1)	45
4.7.13	FDD, COM, LPT PORT	46
4.7.14	PCI PIRQ [A-D]#	46
4.8	PnP/PCI Configurations	46
4.8.1	PnP OS Installed	46
	Figure 4.7:PnP/PCI configurations screen	46
4.8.2	Reset Configuration Data	46
4.8.3	Resources controlled by:	47
4.8.4	PCI/VGA Palette Snoop	47
4.9	Password Setting	47
4.10	Save & Exit Setup	48
4.11	Exit Without Saving.....	48

Chapter 5	PCI SVGA/LCD Setup	50
5.1	Introduction	50
5.1.1	CMOS setting for panel type	50
	Figure 5.1:Advanced Chipset features screen	50
5.1.2	Display type	50
5.1.3	Dual Independent Display	51
	Figure 5.2:Graphics Controller Properties - Devices ...	51
	Figure 5.3:Extended Desktop Settings	52
5.2	Installation of the SVGA Driver	52
5.2.1	Installation of Windows 98/Me	52
	Figure 5.4:Directory "Graphics"	53
5.2.2	Installation of Windows 2000	54
	Figure 5.5:CD Directory "VGA"	54
	Figure 5.6:Driver Software Install Wizard	55
	Figure 5.7:Graphics Driver Setup	55
	Figure 5.8:InstallShield® Wizard Complete	56
Chapter 6	Full Disassembly Procedure	58
6.1	Introduction	58
	Figure 6.1:	58
	Figure 6.2:	59
	Figure 6.3:	59
	Figure 6.4:	60
	Figure 6.5:	61
	Figure 6.6:	61
	Figure 6.7:	62
	Figure 6.8:	62
	Figure 6.9:	63
	Figure 6.10:	63
	Figure 6.11:	64
	Figure 6.12:	65
	Figure 6.13:	65
	Figure 6.14:	66
	Figure 6.15:	67
	Figure 6.16:	67
	Figure 6.17:	67
	Figure 6.18:	68

Overview

This chapter gives background information on the ARK-3381. It shows you the ARK-3381 overview and specifications.

Sections include:

- Introduction
- Hardware Specifications
- Chassis Dimension

Chapter 1 Overview

1.1 Introduction

The ARK-3381 Fanless Embedded Box Computer combines a rich display interface and comprehensive industrial features into a rugged, compact metal chassis for multimedia intensive applications. The fanless operation provides noise protection to the platform when deployed in external environments. The ARK-3381 Embedded Box Computer is ideally suited for embedded PC applications. All electronics are protected in a compact sealed housing for convenient embedded and stand alone applications, where space and environment considerations are critical.

1.2 Features

1.2.1 Serial Port Intensive with Networking Capability

- Multiple serial port interfaces: 5 x RS-232/422/485 Serial port and two RS-232 serial port
- Enable communication with field level for measurement and operator control of diversified automation control

1.2.2 Highly Robust Casting Construction

- Fanless operation in aluminum sealed construction
- A special cushioned design that absorbs vibration to ensure maximum reliability under harsh conditions

1.2.3 Highly Compact Size

- With its maximum mounting height of 69 mm, the ARK-3381 can be used under space critical installation conditions

1.2.4 Optimized Integration

- Few parts, easy integration, easy maintenance to reduce investment
- Systems are supplied ready to run
- Long life cycle support for product continuity

1.2.5 Wide Range of Power Source

- Wide range of DC 12 V ~ 24 V power source offers flexibility of power input for various automation environments

1.2.6 High Computing Performance

- Scalable Low Voltage and Ultra Low Voltage Pentium® M class processor system.
- Ethernet networking capability for high computing performance

1.3 Hardware Specification

1.3.1 Processor Core Logic System

CPU

- Intel® Ultra Low Voltage Celeron® M or Intel® Pentium® M Low Voltage Processor, µFC-BGA 479 Package:
 - ULV Celeron® M 600 MHz (for Model of ARK-3381-1M0A1)
 - LV Pentium® M 1.1 GHz (for Model of ARK-3381-1S1A1)
 - LV Pentium® M 1.4 GHz (for Model of ARK-3381-1S4A1)

System Chipset

- Intel® 852GM or Intel® 855GME Memory Controller Hub (GMCH) Chipset:
 - Intel® 852GM for model of ARK-3381-1M0A1
 - Intel® 855GME for model of ARK-3381-1S1A1 and ARK-3381-1S4A1
- Intel® FW82801DB I/O Controller Hub 4 (ICH4) Chipset
- 400 MHz FSB

BIOS

- 4Mbit Flash BIOS, supports Plug & Play, APM 1.2

System Memory

- One 200 pin SO-DIMM sockets
- Support DDR SDRAM Up to 1GB

1.3.2 Display

Chipset

- Integrated graphics built-in Intel® 852GM GMCH, or Intel® 855GME GMCH, utilizing Intel® Extreme Graphics 2 technology

Display Memory

- Dynamic video memory allocation up to 32 MB

Display Interface support

- CRT Interface
- 36-bit LVDS interface, optional support up to 48-bit

Ethernet

- Ethernet Controller: Intel® 82551ER Ethernet Controller
- Speed: 10/100MBps, IEEE 802.3u (100 BASE-T) protocol compatible

Serial Port

- One Full Functional RS-232 Serial port as COM1
- Five RS-232/422/485 Serial port as COM2 ~ COM6
- One RS-232 Serial port support Tx/Rx function only (without support of Handshaking) as COM7

Other

- Watchdog Timer: 255 levels timer interval, setup by software
- Keyboard/Mouse: One PS/2 port to support PS/2 Mouse and PS/2 keyboard
- USB: One USB 2.0 compliant universal serial bus port

Storage

- Supports a drive bay space for 2.5" HDD
- Supports a Compact Flash socket for Type I/II Compact Flash disk

Mechanical

- Construction: Aluminum housing
- Mounting: DIN-rail mounting, Desk/wall mounting
- Dimension (W x H x D): 264.5 mm x 69.2 mm x 137.25 mm (10.41"x 2.72"x 4.4")
- Weight: 2 KG

Power Supply

- Output Rating 46 W
- Fuse Rating 7 A @ 125 V
- Input Voltage: 12 VDC ~ 24 VDC,

Typical:

12 VDC @ 4.5A,

16 VDC @ 3.4 A,

19 VDC @ 2.9 A,

24 VDC @ 2.3 A

- Output Voltage:
 - +5 VDC @ 7 A
 - +12 VDC @ 0.5 A
 - +5VSB @ 1 A

1.3.3 Environment Specifications

Operating Temperature

- When System is equipped with Compact Flash Disk only: -20 to 60° C
- When System is equipped with 2.5-inch Hard Disk: 0 to 45° C

Relative humidity

- 95 % @ 40° C (non-condensing)

Vibration loading during operation

- When system is equipped with Compact Flash Disk only:
 - 5Grms, IEC 68-2-64, random, 5~500Hz, 1 Oct./min, 1hr/axis.
- When system is equipped with 2.5-inch hard disk:
 - 1Grms, IEC 68-2-64, random, 5~500Hz, 1 Oct./min, 1hr/axis.

Shock during operation

- When system is equipped with Compact Flash Disk only:
 - 50Grms, IEC 68-2-27, half sine, 11 ms duration
- When system is equipped with Hard Disk:
 - 20Grms, IEC 68-2-27, half sine, 11 ms duration

EMC Approved:

- CE, FCC Class A

Safety Approved:

- UL

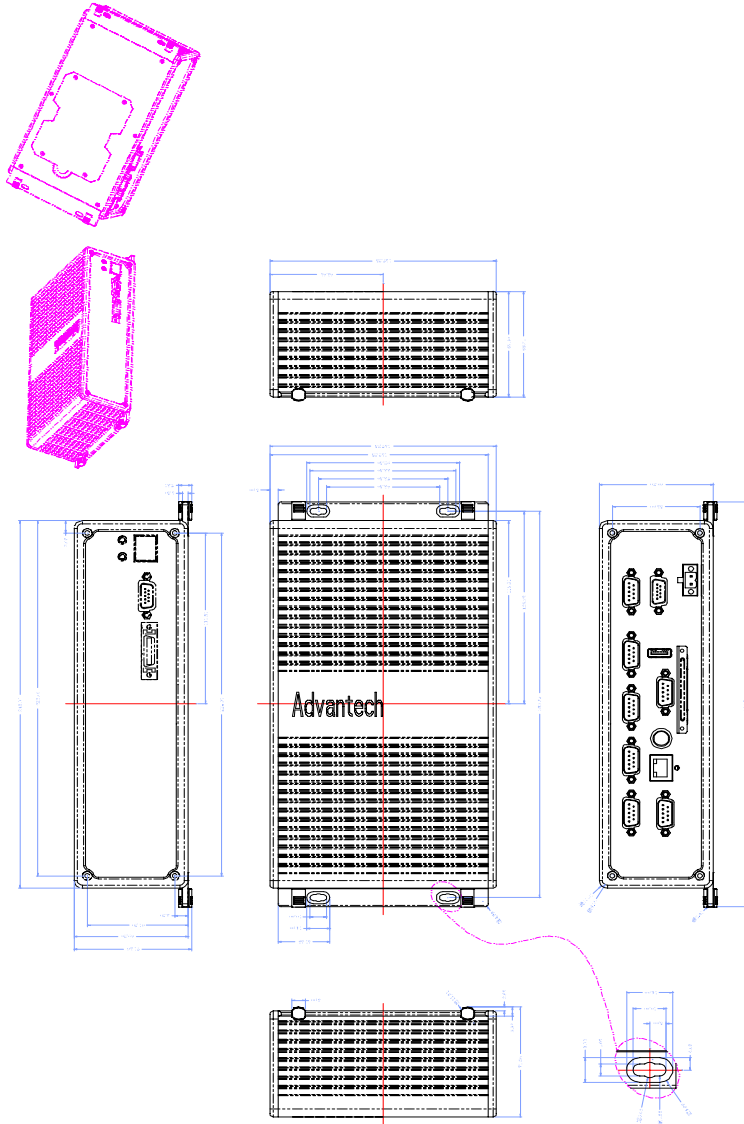


Figure 1.1: Chassis Dimensions

Hardware Functionality

This chapter shows how to set up the ARK-3381's hardware functions, including connecting peripherals, switches and indicators.

Sections include:

- Introduction of ARK-3381 External I/O Connectors
- ARK-3381 front metal face plate external I/O connectors
- ARK-3381 rear metal face plate external I/O connectors

Chapter 2 Hardware Functionality

2.1 Introduction of ARK-3381 External I/O Connectors

The following two figures show the external I/O connectors on ARK-3381. The following sections give you detailed information about the function of each I/O connector

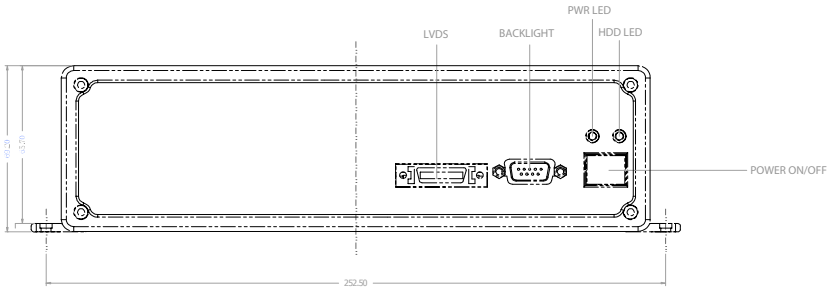


Figure 2.1: Front face plate external I/O connectors

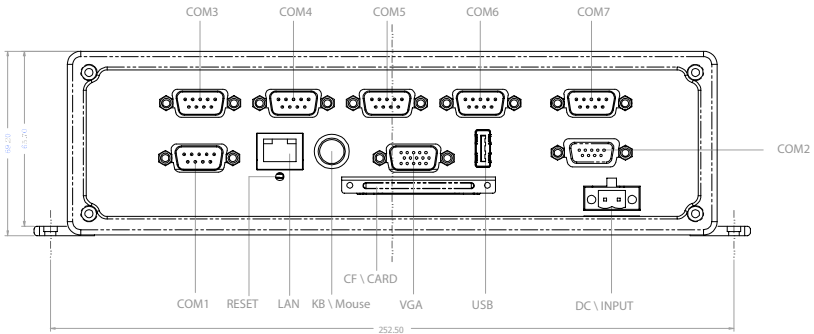


Figure 2.2: Rear face plate I/O connectors

2.2 ARK-3381 front metal face plate external I/O connectors

2.2.1 Power ON/OFF Button

The ARK-3381 comes with a Power On/Off button, that supports the dual function of Soft Power -On/Off (Instant off or Delay 4 Second), and Suspend.

2.2.2 LED Indicators

There are two LEDs on the ARK-3381 front panel for indicating system status: Red flashing PWR LED is for power status and the green flashing HDD LED is for hard disk and compact flash disk status.

2.2.3 LVDS Connector

The ARK-3381 comes with a D-Sub 26-pin connector that carries LVDS signal output, and can directly connect to LVDS LCD displays via external cable.

The system also provides a jumper - JP6 on internal PCM-9380 or PCM-9386 motherboard for selecting the LCD signal power of 5V or 3.3V, please refer to section 3.10 for the jumper table of JP6, and Chapter 6 of "Full Disassembly Procedure" for set up information. The default setting of JP6 is 5V.




Figure 2.3: LVDS Connector

Pin	Signal name	Pin	Signal name
1	LVDS_CLKBP	14	LVDS_CLKBM
2	GND	15	LVDS_YAM0
3	LVDS_YAP0	16	LVDS_YAM1
4	LVDS_YAP1	17	LVDS_YAM2
5	LVDS_YAP2	18	LVDS_CLKAM
6	LVDS_CLKAP	19	GND
7	+3.3 or +5V	20	+3.3 or +5V
8	GND	21	LVDS_YAM3
9	LVDS_YAP3	22	LVDS_YBM0

10	LVDS_YBP0	23	LVDS_YBM1
11	LVDS_YBP1	24	LVDS_YBM2
12	LVDS_YBP2	25	LVDS_YBM3
13	LVDS_YBP3	26	GND

2.2.4 LCD Backlight On/Off control Connector

The ARK-3381 comes with a D-Sub 9-pin connector which provides BKLTEN signals as well as +12V, +5V and Ground Pin signals that allow the system integrator to connect these signals to LCD Inverter to implement the LCD On/Off control.

- Provide BKLTEN signals that the inverter module requires for controlling the on/off
- Provides 12V, 5V as the inverter power source.

The additional VBR signal pin could be connected to LCD's inverter that allows integrators to implement brightness adjustment through customer's software utility.




Figure 2.4: LCD Backlight connector

Pin	Signal name
1	+12V
2	GND
3	BKLTEN
4	VBR
5	+5V
6	LVDS_DCLK
7	LVDS_DDAT
8	Reserved
9	Reserved

2.3 ARK-3381 rear face plate external I/O connectors

2.3.1 Power Input Connector

The ARK-3381 comes with a Phoenix connector that carries 12~24 VDC external power input.




Figure 2.5: Power Input connector

Pin	Signal Name
1	GND
2	+12~24VDC

2.3.2 COM1 Connector

The ARK-3381 provides a D-sub 9-pin connector, which offers one standard RS-232 serial communication interface port for COM1.




Figure 2.6: COM1 Connector

Pin	Signal Name
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS

Table 2.4: COM1 Serial port pin assignments

Pin	Signal Name
9	RI

2.3.3 COM2 ~ COM6 Connector

The ARK-3381 provides 6 RS-232/422/485 serial communication interface ports for COM2, COM3, COM3 COM4, and COM5 by 6 D-sub 9-pin connectors. The default setting of COM2, COM3, COM4 COM5 and COM6 is RS-232. Please refer to section 3.3 ~ section 3.7 "Jumper Settings" and Chapter 6 "Full Disassembly Procedure" for set up information.

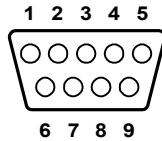


Figure 2.7: COM port connector (COM2 ~ COM6)

Table 2.5: COM2~COM6 Serial port pin assignments

Pin	RS-232	RS-422	RS-485
	Signal Name	Signal Name	Signal Name
1	DCD	Tx-	DATA-
2	RxD	Tx+	DATA+
3	TxD	Rx+	NC
4	DTR	Rx-	NC
5	GND	GND	GND
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC

Note: NC represents “No Connection”

2.3.4 COM7 Connector

The ARK-3381 provides a D-sub 9-pin connector, which offers one RS-232 serial communication interface port of COM7; it comes with functions of Rx and Tx only but without handshaking. Please refer to section 3.8 "Jumper Settings" and Chapter 6 "Full Disassembly Procedure" set up information.

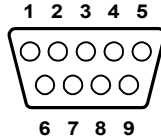


Figure 2.8: COM7 Connector

RS-232	
Pin	Signal Name
1	DCD (optional)
2	RxD
3	TxD
4	DTR (optional)
5	GND
6	DSR (optional)
7	RTS (optional)
8	CTS (optional)
9	RI (optional)

2.3.5 Ethernet Connector (LAN)

The ARK-3381 is equipped with an Intel 82551ER Ethernet controller that is fully compliant with IEEE 802.3u 10/100Base-T CSMA/CD standards. The Ethernet port provides a standard RJ-45 jack connector with LED indicators on the front side to show its Active/Link status (Green LED) and Speed status (white LED).

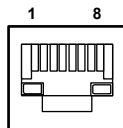


Figure 2.9: Ethernet Connector

Table 2.7: RJ-45 Connector pin assignments

Pin	10/100BaseT Signal Name
1	XMT+
2	XMT-
3	RCV+
4	NC
5	NC
6	RCV-
7	NC
8	NC

2.3.6 Reset Button

Press the "Reset" button to activate the reset function.

2.3.7 PS/2 Keyboard/Mouse Connector

The ARK-3381 provides a PS/2 keyboard/mouse connector. A 6-pin mini-DIN connector is located on the rear face plate of the ARK-3381. The ARK-3381 comes with an adapter to convert from the 6-pin mini-DIN connector to two 6-pin mini-DIN connectors for PS/2 keyboard and PS/2 mouse connection.




Figure 2.10: PS/2 Connector

Table 2.8: PS/2 Keyboard/Mouse connector pin assignments

Pin	Signal name
1	PS2_KBDAT
2	PS2_MS DAT
3	GND
4	VCC
5	PS2_KBCLK
6	PS2_MSCLK

2.3.8 VGA Connector

The ARK-3381 provides a high resolution VGA interface by a D-sub 15-pin connector to support a VGA CRT monitor. It supports VGA and VESA, up to 1600 x 1200 @85-Hz resolution and up to 32 MB shared memory.




Figure 2.11: VGA Connector

Pin	Signal name
1	Red
2	Green
3	Blue
4	NC
5	GND
6	GND
7	GND
8	GND
9	NC
10	GND
11	NC
12	NC
13	H-SYNC
14	V-SYNC
15	NC

2.3.9 USB Connector

The ARK-3381 provides one USB interface connector, which gives complete Plug & Play and hot swapping for up to 127 external devices. The USB interface complies with USB UHCI, Rev. 2.0 compliant. The USB interface can be disabled in the system BIOS setup.

The USB connector is used for connecting any device that conforms to the USB interface. Many recent digital devices conform to this standard. The USB interface supports Plug and Play, which enables you to connect or disconnect a device whenever you want, without turning off the computer.



Figure 2.12: USB Connector

Pin	Signal Name	Pin	Signal Name
1	VCC	2	VCC
3	USB_P0-	4	USB_P1-
5	USB_P0+	6	USB_P1+
7	GND	8	GND
9	GND	10	NC

Hardware Installation and Upgrade

Sections include:

- Jumpers and Connectors
- Installing the DDR SDRAM Memory Module
- Inserting a Compact Flash Card
- Installing the 2.5" Hard Disk Drive (HDD)
- Connecting Power

Chapter 3 Hardware Installation and Upgrade

3.1 Jumpers and Connectors


The ARK-3381 Embedded Box Computer consists of a PC-based computer that is housed in an aluminum top cover, a metal bottom case with accessed bottom cover and Front/ Rear Metal Face plate. Your HDD, SDRAM, are all readily accessible by removing the accessed bottom cover. Any maintenance or hardware upgrades can be easily completed after removing the top cover, and Front with Rear Metal Face plate. If you are a systems integrator and need to know how to completely disassemble the embedded box computer, you can find more useful information in Chapter 6.



Warning! Do not remove any mechanical parts, such as the top cover, bottom cover and front with rear face plate until you have verified that no power is flowing within the Embedded Box Computer. Power must be switched off and the power cord must be unplugged. Every time you service the Embedded Box Computer, you should be aware of this.

3.2 Setting jumpers

You can configure your ARK-3381 to match the needs of your application by setting jumpers. A jumper is the simplest kind of electrical switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper, you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either pins 1 and 2 or pins 2 and 3.



open




closed



closed 2-3

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

3.3 COM2 RS-232/422/485 Jumper setting

(J3/J4/J5 Located on internal motherboard)

The COM2 port located on rear face plate of ARK-3381 unit which can be configured to operate in RS-232, RS-422 or RS-485 mode by setting up the Jumper Pins of J3/J4/J5 located on internal motherboard of ARK-3381 unit. The default setting of COM1 is RS-232.

TABLE 3.1: COM2 RS-232/422/485 JUMPER SELECTION

Function	Setting	
RS-232 *	J3 (1-2 closed)	(J4, J5 open)
RS-422	J4 (1-2 closed)	(J3, J5 open)
RS-485	J5 (1-2 closed)	(J3, J4 open)

(*): means default setting of the jumper/function

Please also refer to Chapter 6 “Full Disassembly Procedure of ARK-3381 Embedded Box Computer”.

3.4 COM3 RS-232/422/485 Jumper setting

(JP2/JP3/JP4 Located on internal I/O board)

The COM3 port connector located on rear face plate of ARK-3381 unit which can be configured to operate in RS-232, RS-422 or RS-485 mode by setting up the Jumper Pins of JP2/JP3/JP4 located on internal I/O board of ARK-3381 unit. Please refer the Table 3.2 to select the setting. The default setting value has been set for RS-232.

Function	JP2	JP3	JP4
RS232 *	1-3 closed 2-4 closed	1-3 closed 2-4 closed	5-6 closed
RS422	3-5 closed 4-6 closed	3-5 closed, 4-6 closed	3-4 closed
RS485	3-5 closed 4-6 closed	3-5 closed, 4-6 closed	1-2 closed

(*): means default setting of the jumper/function

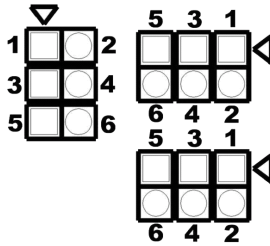


Figure 3.1: JP2/JP3/JP4 Jumper pin layout

3.5 COM4 RS-232/422/485 Jumper setting

(JP5/JP6/JP7 Located on internal I/O board)

The COM4 port connector located on rear face plate of ARK-3381 unit, which can be configured to operate in RS-232, RS-422 or RS-485 mode by setting up the Jumper Pins of JP5/JP6/JP7 located on internal I/O board of ARK-3381 unit. Please refer the Table 3.3 to select the setting. The default setting value has been set for RS-232.

Function	JP5	JP6	JP7
RS232 *	1-3 closed 2-4 closed	1-3 closed 2-4 closed	5-6 closed
RS422	3-5 closed 4-6 closed	3-5 closed, 4-6 closed	3-4 closed
RS485	3-5 closed 4-6 closed	3-5 closed 4-6 closed	1-2 closed

(*): means default setting of the jumper/function

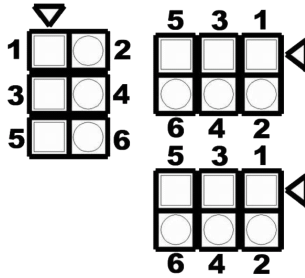


Figure 3.2: JP5/JP6/JP7 Jumper pin layout

3.6 COM5 RS-232/422/485 Jumper setting

(JP8/JP9/JP10 Located on internal I/O board)

The COM5 port connector located on rear face plate of ARK-3381 unit which can be configured to operate in RS-232, RS-422 or RS-485 mode by setting up the Jumper Pins of JP8/JP9/JP10 located on internal I/O board of ARK-3381 unit. Please refer the Table 3.4 to select the setting, The default setting value has been set for RS-232.

Function	JP8	JP9	JP10
RS232 *	1-3 closed 2-4 closed	1-3 closed 2-4 closed	5-6 closed
RS422	3-5 closed 4-6 closed	3-5 closed 4-6 closed	3-4 closed
RS485	3-5 closed 4-6 closed	3-5 closed 4-6 closed	1-2 closed

(*): means default setting of the jumper/function

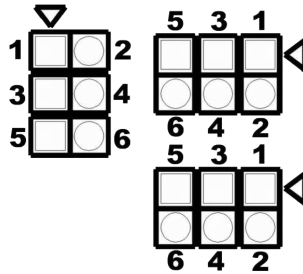


Figure 3.3: JP8/JP9/JP10 Jumper pin layout

3.7 COM6 RS-232/422/485 Jumper setting

(JP13/JP14/JP15 Located on internal I/O board)

The COM6 port connector located on rear face plate of ARK-3381 unit which can be configured to operate in RS-232, RS-422 or RS-485 mode by setting up the Jumper Pins of JP13/JP14/JP15 located on internal I/O board of ARK-3381 unit. Please refer to Table 3.5 to select the settings. The default setting value has been set for RS-232.

Function	JP13	JP14	JP15
RS232 *	1-3 closed 2-4 closed	1-3 closed 2-4 closed	5-6 closed
RS422	3-5 closed 4-6 closed	3-5 closed, 4-6 closed	3-4 closed
RS485	3-5 closed 4-6 closed	3-5 closed, 4-6 closed	1-2 closed

(*): means default setting of the jumper/function

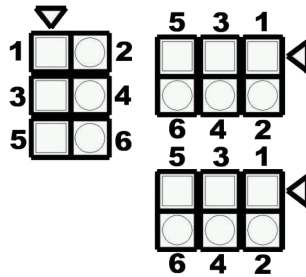


Figure 3.4: JP13/JP14/JP15 Jumper pin layout

3.8 COM7 RS-232 Jumper Setting

(JP16/JP17 Located on internal I/O board)

The COM7 port connector located on rear face plate of ARK-3381 unit which can be configured and set up by the Jumper selections of JP16 and JP17 located on internal I/O board of ARK-3381 unit. Please refer to Table 3.6 to select the settings. The default setting is “DTR#5”.

<i>Table 3.6: COM7 (DTR#5/RTS#5) Jumper Selection</i>	
Function	JP16
DTR#5 *	1-2 (closed)
RTS#5	2-3 (closed)

(*): means default setting of the jumper/function

<i>Table 3.7: COM7 (DCD#5/DSR#5/CTS#5/RI#5) Jumper Selection</i>	
Function	JP17
DCD#5 *	1-2
DSR#5	3-4
CTS#5	5-6
RI#5	7-8

(*): means default setting of the jumper/function

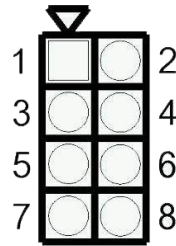



Figure 3.5: JP16 Jumper pin layout Figure 3.6: JP17 Jumper pin layout

3.9 COM3~COM6 Ring / Voltage Selection

(JP11/JP12 Located on internal I/O board)

The “RI” signal pin of COM3 ~ COM6 can be configured to support the functions of either carrying the power source of 5V or 12V; or wake on ring.

<i>Table 3.8: COM3 Ring/Voltage Selection</i>			
Serial port	Function	JP11	JP12
COM 3	5V	2-4 closed	open
	12V	4-6 closed	open
	wake on ring*	open*	1-2 closed*

(*): means default setting of the jumper/function

<i>Table 3.9: COM4 Ring/Voltage Selection</i>			
Serial port	Function	JP11	JP12
COM 4	5V	1-3 closed	open
	12V	3-5 closed	open
	wake on ring*	open*	3-4 closed*

(*): means default setting of the jumper/function

Serial port	Function	JP11	JP12
COM 5	5V	10-12 closed	open
	12V	12-14 closed	open
	wake on ring*	open*	5-6 closed*

(*): means default setting of the jumper/function

Serial port	Function	JP11	JP12
COM 6	5V	11-9 closed	open
	12V	11-13 closed	open
	wake on ring*	open*	7-8 closed*

(*): means default setting of the jumper/function

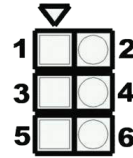



Figure 3.7: JP11 Jumper pin layout **Figure 3.8: JP12 Jumper pin layout**

3.10 LCD Power Jumper Setting (J6)

The ARK-3381 series of embedded box computer provide a JP6 jumper located on internal PCM-9380 or PCM-9386 motherboard for selecting the LCD signal power of 5V or 3.3V. When you connect your LVDS LCD panel display, you need to set up this JP6 for LCD power setting selection for your LVDS panel display.

Table 3.12: LCD Power Setting (J6)

Close pins	Function
1-2	+5V*
2-3	+3.3V

(*): means default setting of the jumper/function

Please also refer to Chapter 6 of “Full Disassembly Procedure” to set it. Up. The default setting of JP6 is 5V.

3.11 Installing the DDR SDRAM Memory Module

The ARK-3381 provides one 200-pin SODIMM (Small Outline Dual Inline Memory Module) socket and supports 2.5V DDR SDRAM. You can install from 64 MB to 1 GB of DDR SDRAM memory.

The procedure of installing a DDR SDRAM SODIMM into the ARK-3381 is detailed below, please follow these steps carefully.

1. Remove the power cord.
2. Unscrew the four screws from the bottom cover of the ARK-3381.
3. Remove the bottom cover.
4. Plug a DDR SDRAM SODIMM with your OS or application program into a DDR SDRAM SODIMM on board.
5. Screw back the bottom cover with four screws.

3.12 Inserting a Compact Flash Card

The procedure of installing a CompactFlash card into the ARK-3381 is detailed below, please follow these steps carefully.

1. Remove the power cord.
2. Unscrew the two screws from the CF Door located on rear face plate of the ARK-3381 embedded box computer.



Figure 3.9:

3. Remove the CF carrier.
4. Placing a Compact Flash card with your OS or application program into a CF carrier.



Figure 3.10:

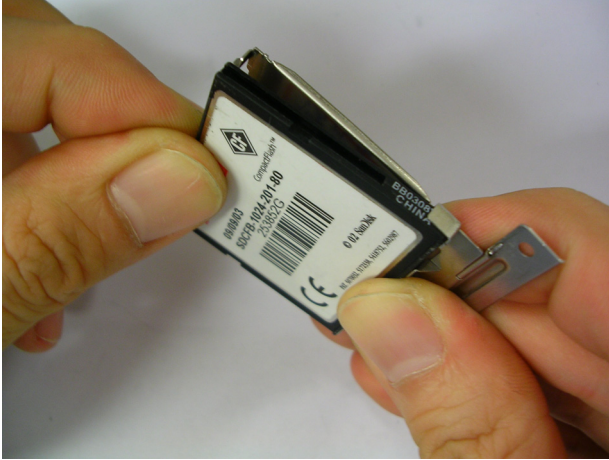


Figure 3.11:

4. Inserting the CF Carrier back and assembling with 2 screws to the CF door located on rear face plate of the ARK-3381



Figure 3.12:

Note: The Compact Flash socket is allocated as secondary IDE Master.

3.13 Installing the 2.5" Hard Disk Drive (HDD)

You can attach one enhanced Integrated Device Electronics (IDE) hard disk drive to the ARK-3381's internal controller which uses a PCI local-bus interface. The advanced IDE controller supports faster data transfer and allows the IDE hard drive to exceed 528 MB. The following are instructions for installation:

1. Remove the power cord.
2. Unscrew the four screws from bottom cover of the ARK-3381.
3. Remove the bottom cover of the ARK-3381.
4. Connect the IDE flat cable to the connector to the hard disk.
5. Screw back the bottom cover with the four screws.

3.14 Connecting Power

Connect the ARK-3381 to a 12~24 VDC power source. The power source can either be from a power adapter or an in-house power source.

CHAPTER
4

Award BIOS Setup

Chapter 4 Award BIOS Setup

4.1 Introduction

Award's BIOS ROM has a built-in setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed memory (CMOS RAM) so that it retains the setup information when the power is turned off.

4.1.1 CMOS RAM Auto-backup and Restore

The CMOS RAM is powered by an onboard button cell battery. When you finish BIOS setup, the data in CMOS RAM will be automatically backed up to Flash ROM. If operation in harsh industrial environments causes a soft error, BIOS will recheck the data in CMOS RAM and automatically restore the original data in Flash ROM to CMOS RAM for booting.

Note: If you intend to change the CMOS setting without restoring the previous backup, you have to click on "DEL" within two seconds of the "CMOS checksum error..." display screen message appearing. Then enter the "Setup" screen to modify the data. If the "CMOS checksum error..." message appears again and again, please check to see if you need to replace the battery in your system.

4.2 Entering Setup

Turn on the computer and check for the "patch code". If there is a number assigned to the patch code, it means that the BIOS supports your CPU. If there is no number assigned to the patch code, please contact Advantech's applications engineer to obtain an up-to-date patch code file. This will ensure that your CPU's system status is valid. After ensuring that you have a number assigned to the patch code, press to allow you to enter the setup

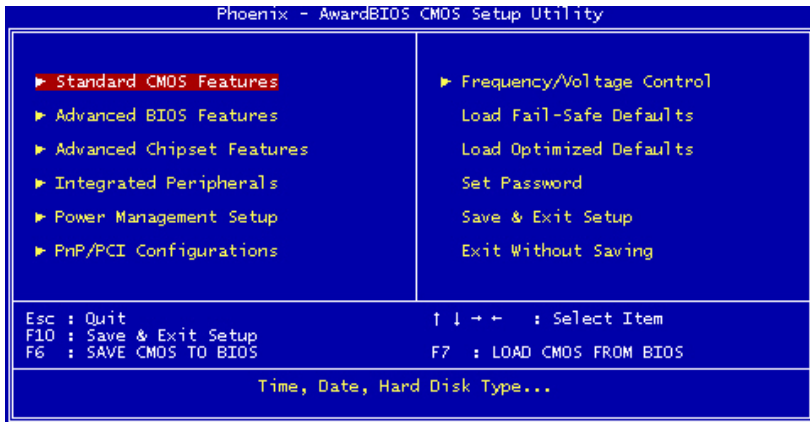


Figure 4.1: Award BIOS Setup initial screen

4.3 Standard CMOS Setup

Choose the "Standard CMOS Features" option from the "Initial Setup Screen" menu, and the screen below will be displayed. This menu allows users to configure system components such as date, time, hard disk drive, floppy drive, display, and memory.

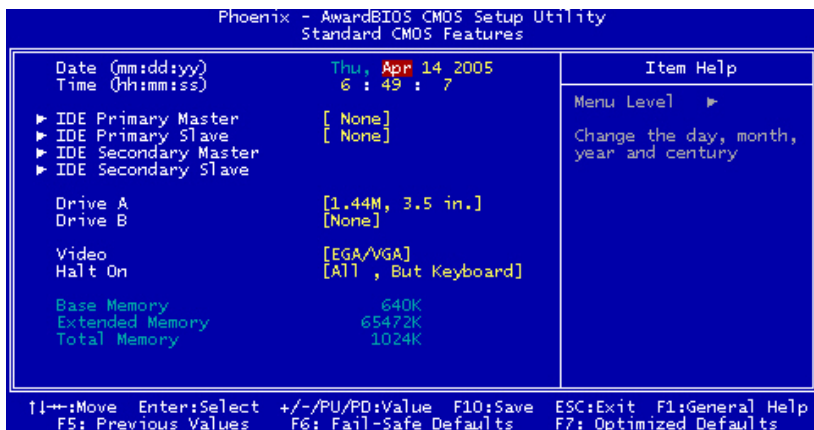


Figure 4.2: Standard CMOS features screen

4.4 Advanced BIOS Features

The "Advanced BIOS Features" screen appears when choosing the "Advanced BIOS Features" item from the "Initial Setup Screen" menu. It allows the user to configure the ARK-3389 according to his particular requirements. Below are some major items that are provided in the Advanced BIOS Features screen. A quick booting function is provided for your convenience. Simply enable the Quick Booting item to save yourself valuable time

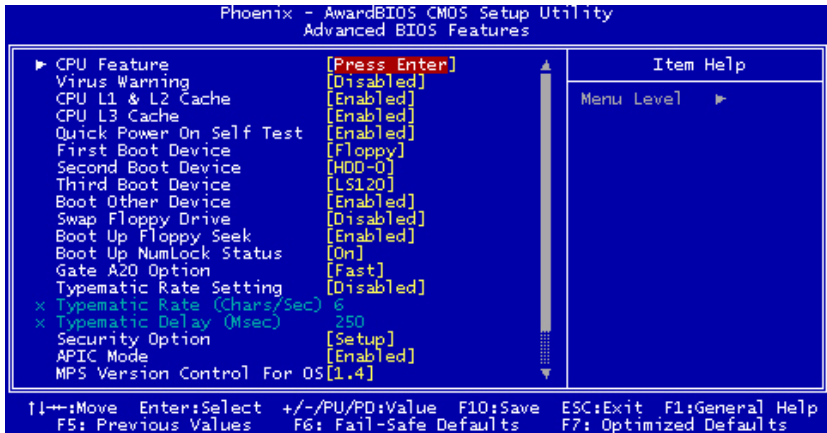


Figure 4.3: Advanced BIOS features screen

4.4.1 CPU Feature

Press Enter to configure the settings relevant to CPU Feature.

4.4.2 Virus Warning

If enabled, a warning message and alarm beep activates if someone attempts to write here. The commands are "Enabled" or "Disabled."

4.4.3 CPU L1 & L2 Cache

Enabling this feature speeds up memory access. The commands are "Enabled" or "Disabled."

4.4.4 Quick Power On Self Test

This option speeds up the Power-On Self Test (POST) conducted as soon as the computer is turned on. When enabled, the BIOS shortens or skips some of the items during the test. When disabled, the computer conducts normal POST procedures.

4.4.5 First/Second/Third/ Boot Other Device

The BIOS tries to load the OS with the devices in the sequence selected. Choices are: Floppy, LS/ZIP, HDD, SCSI, CDROM, LAN, Disabled.

4.4.6 Swap Floppy Drive

Logical name assignments of floppy drives can be swapped if there is more than one floppy drive. The commands are "Enabled" or "Disabled."

4.4.7 Boot UP Floppy Seek

Selection of the command "Disabled" will speed the boot up. Selection of "Enabled" searches disk drives during boot up.

4.4.8 Boot Up NumLock Status

This feature selects the "power on" state for NumLock. The commands are "Enabled" or "Disabled."

4.4.9 Gate A20 Option

Normal: A pin in keyboard controller controls GateA20 Fast (Default):
Chipset controls GateA20.

4.4.10 Typematic Rate Setting

The typematic rate is the rate key strokes repeat as determined by the keyboard controller. The commands are "Enabled" or "Disabled." Enabling allows the typematic rate and delay to be selected.

4.4.11 Typematic Rate (Chars/Sec)

BIOS accepts the following input values (characters/second) for typematic rate: 6, 8, 10, 12, 15, 20, 24, 30.

4.4.12 Typematic Delay (msec)

Typematic delay is the time interval between the appearance of two consecutive characters, when holding down a key. The input values for this category are: 250, 500, 750, 1000 (msec).

4.4.13 Security Option

This field allows you to limit access to the System and Setup. The default value is Setup. When you select System, the system prompts for the User Password every time you boot up. When you select Setup, the system always boots up and prompts for the Supervisor Password only when the Setup utility is called up.

4.4.14 APIC Mode

APIC stands for Advanced Programmable Interrupt Controller. The default setting is Enabled.

4.4.15 MPS Version Control For OS

This option specifies the MPS (Multiprocessor Specification) version for your operating system. MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expansion. The default setting is 1.4.

4.4.16 OS Select for DRAM > 64MB

This option allows the system to access greater than 64MB of DRAM memory when used with OS/2 that depends on certain BIOS calls to access memory. The default setting is Non-OS/2.

4.4.17 Report No FDD For WIN 95

If you are using Windows 95/98 without a floppy disk drive, select Enabled to release IRQ6. This is required to pass Windows 95/98's SCT test. You should also disable the Onboard FDC Controller in the Integrated Peripherals screen when there's no floppy drive in the system. If you set this feature to Disabled, the BIOS will not report the missing floppy drive to Win95/98.

4.4.18 Small Logo (EPA) Show

The EPA logo appears at the right side of the monitor screen when the system is boot up. The default setting is Enabled.

4.5 Advanced Chipset Features

The "Advanced Chipset Features" screen appears when choosing the "Advanced Chipset Features" item from the "Initial Setup Screen" menu. It allows the user to configure the system chipset according to his particular requirements. Below are some major items that are provided in the Advanced Chipset Features screen.

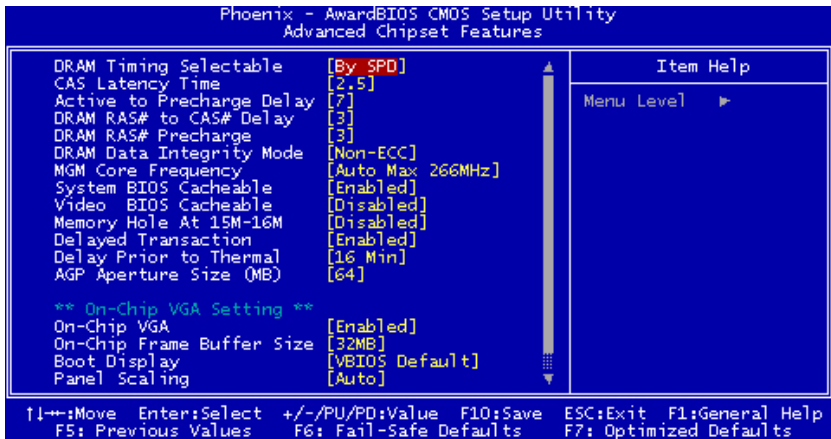


Figure 4.4: Advanced Chipset features screen

4.5.1 DRAM Timing Selectable

This option refers to the method by which the DRAM timing is selected. The default is By SPD.

4.5.2 CAS Latency Time

You can configure CAS latency time in HCLKs as 2 or 2.5 or 3. The system board designer should set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.

4.5.3 Active to Precharge Delay

The default setting for the Active to Precharge Delay is 7.

4.5.4 DRAM RAS# to CAS# Delay

This option allows you to insert a delay between the RAS (Row Address Strobe) and CAS (Column Address Strobe) signals. This delay occurs when the SDRAM is written to, read from or refreshed. Reducing the delay improves the performance of the SDRAM.

4.5.5 DRAM RAS# Precharge

This option sets the number of cycles required for the RAS to accumulate its charge before the SDRAM refreshes. The default setting for the Active to Precharge Delay is 3.

4.5.6 DRAM Data Integrity Mode

Select ECC if your memory module supports it. The memory controller will detect and correct single-bit soft memory errors. The memory controller will also be able to detect double-bit errors though it will not be able to correct them. This provides increased data integrity and system stability.

4.5.7 MGM Core Frequency

This field sets the frequency of the DRAM memory installed. The default setting is Auto Max 266MHz.

4.5.8 System BIOS Cacheable

The setting of Enabled allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

4.5.9 Video BIOS Cacheable

The Setting Enabled allows caching of the video BIOS ROM at C0000h-F7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

4.5.10 Memory Hole At 15M-16M

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16 MB. The choices are Enabled and Disabled.

4.5.11 Delayed Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1.

4.5.12 Delay Prior to Thermal

This field activates the CPU thermal function after the systems boots for the set number of minutes. The options are 16Min and 64Min.

4.5.13 AGP Aperture Size (MB)

The field sets aperture size of the graphics. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation. The default setting is 64M.

4.5.14 On-Chip VGA

The default setting is Enabled.

4.5.15 On-Chip Frame Buffer Size

The default setting is 32MB. The options available include 1MB, 4MB, 8MB and 16MB.

4.5.16 Boot Display

The default setting is CRT+LVDS. The options available include CRT, LVDS, DVI and TV.

4.5.17 Panel Scaling

The default setting is Auto. The options available include On and Off.

4.5.18 Panel Number

These fields allow you to select the LCD Panel type. The default values for these ports are:

- 640 x 480 18bit SC
- 800 x 600 18bit SC
- 1024 x 768 18bit SC
- 1280 x 1024 24bit SC
- 1400 x 1050 18bit SC
- 1024 x 768 24bit SC
- 1600 x 1200 24bit SC

4.6 Integrated Peripherals

This section sets configurations for your hard disk and other integrated peripherals. The first screen shows three main items for user to select. Once an item selected, a submenu appears. Details follow.

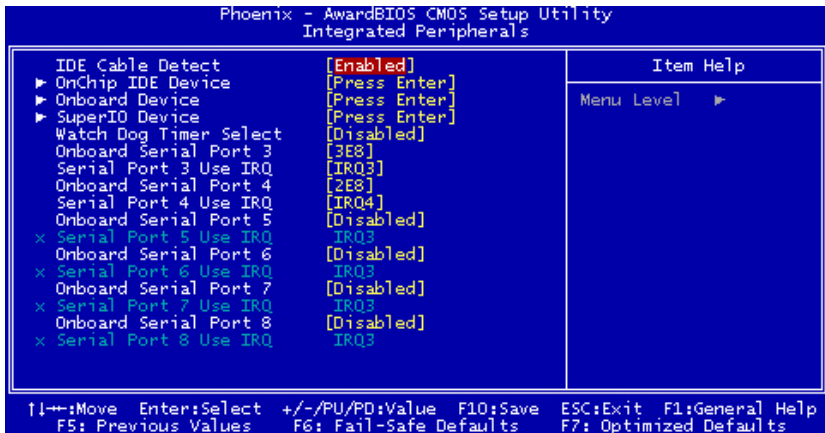


Figure 4.5: Integrated Peripherals

4.6.1 IDE Cable Detect

Some UDMA cables use a hole in the ribbon cable as a cable detect mechanism to determine if a UDMA IDE or standard IDE cable is installed. The default setting is "Enabled".

4.6.2 IDE Master/Slave PIO/UDMA Mode,

IDE Primary (Secondary) Master/Slave PIO/UDMA Mode (Auto) Each channel (Primary and Secondary) has both a master and a slave, making four IDE devices possible. Because each IDE device may have a different Mode timing (0, 1, 2, 3, 4), it is necessary for these to be independent. The default setting "Auto" will allow auto-detection to ensure optimal performance.

4.6.3 On-Chip Secondary PCI IDE

If you enable IDE HDD Block Mode, the enhanced IDE driver will be enabled. Leave IDE HDD Block Mode on the default setting.

4.6.4 USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals. The choices: Enabled, Disabled.

4.6.5 USB Keyboard/Mouse Support

Select Enabled if user plan to use an USB keyboard. The choice: Enabled, Disable.

4.6.6 AC97 Audio

Select Disable if you do not want to use AC-97 audio. Option is Auto, Disable.

4.6.7 Init Display First

This item allows you to choose which one to activate first, PCI Slot or on-chip VGA. The choices: PCI Slot, Onboard/AGP.

4.6.8 Onboard LAN Control

Option is Enable and Disable. Select Disable if user does not want to use onboard LAN controller1

4.6.9 IDE HDD Block Mode

You can enable the Primary IDE channel and/or the Secondary IDE channel. Any channel not enabled is disabled. This field is for systems with only SCSI drives.

4.6.10 Onboard FDC Controller

When enabled, this field allows you to connect your floppy disk drives to the onboard floppy disk drive connector instead of a separate controller card. If you want to use a different controller card to connect the floppy disk drives, set this field to Disabled.

4.6.11 Onboard Serial Port

For settings reference the Appendix for the serial resource allocation, and Disabled for the on-board serial connector.

4.6.12 UART Mode Select

This item allows you to select UART mode. The choices: IrDA, ASKIR, Normal.

4.6.13 RxD, TxD Active

This item allows you to determine the active of RxD, TxD. The Choices: "Hi, Hi," "Lo, Lo," "Lo, Hi," "Hi, Lo."

4.6.14 IR Transmission Delay

This item allows you to enable/disable IR transmission delay. The choices: Enabled, Disabled.

4.6.15 UR2 Duplex Mode

This item allows you to select the IR half/full duplex function. The choices: Half, Full.

4.6.16 Onboard Parallel Port

This field sets the address of the on-board parallel port connector. You can select either 3BCH/IRQ7, 378H/IRQ7, 278H/IRQ5 or Disabled. If you install an I/O card with a parallel port, make sure there is no conflict in the address assignments. The CPU card can support up to three parallel ports, as long as there are no conflicts for each port.

4.6.17 Parallel Port Mode

This field allows you to set the operation mode of the parallel port. The setting "Normal" allows normal speed operation, but in one direction only. "EPP" allows bi-directional parallel port operation at maximum speed. "ECP" allows the parallel port to operate in bi-directional mode and at a speed faster than the maximum data transfer rate. "ECP + EPP" allows normal speed operation in a two-way mode.

4.6.18 EPP Mode Select

This field allows you to select EPP port type 1.7 or 1.9. The choices: EPP1.7, 1.9.

4.6.19 ECP Mode Use DMA

This selection is available only if you select "ECP" or "ECP + EPP" in the Parallel Port Mode field. In ECP Mode Use DMA, you can select DMA channel 1, DMA channel 3, or Disable. Leave this field on the default setting.

4.7 Power Management Setup

The power management setup controls the CPU card's "green" features to save power. The following screen shows the manufacturer's defaults:

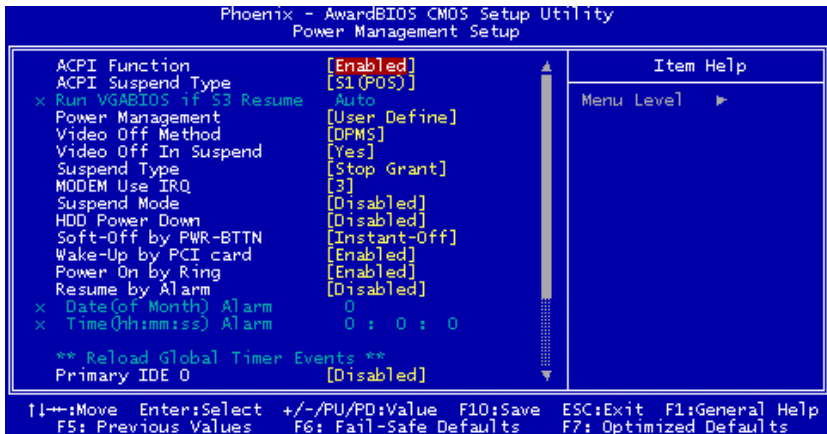


Figure 4.6: Power management setup screen

4.7.1 Power-Supply Type

Choose AT or ATX power supply

4.7.2 ACPI function

The choice: Enabled, Disabled.

4.7.3 Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

1. HDD Power Down
2. Suspend Mode

There are four selections for Power Management, three of which have fixed mode settings

Min. Power Saving	Minimum power management., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management., Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Defined (Default)	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

4.7.4 Video Off In Suspend

When system is in suspend, video will turn off.

4.7.5 Modem Use IRQ

This determines the IRQ in which the MODEM can use. The choices: 3, 4, 5, 7, 9, 10, 11, NA.

4.7.6 HDD Power Down

You can choose to turn the HDD off after one of the time intervals listed, or when the system is in "suspend" mode. If the HDD is in a power saving mode, any access to it will wake it up.

4.7.7 Soft-Off by PWR-BTTN

If you choose "Instant-Off", then pushing the ATX soft power switch button once will switch the system to "system off" power mode. You can choose "Delay 4 sec." If you do, then pushing the button for more than 4 seconds will turn off the system, whereas pushing the button momentarily (for less than 4 seconds) will switch the system to "suspend" mode.

4.7.8 CPU THRM-Throttling

This field allows you to select the CPU THRM-Throttling rate. The choices: 12.5%, 24.0%, 37.5%, 50.0%, 62.5%, 74.0%, 87.5%.

4.7.9 PowerOn By LAN

This item allows you to wake up the system via LAN from the remote-host. The choices: Enabled, Disabled.

4.7.10 PowerOn By Modem

When Enabled an input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state. The choices: Enabled, Disabled.

4.7.11 PowerOn By Alarm

When Enabled, you can set the date and time at which the RTC (real time clock) alarm awakens the system from Suspend mode. The choices: Enabled, Disabled.

4.7.12 Primary IDE 0 (1) and Secondary IDE 0 (1)

When Enabled, the system will resume from suspend mode if Primary IDE 0 (1) or Secondary IDE 0 (1) is active. The choice: Enabled, Disabled.

4.7.13 FDD, COM, LPT PORT

When Enabled, the system will resume from suspend mode if FDD, COM port, or LPT port is active. The choice: Enabled, Disabled.

4.7.14 PCI PIRQ [A-D]#

When Enabled, the system will resume from suspend mode if interrupt occurs. The choice: Enabled, Disabled.

4.8 PnP/PCI Configurations

4.8.1 PnP OS Installed

Select "Yes" if you are using a plug and play capable operating system. Select No if you need the BIOS to configure non-boot device

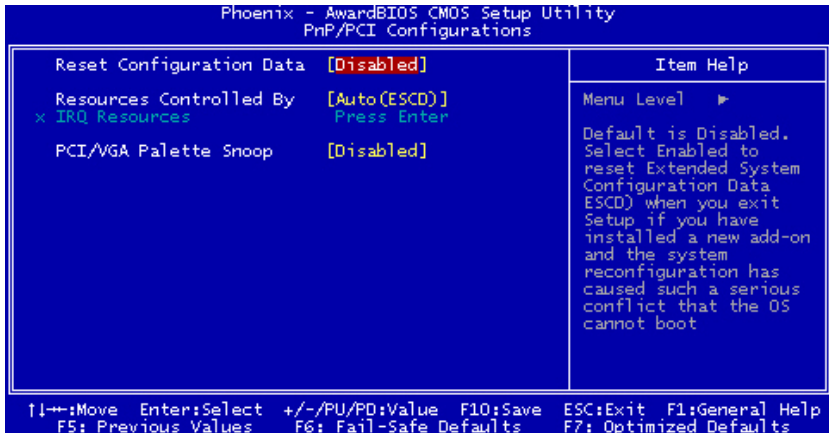


Figure 4.7: PnP/PCI configurations screen

4.8.2 Reset Configuration Data

Default is Disable. Select Enable to reset Extended System Configuration Data (ESCD) if you have installed a new add-on and system configuration has caused such a conflict that OS cannot boot.

4.8.3 Resources controlled by:

The commands here are "Auto" or "Manual." Choosing "manual" requires you to choose resources from each following sub-menu. "Auto" automatically configures all of the boot and Plug and Play devices but you must be using Windows 95 or above.

4.8.4 PCI/VGA Palette Snoop

This is left at "Disabled."

4.9 Password Setting

To change the password:

1. Choose the "Set Password" option from the "Initial Setup Screen" menu and press <Enter>.

The screen will display the following message:

Please Enter Your Password

Press <Enter>.

2. If the CMOS is good or if this option has been used to change the default password, the user is asked for the password stored in the CMOS.

The screen will display the following message:

Please Confirm Your Password

Enter the current password and press <Enter>.

3. After pressing <Enter> (ROM password) or the current password (user-defined), you can change the password stored in the CMOS. The password must be no longer than eight (8) characters.

Remember, to enable the password setting feature, you must first select either "Setup" or "System" from the "Advanced BIOS Features" menu.

4.10 Save & Exit Setup

If you select this and press <Enter>, the values entered in the setup utilities will be recorded in the CMOS memory of the chipset. The microprocessor will check this every time you turn your system on and compare this to what it finds as it checks the system. This record is required for the system to operate.

4.11 Exit Without Saving

Selecting this option and pressing <Enter> lets you exit the setup program without recording any new values or changing old ones.

PCI SVGA/LCD Setup

This chapter details the software configuration information. It shows you how to configure the card to match your application requirements. The AWARD System BIOS is covered in Chapter 4.

Sections include:

- Installation of SVGA drivers
 - for Windows 98/ME
 - for Windows 2000

Chapter 5 PCI SVGA/LCD Setup

5.1 Introduction

The board has an onboard Intel 852GM or 855GME chipset for its AGP/SVGA controller. It supports LVDS LCD displays and conventional analog CRT monitors with 64MB frame buffer shared with system memory. The VGA controller can drive CRT displays with resolutions up to 1600 x 1200@85-Hz and 2048 x 536 @75Hz and support 2 channel LVDS display mode up to UXGA panel resolution with frequency range from 25-MHz to 112-MHz

5.1.1 CMOS setting for panel type

The ARK-3381 system BIOS and custom drivers are located in a 512 KB, Flash ROM device, designated U29 on the system motherboard of ARK-3381. A single Flash chip holds the system BIOS, VGA BIOS and network Boot ROM image. The display can be configured via CMOS settings. This method Choice of "Boot display" selection items of Advanced Chipset Features sections of Award BIOS Setup.

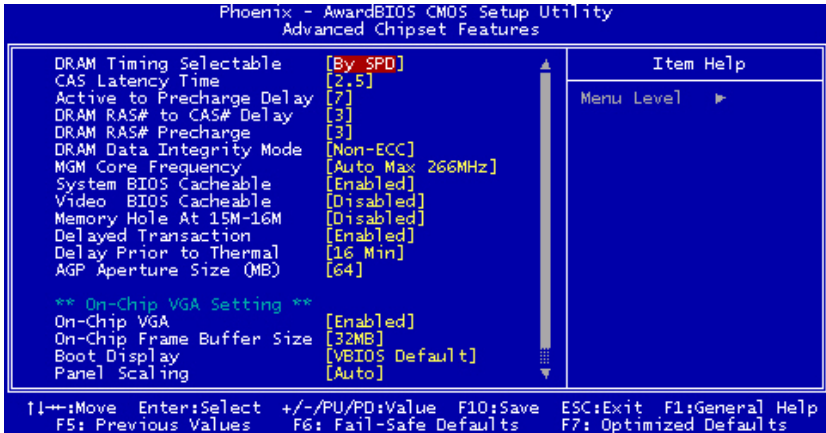


Figure 5.1: Advanced Chipset features screen

5.1.2 Display type

The ARK-3381 can be set in one of four configurations: on a CRT, on a LVDS based flat panel display, on a DVI based digital flat panel display, on a TV display, or on both dual independent displays. The system is initially set to "Auto".

5.1.3 Dual Independent Display

The ARK-3381 uses an Intel 855GME or Intel 852GM controller that is capable of providing multiple views and simultaneous displays with mixed video and graphics on a flat panel and CRT. To set up dual display under Windows 98, Windows NT/2000/XP follow these steps:

1. Select "Windows98", "Control panel", "Setting", "Advanced", "Graphics Properties", "Device".

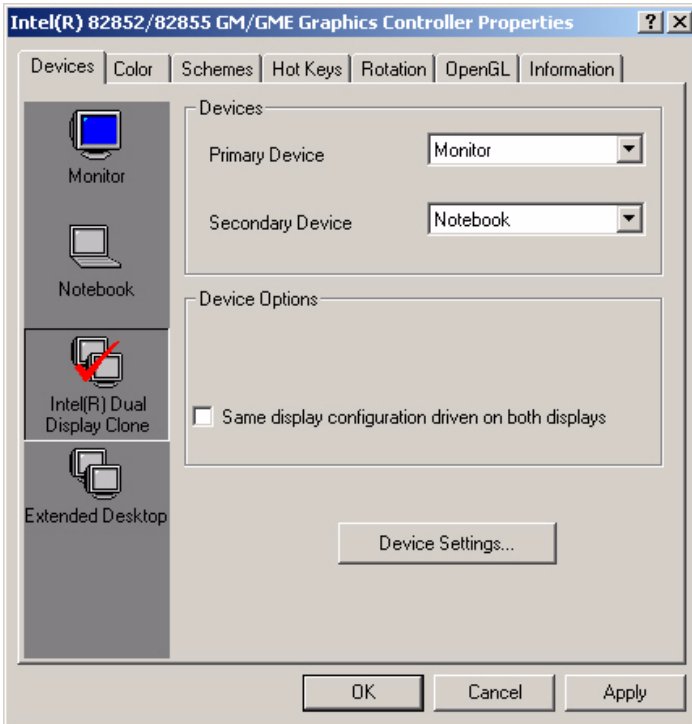


Figure 5.2: Graphics Controller Properties - Devices

6. Select "1" for current display, or "2" for second display.

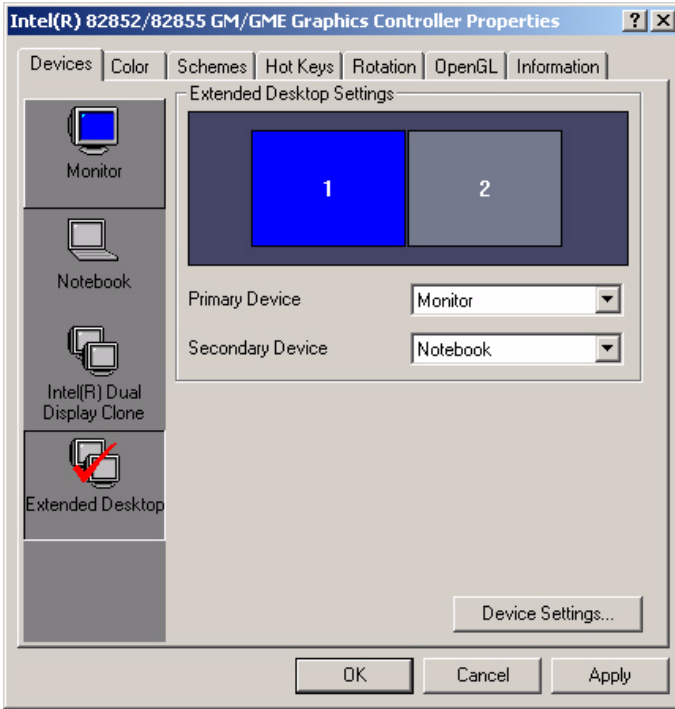


Figure 5.3: Extended Desktop Settings

7. Enable "Extend my Windows desktop onto this monitor".
8. 4. Click "OK".

5.2 Installation of the SVGA Driver

Complete the following steps to install the SVGA driver. Follow the procedures in the flow chart that apply to the operating system that you are using within your ARK-3381.

5.2.1 Installation of Windows 98/Me

1. Find Win98/Me VGA driver from CD at the directory of ARK-3381 CD, VGA\Win9x_ME\Graphics\Setup

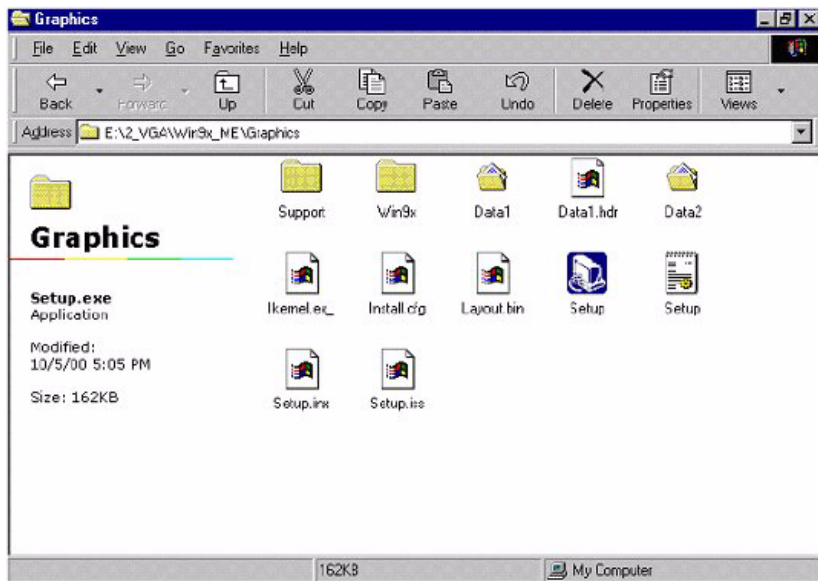


Figure 5.4: Directory "Graphics"

Notes: 1. The windows illustrations in this chapter are intended as examples only. Please follow the listed steps, and pay attention to the instructions which appear on your screen. 2. For convenience, the CD-ROM drive is designated as "D" throughout this chapter.

5.2.2 Installation of Windows 2000

You can find Win2000 VGA driver from CD at the directory of ARK-3381 CD-ROM, \VGA\win2k_xp1332.

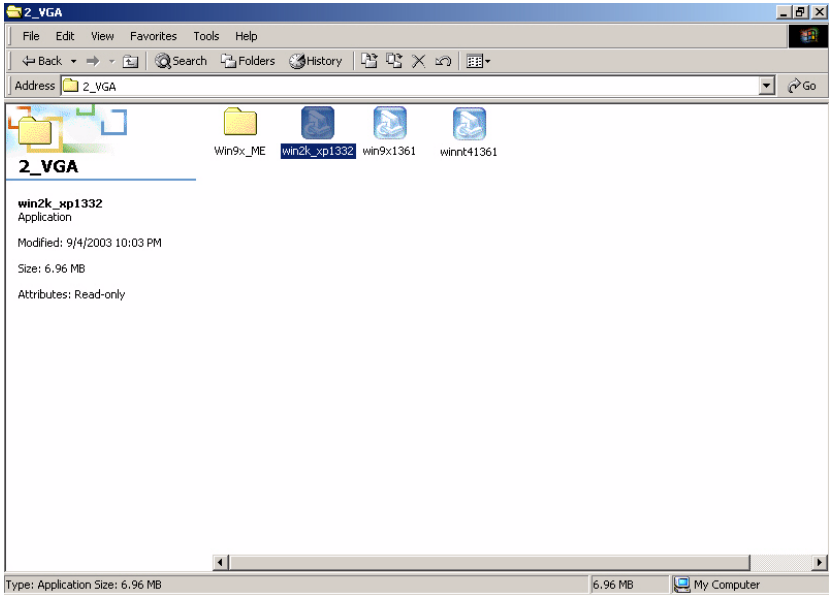


Figure 5.5: CD Directory "VGA"

Double click "setup" and "next" into setup wizard

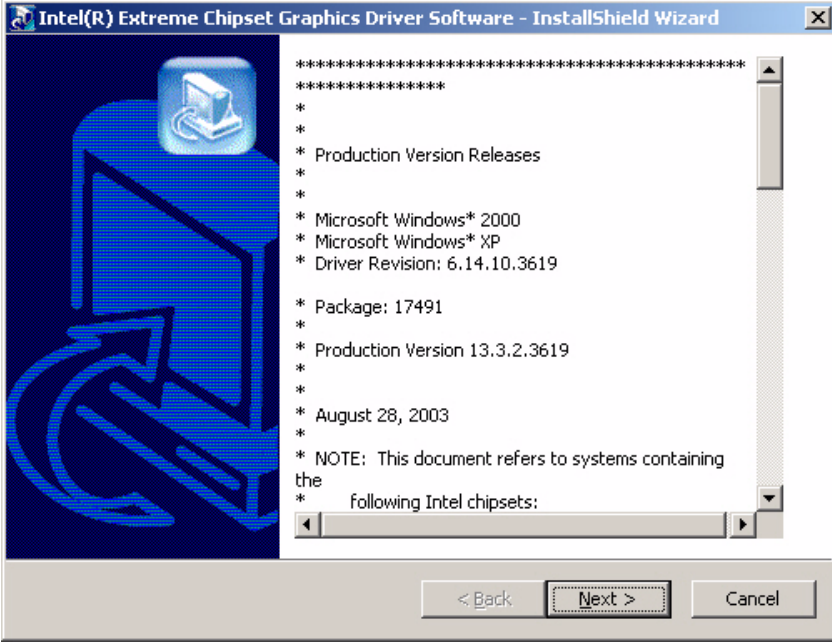


Figure 5.6: Driver Software Install Wizard

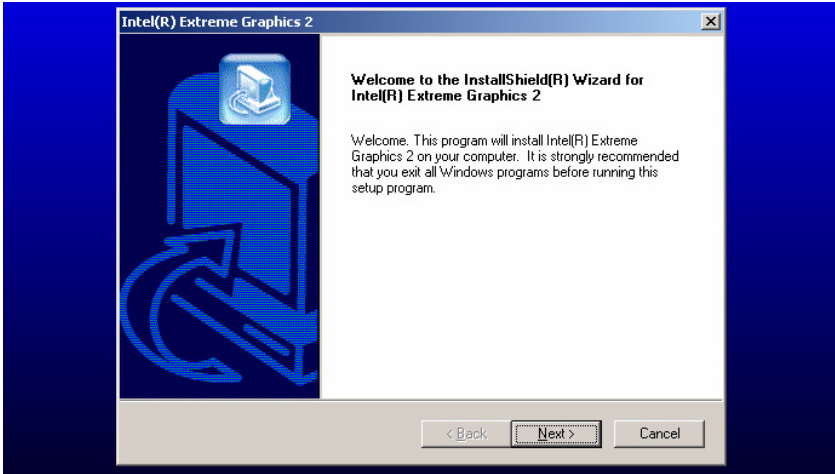


Figure 5.7: Graphics Driver Setup

Restart computer when installation has finished.

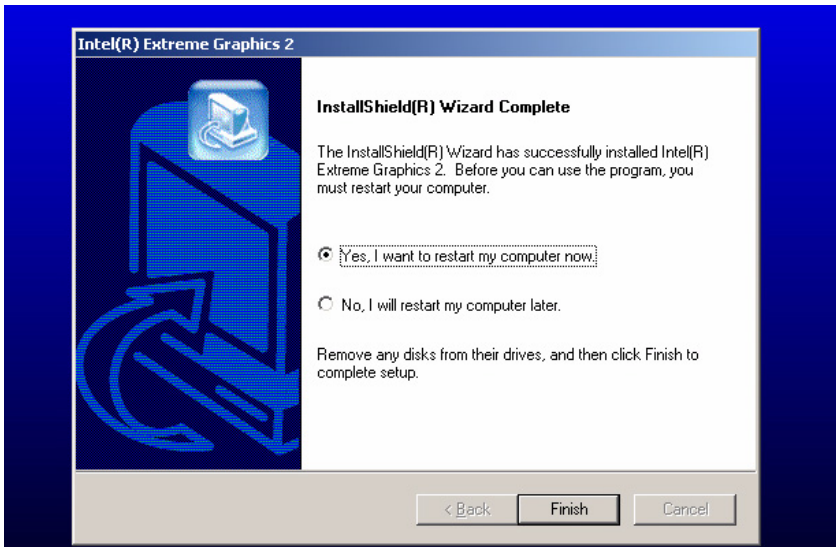


Figure 5.8: InstallShield® Wizard Complete

CHAPTER 6

Full Disassembly Procedure

This chapter details the system disassembling procedure for setting up the jumpers and for maintenance. Sections include:

Chapter 6 Full Disassembly Procedure

6.1 Introduction

If you want to completely disassemble the Embedded Box Computer, follow the step-by-step procedures below. Users should be aware that Advantech Co., Ltd. takes no responsibility whatsoever for any problems or damage caused by the user disassembly of the embedded box computer. Make sure the power cord of the embedded box computer is unplugged before you start disassembly. The following procedures do not include the detailed disassembly procedures for the HDD, Compact Flash Disk and SRAM; all of which can be found in Chapter 3.

1. Unscrew the 2 screws on the bottom side

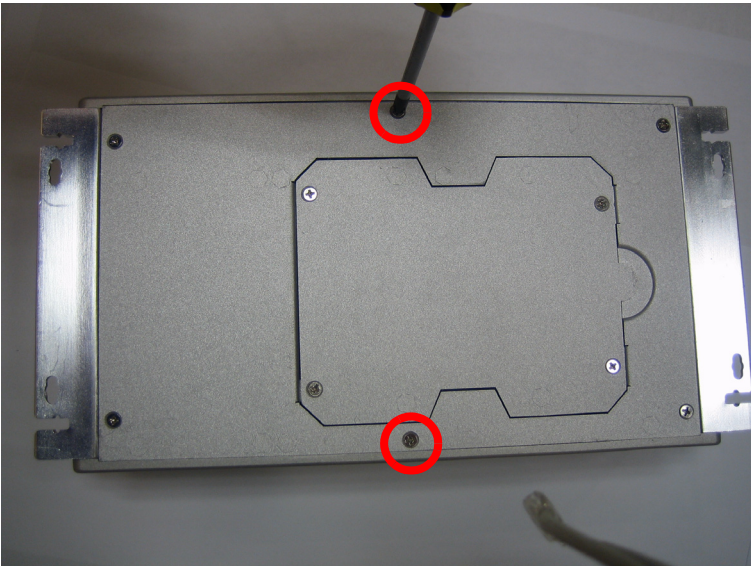


Figure 6.1:

2. Unscrew the screws of the frame bracket on the front side of system



Figure 6.2:

3. Remove the front frame bracket by carefully pulling and lifting the bracket in order to unlock it.

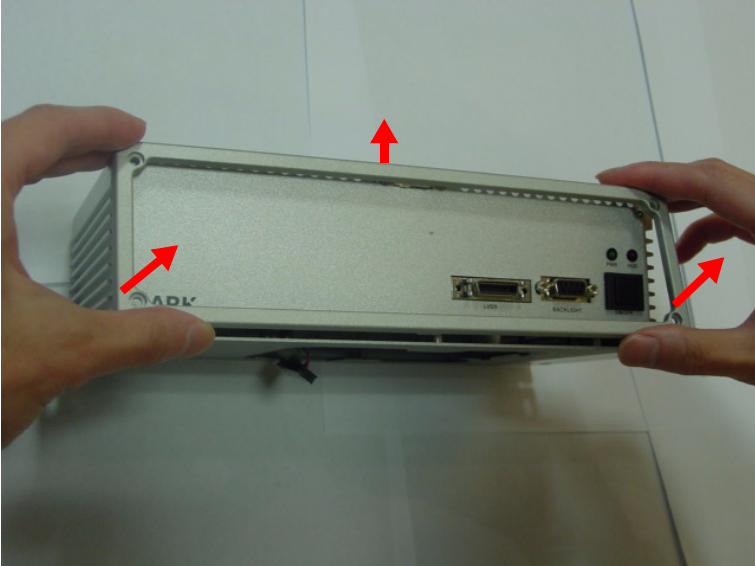


Figure 6.3:

4. The Front Frame Bracket removed



Figure 6.4:

5. Unscrew the 2 screws which are located on the Front Metal Face plate



Figure 6.5:

6. The Front Metal Face Plate removed



Figure 6.6:

Warning: Do not use too much pressure when removing the front metal face plate as the power button cable is still attached and could be damaged.

7. Unscrew the 4 screws of the frame bracket on the rear side of system



Figure 6.7:

8. Remove the rear frame bracket by carefully pulling and lifting the bracket in order to unlock it

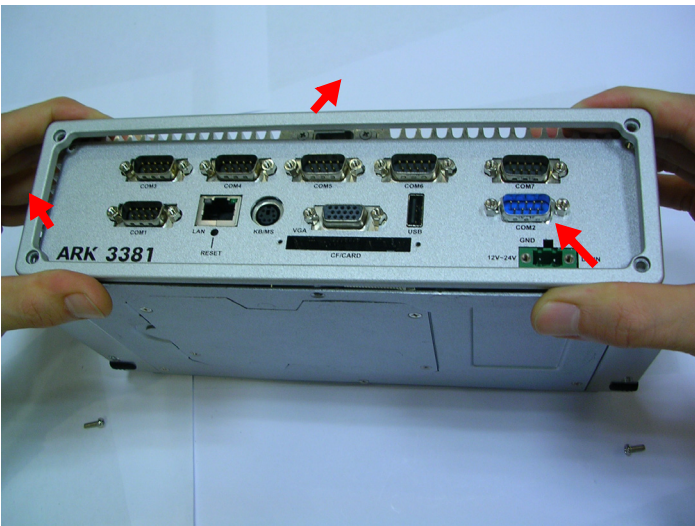


Figure 6.8:

9. Unscrew the 2 screws which are located on the rear metal face plate



Figure 6.9:

10. Disassembly the 2 screws which fixed the "COM2 port" on the Rear Metal Face Plate



Figure 6.10:

Warning: Do not use too much pressure when removing the front metal face plate as the COM2 connector cable is still attached and could be damaged.

11. The Rear Metal Face Plate Removed



Figure 6.11:

12. The system after the top cover has been removed

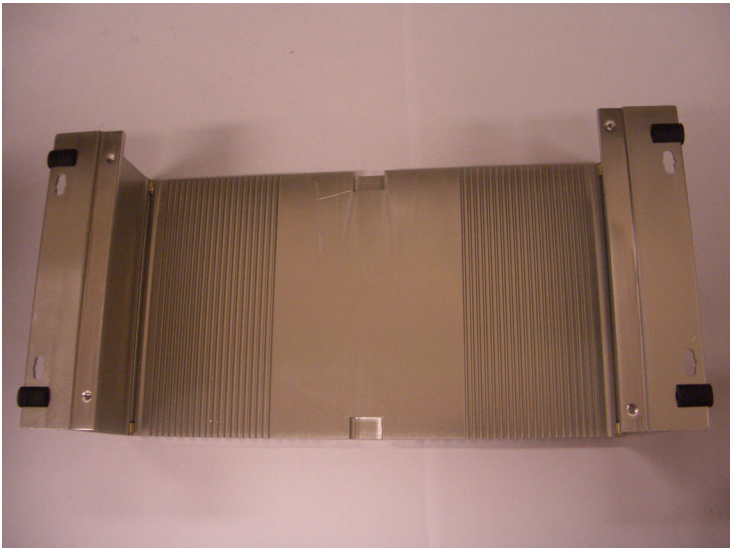


Figure 6.12:

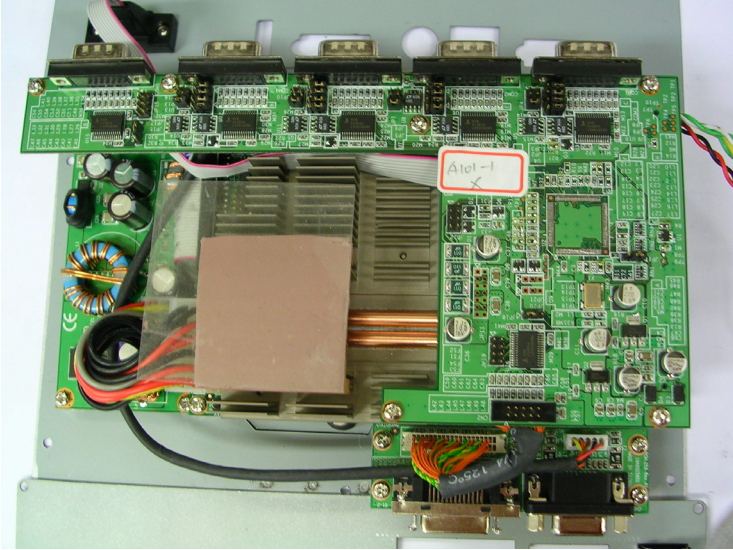


Figure 6.13:

13. Unscrews the 6 screws which fixed the MIO-253 Module I/O board to the system board.

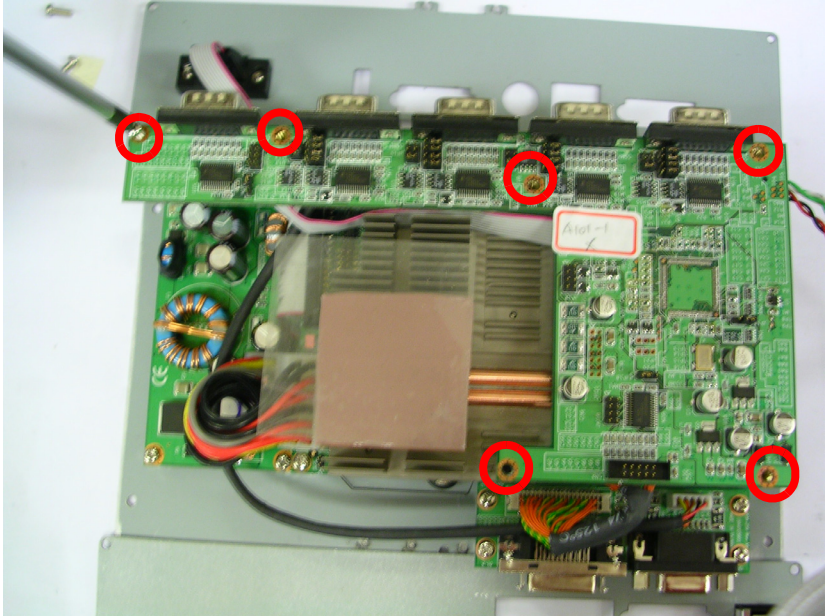


Figure 6.14:

14. Remove MIO-253 Module I/O board from MIO Socket of system board

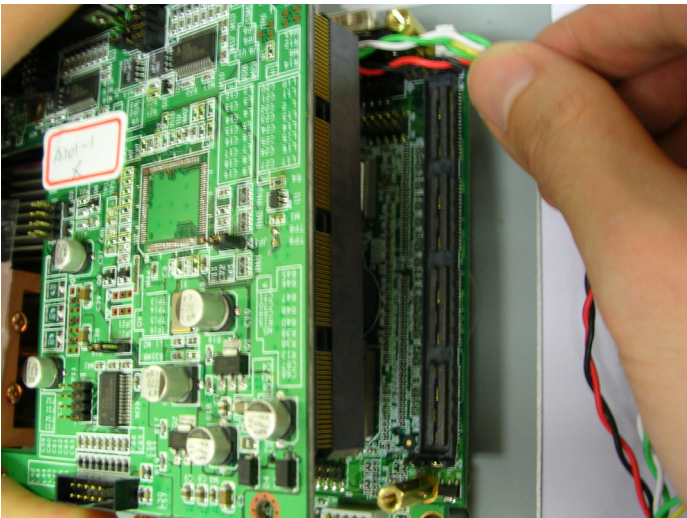


Figure 6.15:

15. The System after MIO-253 Module I/O board removed

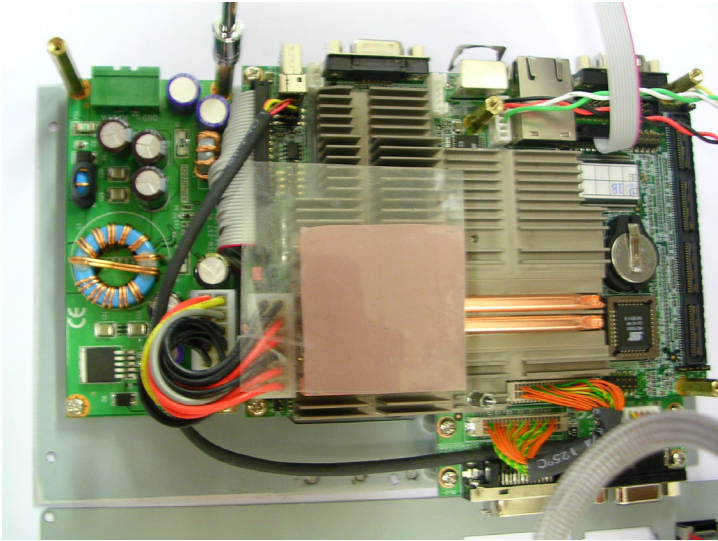


Figure 6.16:

16. Jumper Location on PCM-9380/PCM-9386 Motherboard

COM2
setting

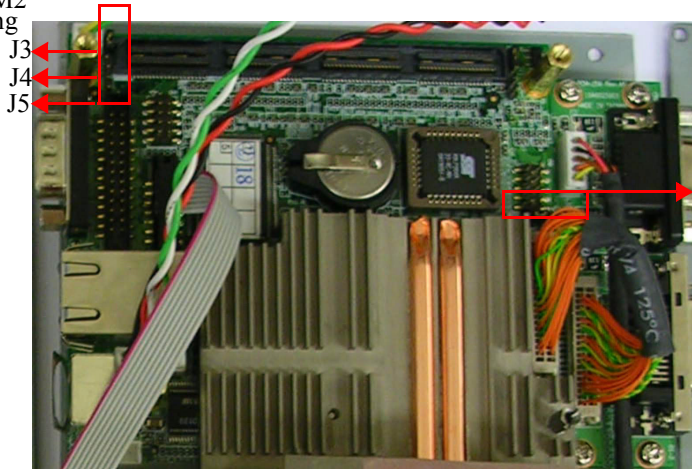


Figure 6.17:

17. The Jumper Setting Location of MIO-253 Module I/O board

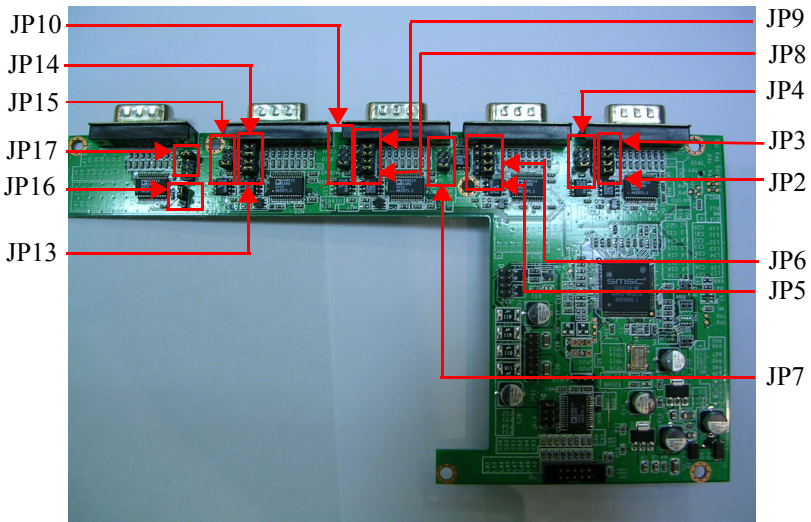


Figure 6.18: