

2012-10-17



5012617001-X201

DVP30EX2

Instruction Sheet

安 裝 說 明
安 裝 說 明

Second Generation Temperature/Analog I/O PLC

溫控類比混合型主機


溫控模擬混合型主機




Thank you for choosing Delta's DVP-EX2 series PLC. DVP-EX2 series provides 30 points MPU (16 points digital Input, 10 points digital Output, 3 channel Analog input and 1 channel Analog output). The maximum I/O points including those on the MPU are 256 points. DVP-EX2 series PLCs satisfy various applications in that they can be used with analog input/output modules. Users do not have to install any batteries in DVP-EX2 series PLCs. The PLC programs and the latched data are stored in the high-speed flash memories.

- ✓ This instruction sheet provides only information on the electrical specification, general functions, installation and wiring. For detailed program design and applicable instructions for DVP-EX2, please refer to "DVP-EX2 Operation Manual: Programming". For details on the optional peripheral, please refer to the instruction sheet enclosed in the package.
- ✓ DVP-EX2 series PLC is an OPEN TYPE device and therefore should be installed in an enclosure free of airborne dust, humidity, electric shock and vibration. The enclosure should prevent non-maintenance staff from operating the device (e.g. key or specific tools are required for operating the enclosure) in case danger and damage on the device may occur.
- ✓ DO NOT connect the input AC power supply to any of the I/O terminals; otherwise serious damage may occur. Check all the wiring again before switching on the power. Make sure the ground terminal  is correctly grounded in order to prevent electromagnetic interference.

■ Product Profile & Dimension

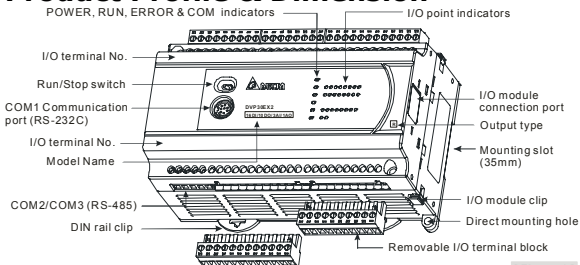

[Figure 1]

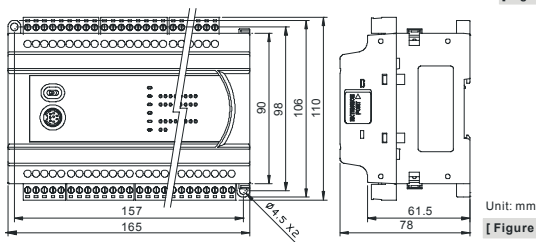

[Figure 2]

■ Electrical Specifications

Model	DVP30EX200R	DVP30EX200T
Item		
Power supply voltage	100 ~ 240VAC (-15% ~ 10%), 50/60Hz ±5%	
Connector	European standard removable terminal block (Pin pitch: 5mm)	
Operation	DVP-EX2 starts to run when the power rises to 95 ~ 100VAC and stops when the power drops to 70VAC. If the power is suddenly cut off, the MPU will continue running for 10ms.	
Power supply fuse	2A/250VAC	
Power consumption	30VA	

Model	DVP30EX200R	DVP30EX200T
Item		
DC24V current output	500mA	
Power supply protection	DC24V output short circuit protection	
Voltage withstand	1,500VAC (Primary-secondary), 1,500VAC (Primary-PE), 500VAC (Secondary-PE)	
Insulation resistance	> 5MΩ at 500VDC (between all I/O points and ground)	
Noise immunity	ESD (IEC 61131-2, IEC 61000-4-2): 8kV Air Discharge EFT (IEC 61131-2, IEC 61000-4-4): Power Line: 2kV, Digital I/O: 1kV, Analog & Communication I/O: 1kV RS (IEC 61131-2, IEC 61000-4-3): 26MHz ~ 1GHz, 10V/m	
Grounding	The diameter of grounding wire shall not be less than that of L, N terminal of the power supply. (When many PLCs are in use at the same time, please make sure every PLC is properly grounded.)	
Environment	Operation: 0°C~55°C (temperature), 50~95% (humidity), pollution degree 2 Storage: -25°C~70°C (temperature), 5~95% (humidity)	
Agency approvals	UL508 European community EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC	
Vibration/shock immunity	International standards: IEC61131-2, IEC 68-2-6 (TEST Fc)/ IEC61131-2 & IEC 68-2-27 (TEST Ea)	
Weight(g)	505	530

Input Point				
Input No.		X0 ~ X3	X4 ~ X7	X10 ~ X17
type		Digital input		
Input type		DC (SINK or SOURCE)		
Input current		24VDC, 5mA		
Input impedance		3.9KΩ	4.7KΩ	
Max. frequency		100kHz	10kHz	60Hz
Action level	Off → On	>15VDC		
	On → Off	< 5VDC		
Response time	Off → On	< 2.5μs	< 20us	< 10ms
	On → Off	< 5μs	< 50us	< 15ms
Filter time	X0 ~ X7	Adjustable within 0 ~ 20ms in D1020 (Default: 10ms)		

Output Point				
Output point type	Relay-R	Transistor-T		
Output point number	All	Y0, Y2	Y1, Y3	Y4~Y11
Voltage specification	< 250VAC, 30VDC	5 ~ 30VDC ^{#1}		
Max. frequency	1Hz	100kHz	10kHz	1kHz
Maximum load	Resistive	2A/1 point (5A/COM)		
	Inductive	#2		
	Lamp	20WDC/100WAC		
Response time	Off → On	Approx .10ms		
	On → Off	< 2μs	< 20μs	< 100μs
		< 3μs	< 30μs	< 100μs

#1: UP, ZP must work with external auxiliary power supply 24VDC (-15% ~ +20%), rated consumption approx. 1mA/point.

#2: Life curves

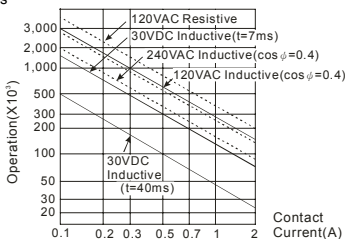


Figure 3

◆ Specifications of A/D, D/A and Temperature Sensors

Items	Analog Input (A/D) ^{#1}				Analog Output (D/A) ^{#1}			
	Voltage		Current		Voltage	Current		
Analog I/O range	±10V	±5V	1~5V	±20mA	4~20mA	±10V	0~20mA	4~20mA
Digital conversion range	±32,000		0~32,000	±32,000	0~32,000	±2,000	0~4,000	
Resolution #2	16-bit					12-bit		
Input impedance	> 1MΩ			250Ω		-		
Output impedance	-					0.5Ω or lower		
Tolerance carried impedance	-					> 5KΩ	< 500Ω	
Response time	25ms ^{#3}					2ms ^{#4}		
Absolute input range	±15V			±32mA		-		
Average function	Provided (set up in D1062) ^{#5}					-		
Temperature Sensor	PT100 / PT1000 Input ^{#1}					NI100 / NI1000 Input ^{#1}		
Temperature Range	-180°C ~ 800°C					-80°C ~ 170°C		
Digital conversion range	-1800 ~ 8000					-800 ~ 1700		
Resolution	20-bit							
Response time	3-Wire: 210ms/2-Wire: 105ms							
Average function	Provided (set up in D1062) ^{#5}							
Overall accuracy	Non-linear accuracy: ±1% of full scale within the range of PLC operation temperature Maximum deviation: ±1% of full scale at 20mA and +10V							
Digital data format	2's complement of 16-bit, 12 significant bits							
Isolation method	No Isolation between digital circuit and analog circuit							
Protection	Voltage output has short circuit protection, but a long period of short circuit may cause internal wire damage and open circuit of current output.							

#1: Detailed explanation of D1115: (Default is HFFF, disable all channels)

Bit15~12(D/A)	Bit11~8(A/D-Ch2)	Bit7~4(A/D-Ch1)	Bit3~0(A/D-Ch0)
D/A output mode	A/D input mode	A/D input mode	A/D input mode

A/D input mode:

Value	0	1	2	3	4	5
Mode	PT100(2wire)	NI100(2wire)	PT1000(2wire)	NI1000(2wire)	PT100(3wire)	NI100(3wire)
Value	6	7	8	9	A	B
Mode	PT1000(3wire)	NI1000(3wire)	-10V ~ +10V	-5V ~ +5V	+1V ~ +5V	-20mA~+20mA
Value	C	D	E	F		
Mode	4mA ~ 20mA	Reserved		Disabled		

D/A output mode:

Value	0	1	2	3~E	F
Mode	-10V ~ +10V	0mA ~ 20mA	4mA ~ 20mA	Reserved	Disabled

For example: Assume A/D-Ch0 is PT100(3wire), A/D-Ch1 is PT100(2wire), A/D-Ch2 is 4mA~20mA and D/A is 4~20mA, then the D1115 will be set to H2C04.

#2: Resolution formula

Analog Input (A/D)		Analog Output (D/A)	
Voltage	Current	Voltage	Current
$(312.5\mu V = \frac{20V}{64000})$	$(0.625\mu A = \frac{40mA}{64000})$	$(5mV = \frac{20V}{4000})$	$(5\mu A = \frac{20mA}{4000})$

#3: When the scan period is longer than 25ms, the setting will follow the scan period.

#4: When the scan period is longer than 2ms, the setting will follow the scan period.

#5: When the sampling range is "1", the present value will be read. The setting range is 1~15.

#6: PT sensors support PT100 and PT1000. The unit of the value is 0.1°C. That is, 1 indicates 0.1°C, 2 indicates 0.2°C, and etc.


#7: NI sensors support NI100 and NI1000. The unit of the value is 0.1°C. That is, 1 indicates 0.1°C, 2 indicates 0.2°C, and etc.

■ Installation

Please install the PLC in an enclosure with sufficient space around it to allow heat dissipation, as shown in the figure.

• **Direct Mounting:** Please use M4 screw according to the dimension of the product.

• **DIN Rail Mounting:** When mounting the PLC to 35mm DIN rail, be sure to use the retaining clip to stop any side-to-side movement of the PLC and reduce the chance of wires being loose. The retaining clip is at the



bottom of the PLC. To secure the PLC to DIN rail, pull down the clip, place it onto the rail and gently push it up. To remove the PLC, pull the retaining clip down with a flat screwdriver and gently remove the PLC from DIN rail.

■ Wiring

1. Use the 12-24 AWG single-core bare wire or the multi-core wire for the I/O wiring. The PLC terminal screws should be tightened to 3.80 kg-cm (3.30 in-lbs) and please use 60/75°C copper conductor only.
2. DO NOT wire empty terminal. DO NOT place the input signal wire and output power wire in the same wiring circuit.
3. DO NOT drop tiny metallic conductor into the PLC while screwing and wiring.
 - Please attach the dustproof sticker to the PLC before the installation to prevent conductive objects from dropping in.
 - Tear off the sticker before running the PLC to ensure normal heat dissipation.


◆ Power Supply

The power input type for DVP-EX2 model is AC input. When operating DVP-EX2, please note the following points:

1. The range of the input voltage should be 100 ~ 240VAC. The power supply should be connected to L and N terminals. Please note that wiring AC110V or AC220V to +24V output terminal or digital input points will result in serious damage on the PLC.
2. The AC power inputs for the MPU and the digital I/O module should be ON or OFF at the same time.
3. Use 1.6mm wire (or longer) for the grounding of the PLC.
4. The power shutdown of less than 10ms will not affect the operation of the PLC. However, power shutdown time that is too long or the drop of power supply voltage will stop the running of the PLC, and all outputs will go "OFF". When the power returns to normal status, the PLC will automatically resume operation. (Care should be taken on the latched auxiliary relays and registers inside the PLC when programming.)
5. The +24V output is rated at 0.5A from MPU. DO NOT connect other external power supplies to this terminal. Every input terminal requires 5 ~ 7mA to be driven; e.g. the 16-point input will require approximately 100mA. Therefore, +24V terminal cannot give output to the external load that is more than 400mA.

◆ Safety Wiring

In PLC control system, many devices are controlled at the same time and actions of any device could influence each other, i.e. breakdown of any device may cause the breakdown of the entire auto-control system and danger. Therefore, we suggest you wire a protection circuit at the power supply input terminal. See the figure below.

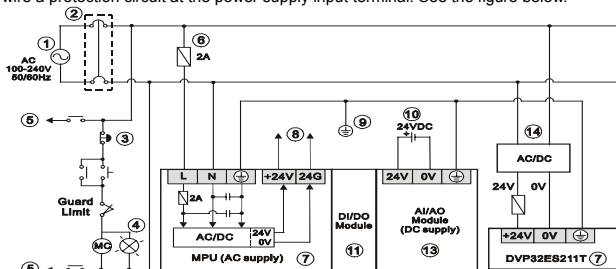

[Figure 4]


- | | |
|---|----------------------------------|
| ① AC power supply: 100 ~ 240VAC, 50/60Hz | ② Breaker |
| ③ Emergency stop: This button cuts off the system power supply when accidental emergency takes place. | |
| ④ Power indicator | ⑤ AC power supply load |
| ⑥ Power supply circuit protection fuse (2A) | ⑦ DVP-PLC (main processing unit) |
| ⑧ DC power supply output: 24VDC, 500mA | ⑨ Grounding resistance: < 100Ω |
| ⑩ DC power supply: 24VDC | ⑪ Digital I/O module (DC supply) |

◆ I/O Point Wiring

There are 2 types of DC inputs, SINK and SOURCE. (See the example below. For detailed point configuration, please refer to the specification of each model.)

• DC Signal IN – SINK mode


Input point loop equivalent circuit

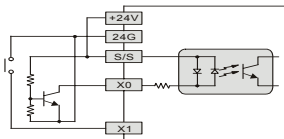

[Figure 5]


• DC Signal IN – SOURCE mode

Input point loop equivalent circuit

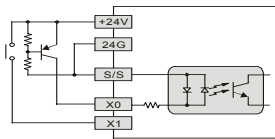


[Figure 6]


• Relay (R) output circuit wiring

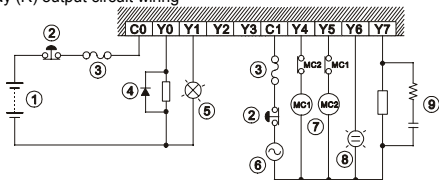


[Figure 7]

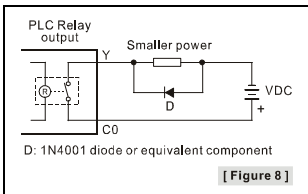

[Figure 8]

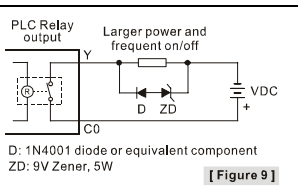

[Figure 9]

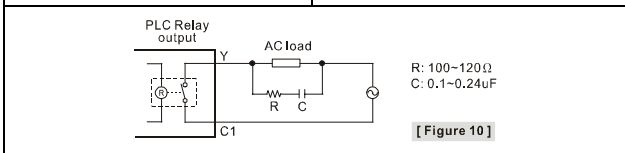

[Figure 10]

① DC power supply

② Emergency stop: Uses external switch

③ Fuse: Uses 5 ~ 10A fuse at the shared terminal of output contacts to protect the output circuit

④ Transient voltage suppressor: To extend the life span of contact.

1. Diode suppression of DC load: Used when in smaller power (Figure 8)

2. Diode + Zener suppression of DC load: Used when in larger power and frequent On/Off (Figure 9)

⑤ Incandescent light (resistive load)


⑥ AC power supply

⑦ Manually exclusive output: For example, Y4 and Y5 control the forward running and reverse running of the motor, forming an interlock for the external circuit, together with the PLC internal program, to ensure safe protection in case of any unexpected errors.


⑧ Neon indicator

⑨ Absorber: To reduce the interference on AC load (Figure 10)


• Transistor (T) output circuit wiring

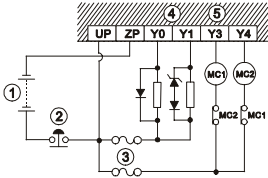

[Figure 11]

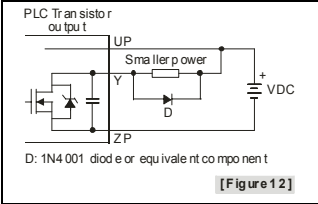

[Figure 12]

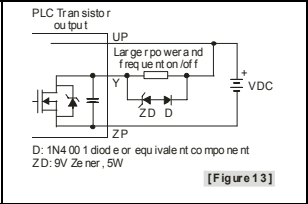


[Figure 13]

- ① DC power supply ② Emergency stop ③ Circuit protection fuse
- ④ The output of the transistor model is "open collector". If Y0/Y1 is set to pulse output, the output current has to be bigger than 0.1A to ensure normal operation of the model.
1. Diode suppression: Used when in smaller power (Figure 12)
2. Diode + Zener suppression: Used when in larger power and frequent On/Off (Figure 13)
- ⑤ Manually exclusive output: For example, Y3 and Y4 control the forward running and reverse running of the motor, forming an interlock for the external circuit, together with the PLC internal program, to ensure safe protection in case of any unexpected errors.


◆ Wiring of A/D, D/A, and Temperature Sensors

• A/D: Active

• A/D: Passive

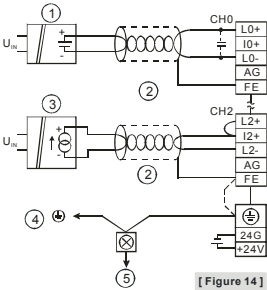


[Figure 14]

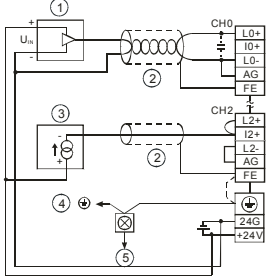


[Figure 15]

• D/A

• PT/NI

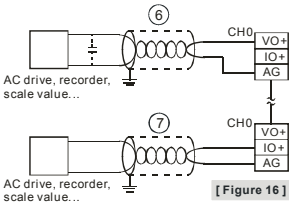

[Figure 16]

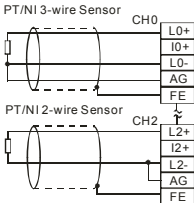


[Figure 17]

感謝您採用台達 DVP-EX2 系列可程式控制器。此系列提供 30 點數的主機 (包含 16 點數位輸入、10 點數位輸出、3 點類比輸入及 1 點類比輸出)，含主機最大輸入/輸出擴充最多可達 256 點。另可搭配類比輸入/輸出模組使用，以滿足各種應用場合。全系列採用免電池設計，其 PLC 程式與停電保持資料皆運用高速快閃記憶體儲存。

- ✳ 本安裝說明書提供給使用者電氣規格、功能規格、安裝配線之相關注意事項。其他詳細之程式設計及指令說明請見 DVP-EX2 操作手冊【程式篇】，選購之周邊裝置詳細說明請見該產品隨機安裝說明書。
- ✳ 本機為開放型 (OPEN TYPE) 機殼，因此使用者使用本機時，必須將之安裝於具防塵、防潮及免於電擊/衝擊意外之外殼配線箱內。另必須具備保護措施 (如：特殊之工具或鑰匙才可打開) 防止非維護人員操作或意外衝擊本體，造成危險及損壞。
- ✳ 交流輸入電源不可連接於輸入/輸出信號端，否則可能造成嚴重損壞，請在上電之前再次確認電源配線。請勿在上電時觸摸任何端子。本體上之接地端子 $\oplus$ 務必正確的接地，可提高產品抗雜訊能力。

■ 產品外觀尺寸與部位介紹

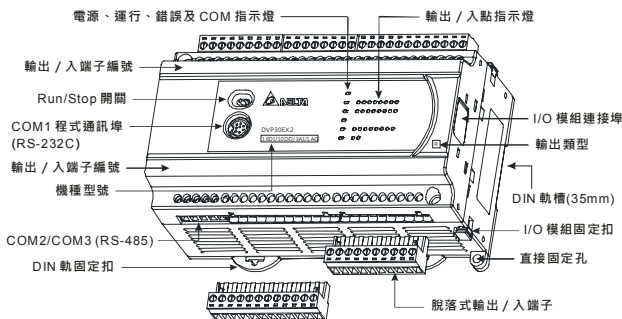

- 詳細尺寸圖請參閱英文版頁碼 1 之[Figure 2]，單位：mm。

■ 電氣規格

機種	DVP30EX200R	DVP30EX200T
項目		
電源電壓	100 ~ 240VAC (-15% ~ 10%)，50 / 60Hz ± 5%	
連接方式	脫落式歐式端子座 (端點距離：5mm)	
動作規格	當電源緩升至 95 ~ 100VAC 時，PLC 開始動作，當電源緩降至 70VAC 時，PLC 停止動作。電源瞬間斷電 10ms 以內繼續運行。	
電源保險絲容量	2A / 250VAC	
消耗功率	30VA	
DC24V 電流輸	500mA	
電源保護	DC24V 輸出具短路保護	
突波電壓耐受量	1,500VAC (Primary-secondary)、1,500VAC (Primary-PE)、500VAC (Secondary-PE)	
絕緣阻抗	5MΩ 以上 (所有輸出/入點對地之間 500VDC)	

機種 項目	DVP30EX200R	DVP30EX200T
雜訊免疫力	ESD (IEC 61131-2, IEC 61000-4-2): 8kV Air Discharge EFT (IEC 61131-2, IEC 61000-4-4): Power Line: 2kV, Digital I/O: 1kV, Analog & Communication I/O: 1kV RS (IEC 61131-2, IEC 61000-4-3): 26MHz ~ 1GHz, 10V/m	
接地	接地配線之線徑不得小於電源端 L, N 之線徑 (多台 PLC 同時使用時 · 請務必單點接地)	
操作/儲存環境	操作: 0°C ~ 55°C (溫度) · 50 ~ 95% (濕度) 污染等級 2 儲存: -25°C ~ 70°C (溫度) · 5 ~ 95% (濕度)	
認證標準	UL508 European community EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC	
耐振動/衝擊	國際標準規範 IEC61131-2 · IEC 68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)	
重量(公克)	505	530

輸 入 點 電 氣 規 格				
輸入點 No.	X0 ~ X3	X4 ~ X7	X10 ~ X17	
輸入點類型	數位輸入			
輸入形式	直流 (SINK 或 SOURCE)			
輸入電流	24VDC, 5mA			
輸入阻抗	3.9KΩ	4.7KΩ		
最高切換頻率	100kHz	10kHz	60Hz	
動作位準	Off → On	> 15VDC		
	On → Off	< 5VDC		
反應時間	Off → On	< 2.5μs	< 20us	< 10ms
	On → Off	< 5μs	< 50us	< 15ms
濾波時間	X0 ~ X7	由 D1020 可作 0 ~ 20ms 的調整 (預設值 10ms)		

輸 出 點 電 氣 規 格					
輸出點形式		繼電器-R	電晶體-T		
輸出點 No.		全部	Y0, Y2	Y1, Y3	Y4~Y11
電壓規格		250VAC, 30VDC 以下	5 ~ 30VDC ^{#1}		
最高切換頻率		1Hz	100kHz	10kHz	1kHz
最大負載	電阻性	2A/1 點 (5A/COM)	0.5A/1 點 (4A/ZP)		
	電感性	^{#2}	15W (30VDC)		
	燈泡	20WDC/100WAC	2.5W(30VDC)		
反應時間	Off → On	約 10 ms	< 2μs	< 20μs	< 100μs
	On → Off		< 3μs	< 30μs	< 100μs

#1 : UP, ZP 必須外加輔助電源 24VDC (-15% ~ +20%) 額定消耗約 1mA/點。

#2 : 生命週期曲線圖請參閱英文版頁碼 3 之[Figure 3]。

AD、DA 與溫度感測器規格

類比項目	類比輸入 (A/D) #1				類比輸出 (D/A) #1		
	電壓		電流		電壓	電流	
輸入/輸出範圍	±10V	±5V	1~5V	±20mA	±10V	0~20mA	4~20mA

類比項目	類比輸入 (A/D) ^{#1}			類比輸出 (D/A) ^{#1}	
	電壓		電流	電壓	電流
數位轉換範圍	±32,000	0~32,000	±32,000	±2,000	0~4,000
解析度 ^{#2}	16-bit			12-bit	
輸入阻抗	> 1MΩ		250 Ω	-	
輸出阻抗	-			0.5Ω or lower	
容許負載阻抗	-			> 5KΩ	< 500Ω
回應時間	25ms ^{#3}			2ms ^{#4}	
絕對輸入範圍	±15V	±32mA		-	
平均功能	有 (由 D1062 設定) ^{#5}			-	
溫度感測器	PT100 / PT1000 ^{#1}			NI100 / NI1000 ^{#1}	
溫度範圍	-180°C ~ 800°C			-80°C ~ 170°C	
數位轉換範圍	-1800 ~ 8000			-800 ~ 1700	
解析度	20-bit				
反應時間	3 線式：210ms / 2 線式：105ms				
平均功能	有 (由 D1062 設定) ^{#5}				
總和精密度	非線性精度：±1%在整個溫度範圍內滿刻度時 最大誤差：±1%在滿刻度 20mA 及+10V 時				
數位資料格式	16 位 2 補數 (有效位 12 bits)				
隔離方式	數位及類比電路間未隔離				
保護	電壓輸出有短路保護，但須注意長時間短路時，仍有可能造成內部線路損壞， 電流輸出可開路。				

#1：D1115 通道模式設定說明如下：(預設值為 HFFFF，通道全部關閉)

Bit15~12(D/A)	Bit11~8(A/D-Ch2)	Bit7~4(A/D-Ch1)	Bit3~0(A/D-Ch0)
D/A 輸出模式	A/D 輸入模式	A/D 輸入模式	A/D 輸入模式

A/D 輸入模式：

數值	0	1	2	3	4	5
模式	PT100(2 線)	NI100(2 線)	PT1000(2 線)	NI1000(2 線)	PT100(3 線)	NI100(3 線)
數值	6	7	8	9	A	B
模式	PT1000(3 線)	NI1000(3 線)	-10V ~ +10V	-5V ~ +5V	+1V ~ +5V	-20mA~+20mA
數值	C	D	E	F		
模式	4mA ~ 20mA	保留		關閉		

D/A 輸出模式：

數值	0	1	2	3~E	F
模式	-10V ~ +10V	0mA ~ 20mA	4mA ~ 20mA	保留	關閉

例子：假設 A/D-Ch0 是 PT100(3 線)，A/D-Ch1 是 PT100(2 線)，A/D-Ch2 是 4mA~20mA 及 D/A 是 4~20mA，則 D1115 將被設定為 H2C04。

#2：解析度計算

類比電壓輸入	類比電流輸入	類比電壓輸出	類比電流輸出
$(312.5\mu V = \frac{20V}{64000})$	$(0.625\mu A = \frac{40mA}{64000})$	$(5mV = \frac{20V}{4000})$	$(5\mu A = \frac{20mA}{4000})$

#3：當掃描週期大於 25ms 時，以掃描週期為主。

#4：當掃描週期大於 2ms 時，以掃描週期為主。


#5：當平均次數 D1062 為 1 時，即是讀取現在值。設定數值範圍 1~15。

#6：PT 感測計支援的種類有 PT100 和 PT1000，單位為 0.1°C 即 1 表 0.1°C；2 表 0.2°C。

#7：NI 感測計支援的種類有 NI100 和 NI1000，單位為 0.1°C 即 1 表 0.1°C；2 表 0.2°C。

■ 安裝方式

PLC 在安裝時，請裝配於封閉式之控制箱內，其周圍應保持一定之空間(如圖所示)，以確保 PLC 散熱功能正常。



- 直接鎖螺絲方式：請依產品外形尺寸並使用 M4 螺絲。
- DIN 鋁軌之安裝方法：適用於 35mm 之 DIN 鋁軌。在將主機掛上鋁軌時，請先將主機 (或數位輸入/輸出模組) 下方之固定塑膠片，以一字形起子插入凹槽並向外撐開拉出，再將主機 (或數位輸入/輸出模組) 掛上鋁軌，之後將固定塑膠片壓扣回去即可。欲取下主機時，同樣以一字形起子先將固定塑膠片撐開，再將主機以往外向上的方式取出即可。該固定機構塑膠片為保持型，因此撐開後便不會彈回去。

■ 配線端子

1. 輸出/輸入配線端請使用 12-24 AWG 單蕊裸線或多蕊線。PLC 端子螺絲扭力為 3.80 kg-cm (3.30 lb-in)。請使用 60/75°C 銅導線。
2. 空端子，請勿配線。輸入點信號線與輸出點等動力線請勿置於同一線槽內。
3. 鎖螺絲及配線時請避免微小的金屬導體掉入 PLC 內部。
 - 安裝前請貼上防塵貼紙，防止導電異物掉入。
 - 運轉前請撕下防塵貼紙，保持良好散熱效果。

◆ 電源端

DVP-EX2 之電源輸入為交流輸入機種時，在使用上應注意下列事項：

1. 交流電源輸入電壓，範圍寬廣 (100 ~ 240VAC)，電源請接於 L·N 兩端，如果將 AC110V 或 AC220V 接至 +24V 輸出端或數位輸入點端，將使 PLC 損壞，請使用者特別注意。
2. 主機及數位輸入/輸出模組之交流電源輸入請同時作 On 或 Off 的動作。
3. 主機之接地端使用 1.6mm 以上之電線接地。
4. 當停電時間低於 10ms 時，PLC 不受影響繼續運轉，當停電時間過長或電源電壓下降將使 PLC 停止運轉，輸出全部 Off，當電源恢復正常時，PLC 亦自動回復運轉。(PLC 內部具有停電保持的輔助繼電器及暫存器，使用者在程式設計規劃時應注意使用。)
5. +24V 電源供應輸出端，最大為 0.5A，請勿將其他的外部電源連接至此端子。每個輸入點驅動電流必須 5 ~ 7mA，若以 16 點輸入計算，大約需 100mA，因此 +24V 輸出給外部負載不可大於 400mA。

◆ 安全配線回路

由於 PLC 控制許多裝置，任一裝置的動作可能都會影響其他裝置的動作，因此任一裝置的故障都可能造成整個自動控制系統失控，甚至造成危險。所以在電源端輸入回路，建議的保護回路配置圖如英文版頁碼 5 之 [Figure 4] 所示：

① 交流電源供應：100 ~ 240VAC, 50/60Hz	② 斷路器
③ 緊急停止：為預防突發狀況發生，設置緊急停止按鈕，可在狀況發生時，切斷系統電源。	
④ 電源指示燈	⑤ 交流電源負載
⑥ 電源回路保護用保險絲 (2A)	⑦ DVP PLC 主機本體
⑧ 直流電源供應輸出：24VDC，500mA	⑨ 接地阻抗 100Ω 以下
⑩ 直流電源供應：24VDC	⑪ 數位輸入/輸出模組 (直流供應)
⑫ 數位輸入/輸出模組 (交流供應)	⑬ 類比輸入/輸出模組 (直流供應)
⑭ 直流電源供應：20.4VDC ~ 28.8VDC	

◆ 輸入輸出點之配線

輸入點之入力信號為直流電源 DC 輸入，DC 型式共有兩種接法：SINK 及 SOURCE，其定義如下：(以下為舉例說明，詳細點數配置請見各機種)

- 直流形式 (DC Signal IN) 配線 – SINK 模式

輸入點回路等效電路配線圖，請參閱英文版頁碼 6 之[Figure 5]。

- 直流形式 (DC Signal IN) 配線 – SOURCE 模式

輸入點回路等效電路配線圖，請參閱英文版頁碼 6 之[Figure 6]。

- 實用之繼電器輸出回路配線

詳細配線圖請參閱英文版頁碼 6 之[Figure 7]。

① 直流電源供給

② 緊急停止：使用外部開關

③ 保險絲：使用 5 ~ 10A 的保險絲容量於輸出接點的共用點，保護輸出點回路。

④ 突波吸收二極體：可增加接點壽命。

1. DC 負載電源之二極體抑制：功率較小時使用 (請參閱英文版頁碼 6 之[Figure 8])

2. DC 負載電源之二極體+Zener 抑制：大功率且 On/Off 頻繁時使用 (請參閱英文版頁碼 6 之[Figure 9])

⑤ 白熾燈 (電阻性負載)

⑥ 交流電源供給

⑦ 互斥輸出：例如，將 Y4 與 Y5 用以控制對應馬達的正轉及反轉，使外部電路形成互鎖，配合 PLC 內部程式，確保任何異常突發狀況發生時，均有安全的保護措施。

⑧ 指示燈：氖燈

⑨ 突波吸收器：可減少交流負載上的雜訊 (請參閱英文版頁碼 6 之[Figure 10])

- 實用之電晶體輸出回路配線

詳細配線圖請參閱英文版頁碼 7 之[Figure 11]。

① 直流電源供應

② 緊急停止

③ 電路回路保護用保險絲

④ 因電晶體模組輸出均為開集極輸出 (Open Collector)，若 Y0/Y1 設定為脈波串輸出，為確保電晶體模組能夠動作正常，其輸出提升電阻，必須維持輸出電流大於 0.1A。

1. 二極體抑制：功率較小時使用 (請參閱英文版頁碼 7 之[Figure 12])

2. 二極體+Zener 抑制：大功率且 On/Off 頻繁時使用 (請參閱英文版頁碼 7 之[Figure 13])

⑤ 互斥輸出：例如，將 Y3 與 Y4 用以控制對應馬達的正轉及反轉，使外部電路形成互鎖，配合 PLC 內部程式，確保任何異常突發狀況發生時，均有安全的保護措施。

◆ A/D、D/A 與溫度感測計之外部配線

詳細接線圖請參閱英文版頁碼 7-8 之[Figure 14-17]。

① 電壓輸入

② 隔離線

③ 電流輸入

④ 接至電源模組之端子

⑤ 第三種接地接地阻抗(100Ω以下)

⑥ 電壓輸出

⑦ 電流輸出

註：如果連接電流訊號時，V+ 及 I+ 端子請務必短路。

◆ RS-485 建議接線

詳細接線圖請參閱英文版頁碼 8 之[Figure 18]。

① 主站

② 從站

③ 終端電阻

④ 遮蔽線

附註：1. 終端電阻建議連接於主站及最後一台從站上，且其電阻值建議為 120Ω。

2. 為確保連線品質，線材建議使用具有雙層遮蔽線之通訊雙絞線(20AWG)。

3. 當兩個系統內部地準位存在壓降，可透過連接 SG (Signal Ground) 讓地準位等電位，使通訊更加穩定。

■ 輸入輸出端子台配置

請參閱英文版頁碼 8 之端子配置，在此語言版本省略說明。

■ 萬年曆的精度 (秒 / 月)


溫度 (°C/°F)	0/32	25/77	55/131
最大誤差 (秒)	-117	52	-132

萬年曆停電保持時間：一週 (僅支援版本 V2.00 以上)

感谢您采用台达 DVP-EX2 系列可编程控制器。此系列提供 30 点数的主机 (包含 16 点数字输入、10 点数字输出、3 点模拟输入及 1 点模拟输出)，含主机最大输入 / 输出扩展最多可达 256 点。另依主机输入 / 输出点数、电源、数字量输入/输出与模拟量输入 / 输出模块搭配使用，可满足各种应用场合。另可搭配模拟输入 / 输出模块使用，以满足各种应用场合。全系列采用免电池设计，其 PLC 程序与停电保持数据皆运用高速闪存储存。

- ✓ 本安装说明书提供给使用者电气规格、功能规格、安装配线的相关注意事项。其它详细的程序设计及指令说明请见 DVP-EX2 操作手册【程序篇】，选购的周边装置详细说明请见该产品随机安装说明书。
- ✓ 本机为开放型 (OPEN TYPE) 机种，因此使用者使用本机时，必须将其安装于具防尘、防潮及免于电击 / 冲击意外的外壳配线箱内。另必须具备保护措施 (如：特殊的工具或钥匙才可打开) 防止非维护人员操作或意外冲击本体，造成危险及损坏。
- ✓ 交流输入电源不可连接于输入 / 出信号端，否则可能造成严重损坏，请在上电之前再次确认电源配线。请勿在上电时触摸任何端子。本体上的接地端子 ④ 务必正确的接地，可提高产品抗干扰能力。

■ 产品外观尺寸与部位介绍

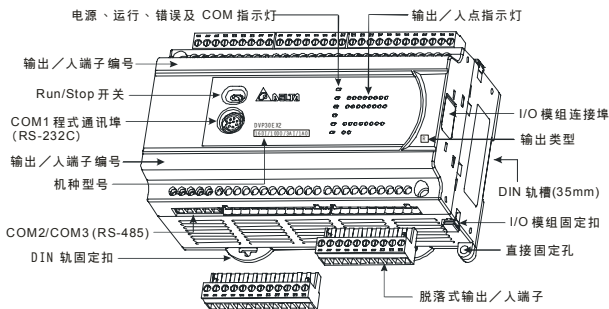

- 详细尺寸图请参阅英文版页码 1 之[Figure 2]，单位：mm。

■ 电气规格

机种	DVP30EX200R	DVP30EX200T
项目		
电源电压	100 ~ 240VAC (-15% ~ 10%)，50 / 60Hz ± 5%	
连接方式	脱落式欧式端子座 (端点距离：5mm)	
动作规格	当电源缓升至 95 ~ 100VAC 时，PLC 开始动作，当电源缓降至 70VAC 时，PLC 停止动作。电源瞬间断电 10ms 以内继续运行。	
电源保险丝容量	2A / 250VAC	
消耗功率	30VA	
DC24V 电流输	500mA	
电源保护	DC24V 输出具短路保护	
突波电压耐受量	1,500VAC (Primary-secondary)、1,500VAC (Primary-PE)、500VAC (Secondary-PE)	
绝缘阻抗	5MΩ 以上 (所有输出/入点对地之间 500VDC)	

机种 项目	DVP30EX200R	DVP30EX200T
噪声免疫力	ESD (IEC 61131-2, IEC 61000-4-2): 8kV Air Discharge EFT (IEC 61131-2, IEC 61000-4-4): Power Line: 2kV, Digital I/O: 1kV, Analog & Communication I/O: 1kV RS (IEC 61131-2, IEC 61000-4-3): 26MHz ~ 1GHz, 10V/m	
接地	接地配线之线径不得小于电源端 L, N 之线径 (多台 PLC 同时使用时 · 请务必 单点接地)	
操作/储存环境	操作: 0°C ~ 55°C (温度) · 50 ~ 95% (湿度) 污染等级 2 储存: -25°C ~ 70°C (温度) · 5 ~ 95% (湿度)	
认证标准	UL508 European community EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC	
耐振动/冲击	国际标准规范 IEC61131-2 · IEC 68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)	
重量(公克)	505	530

输 入 点 电 气 规 格			
输入点 No.	X0 ~ X3	X4 ~ X7	X10 ~ X17
输入点类型	数字输入		
输入形式	直流 (SINK 或 SOURCE)		
输入电流	24VDC, 5mA		
输入阻抗	3.9KΩ	4.7KΩ	
最高切换频率	100kHz	10kHz	60Hz
动作位准	Off → On	> 15VDC	
	On → Off	< 5VDC	
反应时间	Off → On	< 2.5μs	<20us
	On → Off	< 5μs	<50us
滤波时间	X0 ~ X7	由 D1020 可作 0 ~ 20ms 的调整 (默认值 10ms)	

输 出 点 电 气 规 格					
输出点形式	继电器-R		晶体管-T		
输出点 No.	全部		Y0, Y2	Y1, Y3	Y4~Y11
电压规格	250VAC, 30VDC 以下		5 ~ 30VDC #1		
最高切换频率	1Hz		100kHz	10kHz	1kHz
最大负载	电阻性	2A/1 点 (5A/COM)		0.5A/1 点 (4A/ZP)	
	电感性	#2		15W (30VDC)	
	灯泡	20WDC/100WAC		2.5W(30VDC)	
反应时间	Off → On	约 10 ms	< 2μs	< 20μs	< 100μs
	On → Off		< 3μs	< 30μs	< 100μs

#1 : UP, ZP 必须外加辅助电源 24VDC (-15% ~ +20%) 额定消耗约 1mA/点。

#2 : 生命周期曲线图请参阅英文版页码 3 之[Figure 3]。

AD、DA 与温度传感器规格

模拟项目	模拟输入 (A/D) #1				模拟输出 (D/A) #1		
	电压		电流		电压	电流	
输入/输出范围	±10V	±5V	1~5V	±20mA	±10V	0~20mA	4~20mA

模拟项目	模拟输入 (A/D) ^{#1}		模拟输出 (D/A) ^{#1}		
	电压		电流	电压	电流
数字转换范围	±32,000	0~32,000	±32,000	±2,000	0~4,000
分辨率 ^{#2}	16-bit			12-bit	
输入阻抗	> 1MΩ		250 Ω	-	
输出阻抗	-			0.5Ω or lower	
容许负载阻抗	-			> 5KΩ	< 500Ω
响应时间	25ms ^{#3}			2ms ^{#4}	
绝对输入范围	±15V	±32mA	-		
平均功能	有 (由 D1062 设定) ^{#5}			-	
温度传感器	PT100 / PT1000 ^{#1}			NI100 / NI1000 ^{#1}	
温度范围	-180°C ~ 800°C			-80°C ~ 170°C	
数字转换范围	-1800 ~ 8000			-800 ~ 1700	
分辨率	20-bit				
反应时间	3 线式：210ms / 2 线式：105ms				
平均功能	有 (由 D1062 设定) ^{#5}				
总和精密度	非线性精度：±1%在整个温度范围内满刻度时 最大误差：±1%在满刻度 20mA 及+10V 时				
数字数据格式	16 位 2 补码 (有效位 12 bits)				
隔离方式	数字及模拟电路间未隔离				
保护	电压输出有短路保护，但须注意长时间短路时，仍有可能造成内部线路损坏， 电流输出可开路。				

#1 : D1115 通道模式设定说明如下 : (默认值为 HFFFF，全部通道关闭)

Bit15~12(D/A)	Bit11~8(A/D-Ch2)	Bit7~4(A/D-Ch1)	Bit3~0(A/D-Ch0)
D/A 输出模式	A/D 输入模式	A/D 输入模式	A/D 输入模式

A/D 输入模式:

数值	0	1	2	3	4	5
模式	PT100(2 线)	NI100(2 线)	PT1000(2 线)	NI1000(2 线)	PT100(3 线)	NI100(3 线)
数值	6	7	8	9	A	B
模式	PT1000(3 线)	NI1000(3 线)	-10V ~ +10V	-5V ~ +5V	+1V ~ +5V	-20mA ~ +20mA
数值	C	D	E	F		
模式	4mA ~ 20mA	保留		关闭		

D/A 输出模式:

数值	0	1	2	3~E	F
模式	-10V ~ +10V	0mA ~ 20mA	4mA ~ 20mA	保留	关闭

例子: 假设 A/D-Ch0 是 PT100(3 线), A/D-Ch1 是 PT100(2 线), A/D-Ch2 是 4mA~20mA 及 D/A 是 4~20mA, 则 D1115 将被设定为 H2C04.

#2 : 分辨率计算

模拟电压输入	模拟电流输入	模拟电压输出	模拟电流输出
$(312.5\mu V = \frac{20V}{64000})$	$(0.625\mu A = \frac{40mA}{64000})$	$(5mV = \frac{20V}{4000})$	$(5\mu A = \frac{20mA}{4000})$

#3 : 当扫描周期大于 25ms 时，以扫描周期为主。

#4 : 当扫描周期大于 2ms 时，以扫描周期为主。


#5 : 当平均次数 D1062 为 1 时，即是读取现在值。设定数值范围 1~15。

#6 : PT 感测计支持的种类有 PT100 和 PT1000，单位为 0.1°C 即 1 表 0.1°C；2 表 0.2°C。

#7 : NI 感测计支持的种类有 NI100 和 NI1000，单位为 0.1°C 即 1 表 0.1°C；2 表 0.2°C。

■ 安装方式

PLC 在安装时，请装配于封闭式的控制箱内，其周围应保持一定的空间(如图所示)，以确保 PLC 散热功能正常。



- 直接锁螺丝方式：请依产品外形尺寸并使用 M4 螺丝。
- DIN 铝轨的安装方法：适用于 35mm 的 DIN 铝轨。在将主机挂上铝轨时，请先将主机（或数字量输入/输出模块）下方的固定塑料片，以一字形起子插入凹槽并向外撑开拉出，再将主机（或数字量输入/输出模块）挂上铝轨，之后将固定塑料片压扣回去即可。欲取下主机时，同样以一字形起子先将固定塑料片撑开，再将主机以往外向上的方式取出即可。该固定机构塑料片为保持型，因此撑开后便不会弹回去。

■ 配线端子

1. 输出/入配线端请使用 12-24AWG 单蕊裸线或多蕊线，端子规格如图所示。PLC 端子螺丝扭力为 3.80 kg-cm (3.30 lb-in)。请使用 60/75°C 铜导线
2. 空端子，请勿配线。输入点信号线与输出点等动力线请勿置于同一线槽内。
3. 锁螺丝及配线时请避免微小的金属导体掉入 PLC 内部。
 - 安装前请贴上防尘贴纸，防止导电异物掉入。
 - 运转前请撕下防尘贴纸，保持良好散热效果。

◆ 电源端

DVP-EX2 的电源输入为交流输入机种时，在使用上应注意下列事项：

1. 交流电源输入电压，范围大小(100 ~ 240VAC)，电源请接于 L · N 两端，如果将 AC110V 或 AC220V 接至+24V 输出端或数字量输入点端，将使 PLC 损坏，请使用者特别注意。
2. 主机及数字量输入/输出模块的交流电源输入请同时作 On 或 Off 的动作。
3. 主机的接地端使用 1.6mm 以上的电线接地。
4. 当停电时间低于 10ms 时，PLC 不受影响继续运转，当停电时间过长或电源电压下降将使 PLC 停止运转，输出全部 Off，当电源恢复正常时，PLC 亦自动恢复运转。(PLC 内部具有停电保持的辅助继电器及寄存器，使用者在程序设计规划时别注意使用。)
5. +24V 电源供应输出端，最大为 0.5A，请勿将其它的外部电源连接至此端子。每个输入点驱动电流必须 5 ~ 7mA，若以 16 点输入计算，大约需 100mA，因此+24V 输出给外部负载不可大于 400mA。

◆ 安全配线回路

由于 PLC 控制许多装置，任一装置的动作可能都会影响其它装置的动作，因此任一装置的故障都可能会造成整个自动控制系统失控，甚至造成危险。所以在电源端输入回路，建议的保护回路配置图如英文版页码 5 之[Figure 4]所示：

① 交流供应电源：100 ~ 240VAC, 50/60Hz	② 断路器
③ 紧急停止：为预防突发状况发生，设置紧急停止按钮，可在状况发生时，切断系统电源。	
④ 电源指示灯	⑤ 交流电源负载
⑥ 电源回路保护用保险丝 (2A)	⑦ DVP PLC 主机本体
⑧ 直流供应电源输出：24VDC，500mA	⑨ 接地阻抗 100Ω 以下
⑩ 直流供应电源：24VDC	⑪ 数字量输入/输出模块 (直流供应)
⑫ 数字量输入/输出模块 (交流供应)	⑬ 模拟量输入/输出模块 (直流供应)
⑭ 直流电源供应：20.4VDC ~ 28.8VDC	

◆ 输入/输出点之配线

输入点的接入信号为直流电源 DC 输入，DC 型式共有两种接法：漏型及源型，其定义如下：(以下为例说明，详细点数配置请见各机种)

• 直流形式 (DC Signal IN) 配线 – 漏型模式

输入点回路等效电路配线图，请参阅英文版页码 6 之[Figure 5]。

• 直流形式 (DC Signal IN) 配线 – 源型模式

输入点回路等效电路配线图，请参阅英文版页码 6 之[Figure 6]。

• 实用的继电器输出回路配线

详细配线图请参阅英文版页码 6 之[Figure 7]。

- | | |
|---|---------------|
| ① 直流电源供给 | ② 紧急停止：使用外部开关 |
| ③ 保险丝：于输出接点的公共端使用容量 5 ~ 10A 的保险丝，保护输出点回路。 | |
| ④ 突波吸收二极管：可增加接点寿命。 | |
| 1. DC 负载电源的二极管抑制：功率较小时使用 (请参阅英文版页码 6 之[Figure 8]) | |
| 2. DC 负载电源的二极管+Zener 抑制：大功率及 On/Off 频繁时使用 (请参阅英文版页码 6 之[Figure 9]) | |
| ⑤ 白炽灯 (电阻性负载) | ⑥ 交流电源供给 |
| ⑦ 互斥输出：例如，将 Y4 与 Y5 用于控制对应马达的正转及反转，使外部电路形成互锁，配合 PLC 内部程序，确保任何异常突发状况发生时，均有安全的保护措施。 | |
| ⑧ 指示灯：氖灯 | |
| ⑨ 突波吸收器：可减少交流负载上的干扰 (请参阅英文版页码 6 之[Figure 10]) | |

• 实用的晶体管输出回路配线

详细配线图请参阅英文版页码 7 之[Figure 11]。

- | | | |
|--|--------|--------------|
| ① 直流供应电源 | ② 紧急停止 | ③ 电路回路保护用保险丝 |
| ④ 因晶体管模块输出均为开集电极输出 (Open Collector)，若 Y0/Y1 设定为脉冲式输出，为确保晶体管模块能够动作正常，其输出提升电阻，必须维持输出电流大于 0.1A。 | | |
| 1. 二极管抑制：功率较小时使用 (请参阅英文版页码 7 之[Figure 12]) | | |
| 2. 二极管+Zener 抑制：大功率及 On/Off 频繁时使用 (请参阅英文版页码 7 之[Figure 13]) | | |
| ⑤ 互斥输出：例如，将 Y3 与 Y4 用于控制对应马达的正转及反转，使外部电路形成互锁，配合 PLC 内部程序，确保任何异常突发状况发生时，均有安全的保护措施。 | | |

◆ A/D、D/A 与温度感测计之外部配线

详细接线图请参阅英文版页码 7-8 之[Figure 14-17]。

- | | | | |
|-----------------------------------|-------|--------|-------------|
| ① 电压输入 | ② 隔离线 | ③ 电流输入 | ④ 接至电源模組之端子 |
| ⑤ 第三种接地接地阻抗(100Ω以下) ⑥ 电压输出 ⑦ 电流输出 | | | |

注：如果连接电流信号时，V+ 及 I+ 端子请务必短路。

◆ RS-485 建议接线

详细接线图请参阅英文版页码 8 的[Figure 18]。

- | | | | |
|------|------|--------|-------|
| ① 主站 | ② 从站 | ③ 终端电阻 | ④ 屏蔽线 |
|------|------|--------|-------|

附注：1. 终端电阻建议连接于主站及最后一台从站上，且其阻值建议为 120Ω。

2. 为确保联机质量，线材建议使用具有双层屏蔽线的通讯双绞线(20AWG)。

3. 当两个系统内部地准位存在压降，可透过连接 SG (Signal Ground) 让地准位等电位，使通讯更加稳定。

■ 输入/输出端子排配置

请参阅英文版页码 8 之端子配置，在此语言版本省略说明。

■ 万年历的精度 (秒 / 月)

温度 (°C/°F)	0/32	25/77	55/131
最大误差 (秒)	-117	52	-132

万年历停电保持时间：一周 (仅支持版本 V2.00 以上)